



recipes
inside!

DAPP155

TURBO POP **POPCORN MAKER**

Instruction Manual | Recipe Guide





TURBO POP POPCORN MAKER



Important Safeguards.....	4-7
Parts & Features.....	8
Tips & Tricks	9
Using Your Popcorn Maker	10-12
Cleaning & Maintenance	13
Recipes.....	15-29
Customer Support	30
Warranty.....	31

the dash team!

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

When using electrical appliances, basic safety precautions should always be followed, including:

- Read all instructions before use.
- Remove all bags and packaging from appliance before use.
- Never leave appliance unattended when in use.
- Make sure the appliance is cleaned thoroughly before using.
- Do not use appliance for other than intended use. For household use only. Do not use outdoors.
- Only use the appliance on a stable, dry surface.
- ATTENTION: This appliance cannot be used with an external timer or a separate remote control.
- Do not place appliance on or near a hot gas burner, hot electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- This appliance can be used by persons with reduced physical, sensory, or mental capabilities or lack of experience or knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- This appliance is not a toy. Do not let children use this appliance. Close supervision is necessary when any kitchen appliance is used by or near children.
- The Popcorn Maker will not shut off automatically. To avoid overheating, please add popcorn kernels before operating. Do not operate the appliance without popcorn kernels.
- Do not touch hot surfaces. Use oven gloves when handling hot surfaces.
- To prevent the risk of fire, electric shock, or personal injury, do not put cord, plug, or appliance in or near water or other liquids. The Popcorn Maker is NOT dishwasher safe.
- Do not let the cord touch hot surfaces or hang over the edge of tables or counters.
- Refrain from using attachments that are not recommended by the appliance manufacturer, as this may result in fire, electric shock, or personal injury.

- After turning the power on, do not attempt to disassemble the Popcorn Maker. Do not put spoons or other utensils into the popcorn maker.
- Allow the appliance to rest for at least 10 minutes between popping cycles.
- Do not exceed a 5-minute maximum continuous usage time.
- Unplug the appliance and allow to cool prior to assembly/disassembly, moving, cleaning, storage, and when not in use. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
- Do not submerge the base or any electric parts in liquid.
- Do not operate this appliance with a damaged cord, damaged plug, after the appliance malfunctions, is dropped, or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- For maintenance other than cleaning, please contact StoreBound directly at 1-800-898-6970 from 9AM - 9PM EST Monday - Friday or by email at support@bydash.com.
- StoreBound shall not accept liability for damages caused by improper use of the appliance.
- Improper use of the appliance can result in property damage or even in personal injury.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not completely fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- A short power supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. An extension cord may be used if care is exercised in its use. If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be a grounding 3-wire cord. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

GARANTIES IMPORTANTES: VEUILLEZ LIRE ET CONSERVER CE MODE D'EMPLOI ET D'ENTRETIEN

Lors de l'utilisation d'appareils électriques, il faut toujours respecter les précautions de sécurité de base, notamment:

- Lisez toutes les instructions avant utilisation.
- Retirez tout sac ou emballage de l'appareil avant utilisation.
- Ne laissez jamais l'appareil sans surveillance pendant son utilisation.
- Assurez-vous que l'appareil est minutieusement nettoyé avant utilisation.
- N'utilisez pas l'appareil en dehors de son utilisation prévue. Pour usage ménager uniquement. Ne l'utilisez pas à l'extérieur.
- N'utilisez l'appareil que sur une surface stable et sèche.
- ATTENTION : Cet appareil ne peut pas être utilisé avec une minuterie externe ou un télécommande.
- Ne placez pas l'appareil sur ou à proximité d'un brûleur à gaz ou électrique, ou d'un four chaud.
- Une extrême prudence doit être utilisée lors du déplacement d'un appareil contenant de l'huile chaude ou d'autres liquides chauds.
- Cet appareil peut être utilisé par des personnes dont les capacités physiques, sensorielles ou mentales sont réduites ou qui manquent d'expérience et de connaissances, à condition qu'elles aient reçu une supervision ou des instructions concernant l'utilisation de l'appareil en

- toute sécurité et qu'elles comprennent les risques encourus.
- Cet appareil n'est pas un jouet. Ne laissez pas d'enfants utiliser cet appareil. Une étroite surveillance est nécessaire lorsqu'un appareil est utilisé par ou à proximité d'enfants.
- Le Popcorn Popper ne s'éteindra pas automatiquement. Afin d'éviter une surchauffe, veuillez ajouter les grains de maïs avant le fonctionnement. N'utilisez pas l'appareil sans grain de maïs.
- Ne touchez pas les surfaces chaudes. Utilisez des gants de cuisine lorsque vous manipulez des surfaces chaudes.
- Afin d'éviter les risques de feux, d'électrocution, ou de dommages corporels, ne mettez pas le cordon, la prise ou l'appareil dans ou à proximité de l'eau ou d'autres liquides. La machine à pop-corn n'est PAS lavable en machine.
- Ne laissez pas le cordon toucher des surfaces chaudes ou pendre au niveau des bords de tables ou de comptoirs.
- Evitez d'utiliser des accessoires qui ne sont pas recommandés par le fabricant de l'appareil, car ils pourraient entraîner un feu, une électrocution ou un dommage corporel.
- Après avoir mis l'appareil sous tension,

n'essayez pas de démonter la machine à pop-corn. Ne mettez pas de cuillères ou d'autres ustensiles dans la machine à pop-corn.

- Laissez l'appareil reposer pendant au moins 10 minutes entre les cycles d'éclatement.
- Ne dépassez pas les 5 minutes de temps maximal d'utilisation continue.
- Débrancher l'appareil et laissez refroidir avant montage/démontage, déplacement, nettoyage ou entreposage. Pour débrancher, saisissez la fiche et retirez-la de la prise. Ne tirez jamais sur le cordon d'alimentation.
- Ne plongez pas la base ni aucune pièce électrique dans du liquide.
- N'utilisez pas cet appareil avec un cordon endommagé, une prise endommagée, ou si l'appareil est défaillant, s'il est tombé ou endommagé de quelque façon. Pour toute inspection, réparation ou ajustement, ramenez l'appareil au détaillant agréé le plus proche.
- Pur toute question liée à l'entretien autre que le nettoyage, veuillez contacter StoreBound directement au 1-800-898-6970 de 9h à 21h HNE du lundi au vendredi, ou par courriel à support@bydash.com.
- StoreBound n'est nullement responsable des dommages causés par

GARANTIES IMPORTANTES: VEUILLEZ LIRE ET CONSERVER CE MODE D'EMPLOI ET D'ENTRETIEN

une mauvaise utilisation de l'appareil.

- Une mauvaise utilisation de l'appareil peut entraîner des dommages matériels ou même des blessures corporelles.
- Cet appareil a une fiche polarisée (un des brins est plus large que l'autre). Afin de réduire le risque d'électrocution, cette fiche ne s'insère dans la prise électrique que d'une façon. Si la fiche ne s'insère pas complètement dans la prise, inversez la fiche. Si elle ne s'insère toujours pas, contactez un électricien qualifié. N'essayez pas de modifier la fiche de quelque façon que ce soit.
- Un cordon d'alimentation court doit être fourni afin d'éviter le risque d'emmûlement ou de trébuchement lié aux cordons plus longs. Une rallonge peut être utilisée à condition de faire attention. Si une rallonge est utilisée, la puissance électrique indiquée sur la rallonge doit être au moins aussi grande que celle de l'appareil. Si l'appareil est connecté à la terre, la rallonge doit être un cordon tripolaire avec prise de terre. La rallonge doit être disposée de manière à ne pas reposer sur le comptoir ou sur la table où elle peut être tirée par un enfant ou source de trébuchement involontaire.

PARTS & FEATURES



TIPS & TRICKS

- After the first popping cycle, wait for approximately 10 to 12 minutes before using the Popcorn Maker again.
- Place a small amount of butter in the Measuring Cup during the popping process and allow the butter to melt.
- Never put the butter in the Aluminum Heating Chamber.
- If the butter isn't entirely melted after the duration of popping, leave the unit on for a few more minutes to let the hot air melt the butter.
- DO NOT** exceed one Measuring Cup of kernels in one cycle as this will overfill the machine.
- DO NOT** use less than the minimum amount of kernels in one cycle (1/2 Measuring Cup), as this will result in burnt popcorn.
- For best results use fresh kernels, as old kernels may dry out and be unable to pop during a cycle. If your kernels are dry, try adding them to a 12 oz sealable jar with 1 tsp of water, then seal, shake, and let sit overnight.

KERNELS	POPPED CORN
1 Measuring Cup	8 Cups
½ Measuring Cup	4 Cups

USING YOUR POPCORN MAKER

NOTE: Wash the Popcorn Maker and parts with a damp cloth prior to use.

Dry before using.

WARNING: DO NOT put butter into the Aluminum Heating Chamber.

CAUTION: Aluminum Heating Chamber will get very hot. NEVER insert fingers into the chamber while operating, or after use.



1. Assemble the Popcorn Maker by placing the Top Cover onto the Body until it clicks into place, then set the Popcorn Maker on a flat and stable surface.



2. Using the Measuring Cup, add one Measuring Cup of kernels into the Aluminum Heating Chamber through the Popcorn Inlet. Note: one cup is enough, any more will overfill the Popcorn Maker and will keep the appliance from functioning.



3. Put the Measuring Cup back on the Top Cover after each use. You have the option to place a tablespoon of butter into the Measuring Cup as it will melt over the duration of the popping period.

USING YOUR POPCORN MAKER

4. Place a large bowl under the Spout so that the edge of the bowl is touching the Body of the Popcorn Maker. Be sure that there is nothing blocking the Spout so the popcorn can eject properly.



5. Switch the unit on by pressing the Power Button to "On."



6. After a few minutes the Popcorn Maker will start making popcorn. It will continue to operate until all the kernels are popped. The popping cycle will last about 3 minutes.

CAUTION: the Popcorn Maker will heat up, refrain from touching the Top Cover or Measuring Cup as they will be very hot.

USING YOUR POPCORN MAKER



7. Once popping is complete, turn off the unit by pressing the Power Button to "Off," then unplug the unit.

8. Once the Popcorn Maker has cooled, carefully remove the butter-filled Measuring Cup and pour the melted butter onto the freshly popped popcorn. Mix the popcorn well to distribute the butter evenly.



CLEANING & MAINTENANCE

- Unplug the unit before cleaning and/or disassembling.
- Make sure the Popcorn Maker has cooled down completely before disassembling and cleaning.
- Clean the Body of the Popcorn Maker with a damp cloth. Never use abrasive products as they could damage the Popcorn Maker.
- The Top Cover and the Measuring Cup can be cleaned in warm soapy water.
- Store unplugged Popcorn Maker in a safe, dry place, and out of reach from children.



RECIPE GUIDE



Follow us!

[@bydash](#) | recipes, videos, & inspiration

[@unprocessyourfood](#) | veg & vegan-friendly meals



HOMEMADE UNPROCESSED POP



Ingredients:

1 Measuring Cup kernels

4 tbsp coconut oil

dash of salt

Directions:

1. Add 1 Measuring Cup of kernels into the Aluminum Heating Chamber through the Popcorn Inlet. Replace Measuring Cup on the Top Cover, then add 2 tbsp of solidified coconut oil to the Measuring Cup.
2. Place a large bowl directly next to the Body and under the Spout, turn on the appliance, and wait until your popcorn is finished popping. Take the Measuring Cup of melted coconut oil and pour it over the popcorn.
3. Option to sprinkle with a dash of salt.





MOVIE THEATER POPCORN

Ingredients:

1 Measuring Cup kernels

4 tbsp butter

dash of salt

Directions:

1. Add 1 Measuring Cup of kernels into the Aluminum Heating Chamber through the Popcorn Inlet. Replace Measuring Cup on the Top Cover, then add 2 tbsp of butter to the Cup.
2. Place a large bowl directly next to the Body and under the Spout, turn on the appliance, and wait until your popcorn is finished popping. Take the Measuring Cup of melted butter and pour it over the popcorn. Option to sprinkle with a dash of salt.





CASHEW Caramel CORN

Ingredients:

1 Measuring Cup kernels	½ tsp vanilla
½ cup coconut sugar	2 cups cashews
¼ tsp baking soda	¾ cups butter
1 ½ cups light brown sugar, packed	

Directions:

1. Add 1 Measuring Cup of kernels to the Aluminum Heating Chamber through the Popcorn Inlet. Replace Measuring Cup on the Top Cover.
2. Place a large bowl directly next to the Body and under the Spout, turn on the appliance, and wait until your popcorn is finished popping.
3. Make the caramel coating by combining the sugars and butter in a small saucepan over medium heat. Stir continuously until caramel comes to a boil and cook for 5 minutes over medium heat. Turn off the stove and add vanilla and baking soda.
4. Add the popcorn, cashews, and caramel to a large mixing bowl and mix well. Spread onto a cookie sheet lined with parchment and bake at 300°F for 15-20 minutes, turning once.



SPICY JALAPEÑO POPCORN

Ingredients:

1 Measuring Cup kernels
4 tbsp coconut oil
1 tsp jalapeño flakes

Directions:

1. Add 1 Measuring Cup of kernels into the Aluminum Heating Chamber through the Popcorn Inlet. Replace Measuring Cup on the Top Cover, then add 2 tbsp of solidified coconut oil to the Cup.
2. Place a large bowl directly next to the Body and under the Spout, turn on the appliance, and wait until your popcorn is finished popping. Take the Measuring Cup of melted coconut oil and pour it over the popcorn. Sprinkle jalapeño flakes over the popcorn and mix well.



CHEESY CHEDDAR POP

Ingredients:

1 Measuring Cup kernels

4 tbsp butter

1 tsp mustard powder

1 cup cheese powder

1 tsp red chili powder

Directions:

1. Add 1 Measuring Cup of kernels into the Aluminum Heating Chamber through the Popcorn Inlet. Replace Measuring Cup on the Top Cover, then add 2 tbsp of butter to the Measuring Cup.
2. Place a large bowl directly next to the Body and under the Spout, turn on the appliance, and wait until your popcorn is finished popping.
3. Take the Measuring Cup of melted butter and pour it over the popcorn. Add a cup of cheese powder, 1 tsp of mustard powder, and 1 tsp of red chili powder. Toss the popcorn until all ingredients are evenly distributed.





SPICY RANCH POPCORN

Ingredients:

1 Measuring Cup kernels
3 tbsp butter, melted
3 tsp garlic powder
3 tsp dried parsley
3 tsp cayenne pepper
3 tsp dried chives

Directions:

1. Add 1 Measuring Cup of kernels into the Aluminum Heating Chamber through the Popcorn Inlet. Replace Measuring Cup on the Top Cover.
2. Place a large bowl directly next to the Body and under the Spout, turn on the appliance, and wait until your popcorn is finished popping.
3. In a small dish, combine the melted butter and spices. Transfer the popcorn to a large bowl. Slowly pour the spice mixture over popcorn while stirring. Continue stirring until the kernels are fully coated.





EASY CARAMEL CORN

Ingredients:

1 Measuring Cup kernels

½ cup butter

1 cup brown sugar

¼ cup milk

1 tsp vanilla extract

Directions:

1. Add 1 Measuring Cup of kernels into the Aluminum Heating Chamber through the Popcorn Inlet. Replace Measuring Cup on the Top Cover. Place a large bowl directly next to the Body and under the Spout, turn on the appliance, and wait until your popcorn is finished popping.
2. For the Caramel:
Bring the brown sugar, butter, and milk to a gentle boil on the stove and cook until thickened, about 1 to 2 minutes. Remove from heat; add vanilla extract.
3. Drizzle the caramel mixture over the popcorn. Use a spoon to gently fold the popcorn with the mixture until the kernels are all covered. Pour the popcorn out onto a cookie sheet covered with aluminum foil, or a silpat liner. Allow the Easy Homemade Caramel Corn to cool prior to serving.





S'MORES POPCORN

Ingredients:

1 Measuring Cup kernels
2 cups of golden grahams
 $\frac{1}{2}$ cup mini marshmallows
 $\frac{1}{2}$ cup chocolate wafers

Directions:


1. Add 1 Measuring Cup of kernels into the Aluminum Heating Chamber through the Popcorn Inlet. Replace Measuring Cup on the Top Cover.
2. Place a large bowl directly next to the Body and under the Spout, turn on the appliance, and wait until your popcorn is finished popping.
3. Combine popcorn, marshmallows, and golden grahams in a bowl and mix together. Spread popcorn on a baking sheet.
4. Melt the chocolate in the microwave, 15 seconds at a time, stirring in between cycles so it doesn't burn.
5. Drizzle chocolate over the popcorn mixture and allow to harden (about 10 minutes).
6. Serve and enjoy!



FEEL GOOD GUARANTEE™

Dash values quality and workmanship and stands behind this product with our Feel Good Guarantee™. To learn more about our commitment to quality, visit bydash.com/feelgood.

Our customer support teams in the US and Canada are at your service Monday - Friday during the times below. Contact us at **1 (800) 898-6970** or support@bydash.com

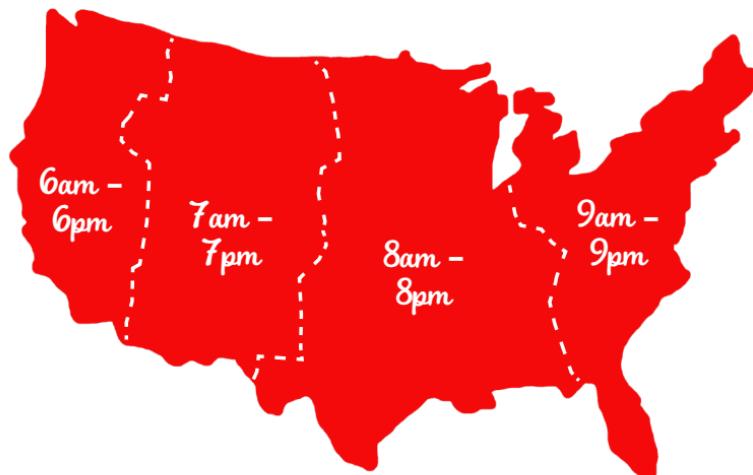

Hey **Hawaii!** You can reach our customer service team from **3AM to 3PM**.
And also, **Alaska**, feel free to reach out from **5AM to 5PM**.

STOREBOUND, LLC - 1 YEAR LIMITED WARRANTY

Your StoreBound product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, StoreBound, LLC will repair or replace the defective part. To process a warranty claim, contact Customer Support at 1-800-898-6970 for further assistance and instruction. A Customer Support agent will assist you by troubleshooting minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating the date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. We are unable to ship returns to a PO box. StoreBound will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

Send all inquiries to support@bydash.com.
There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. STOREBOUND SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

REPAIRS

DANGER! Risk of electric shock! The Dash Turbo Pop Popcorn Maker is an electrical appliance. Do not attempt to repair the appliance yourself under any circumstances. Contact Customer Support regarding repairs to the appliance.

TECHNICAL SPECIFICATIONS

Voltage 120V ~ 60Hz
Power Rating 1100W
Stock#: DAPP155_20201902_V6



1-800-898-6970 | [@bydash](https://bydash.com) | bydash.com