



*recipes
inside!*



DECT100

EVERYDAY **ELECTRIC COOKTOP**

Instruction Manual | Recipe Guide





EVERYDAY ELECTRIC COOKTOP



Important Safeguards.....	4-9
Parts & Features.....	10
Using Your Everyday Electric Cooktop.....	12-14
Cleaning & Maintenance	17
Customer Support	18
Warranty.....	19

the dash team!

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

When using electrical appliances, basic safety precautions should be followed, including:

- Read all instructions.
- Remove all bags and packaging from appliance before use.
- Never leave appliance unattended when in use.
- Make sure the appliance is cleaned thoroughly before using.
- Do not use appliance for other than its intended use. For household use only. Do not use outdoors.
- Do not operate this appliance with a damaged cord, damaged plug, after the appliance malfunctions, is dropped, or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- For maintenance other than cleaning, please contact StoreBound directly at 1-800-898-6970 from 9AM-9PM EST Monday-Friday or by email at support@bydash.com
- Do not place appliance on or near a hot gas burner, hot electric burner, or in a heated oven.
- Do not touch any moving parts.
- Refrain from using attachments that are not recommended by the appliance manufacturer, as this may result in fire, electric shock, or personal injury.
- Do not let the cord touch hot surfaces, or hang over the edges of tables or counters.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have been given supervision or instruction concerning use of

- the appliance in a safe way and understand the hazards involved.
- The appliance is not a toy. Do not let children use this appliance. Close supervision is necessary when any kitchen appliance is used by or near children.
- Always be sure to unplug the appliance from the outlet prior to moving, cleaning, and storage, and when not in use.
- StoreBound shall not accept liability for damages caused by improper use of the appliance.
- Improper use of the appliance can result in property damage or even in personal injury.
- Ensure that there is enough space surrounding the appliance while in use, as the appliance becomes very hot.
- Use appliance only on heat-safe surfaces.
- Do not submerge appliance in water or any other liquids. Do not operate the appliance with wet or moist hands. Should the appliance become wet or moist, turn the appliance off and unplug immediately.
- **WARNING: CHOKING HAZARD:** The Silicone Feet under the Everyday Electric Cooktop may become dislodged and fall off over time. Be careful when moving the Cooktop as these small silicone pieces can pose a choking hazard if swallowed. Do not allow children to play with the Cooktop.
- Turn the appliance OFF, then unplug from the outlet when not in use, before assembling and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not completely fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- A short power supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. An extension cord may be used

if care is exercised in its use. If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

GARANTIES IMPORTANTES: VEUILLEZ LIRE ET CONSERVER CE MODE D'EMPLOI ET D'ENTRETIEN

L'utilisation d'appareils électriques nécessite de prendre des mesures de sécurité de base, y compris:

- Lisez toutes les instructions.
- Retirez tous les sacs et emballages de l'appareil avant de l'utiliser.
- Ne laissez jamais l'appareil sans surveillance lorsqu'il est en marche.
- Assurez-vous de nettoyer l'appareil soigneusement avant de l'utiliser.
- N'utilisez pas l'appareil à des fins autres que celles prévues. Pour un usage domestique uniquement. Ne l'utilisez pas à l'extérieur.
- N'utilisez pas l'appareil si le câble ou la fiche sont endommagés, après un dysfonctionnement ou une chute ou encore un dommage quelconque de l'appareil. Retournez l'appareil à l'établissement de service agréé le plus proche pour examen, réparation ou réglage.
- Pour l'entretien autre que le nettoyage, veuillez contacter Storebound directement au 1-800-898-6970 de 9h-21h EST lundi au vendredi ou par courriel à support@bydash.com
- Évitez de placer l'appareil sur ou près d'un chauffage électrique ou au gaz chaud, ou dans un four chauffé.
- Ne touchez pas les pièces en mouvement.
- Utilisez uniquement des accessoires recommandés par le fabricant de l'appareil pour éviter tout risque d'incendie, de choc électrique ou de blessures.
- Évitez de placer l'appareil sur ou près d'un chauffage électrique ou au gaz chaud, ou dans un four chauffé.
- Ne laissez pas le cordon toucher

des surfaces chaudes ou pendre de la table ou du comptoir.

- Cet appareil peut être utilisé par des personnes dont les capacités physiques, sensorielles ou mentales sont réduites ou qui manquent d'expérience et de connaissances, à condition qu'elles aient reçu une supervision ou des instructions concernant l'utilisation de l'appareil en toute sécurité et qu'elles comprennent les risques encourus.
- L'appareil n'est pas un jouet. Ne laissez pas d'enfants utiliser cet appareil. Une étroite surveillance est nécessaire lorsqu'un appareil est utilisé par ou à proximité d'enfants.
- Veillez à toujours débrancher l'appareil de la prise avant de le déplacer, de le nettoyer, de le ranger et lorsqu'il n'est pas utilisé.
- StoreBound ne peut être tenu responsable de tout dommage résultant d'un usage abusif de l'appareil.
- Une utilisation inappropriée de l'appareil peut endommager l'appareil ou même causer une blessure.

- Veillez à ce qu'il y ait suffisamment d'espace autour de l'appareil lorsqu'il est utilisé, car il devient très chaud.
- N'utilisez l'appareil que sur des surfaces résistantes à la chaleur.
- Ne plongez jamais l'appareil dans de l'eau ou tout autre liquide. Ne faites pas fonctionner l'appareil avec des mains mouillées ou humides. Si l'appareil est mouillé ou humide, éteignez-le et débranchez-le immédiatement.
- **AVERTISSEMENT: RISQUE D'ÉTOUFFEMENT:** Les Pieds en silicone situés sous la Plaque de cuisson électrique peuvent se déloger et tomber avec le temps. Faites attention lorsque vous déplacez la Plaque de cuisson car ces petits morceaux de silicone peuvent présenter un risque d'étouffement en cas d'ingestion. Ne laissez pas les enfants jouer avec la Plaque de cuisson.
- Éteignez l'appareil («OFF»), puis débranchez-le de la prise lorsqu'il n'est pas utilisé, avant de l'assembler et avant de le nettoyer. Pour débrancher, saisissez la fiche et tirez-

la de la prise. Ne tirez jamais sur le câble d'alimentation.

- Cet appareil est équipé d'une fiche polarisée (une lame est plus large que l'autre). Pour réduire le risque de décharge électrique, cette fiche est conçue pour ne pouvoir s'insérer dans une prise polarisée que dans un sens. Si la fiche n'entre pas complètement dans la prise, inversez-la. Si elle n'entre toujours pas, contactez un électricien qualifié. N'essayez pas d'altérer la fiche de quelque façon que ce soit.

- Un cordon d'alimentation court est fourni pour réduire les risques d'enchevêtrement ou de trébuchement. Une rallonge peut être utilisée avec prudence. En cas d'utilisation d'une rallonge, la puissance électrique indiquée sur la rallonge doit être au moins aussi grande que la puissance électrique de l'appareil. La rallonge doit être placée de telle sorte qu'elle ne soit pas étalée sur le comptoir ou la table, où elle pourrait être tirée par un enfant ou causer un trébuchement.

GARANTIES IMPORTANTES:
VEUILLEZ LIRE ET CONSERVER CE
MODE D'EMPLOI ET D'ENTRETIEN

PARTS & FEATURES

Pyroceram Glass Burner

Indicator Light

Silicone Non-Slip Feet

Temperature Dial

Cord Storage



USING YOUR EVERYDAY ELECTRIC COOKTOP



- 1 Ensure the Temperature dial is in the Off Position. Plug your Everyday Electric Cooktop into your power source. Make sure the Cooktop is away from other appliances and heating sources, as the Burner will become very hot while in use (photo A).
- 2 Use the Temperature Dial to select your desired level of heat. Use the chart on Page 14 to see which setting is best for your needs (photo B).

USING YOUR EVERYDAY ELECTRIC COOKTOP



- 3 Place your pan or pot on the Cooktop. The indicator light will cycle on while the Cooktop is heating, and off when it has reached your desired temperature. This is normal and indicates the correct temperature is being maintained (photo C).
- 4 Once finished, set the Temperature Dial to the OFF position and unplug the Cooktop (photo D).

WARNING: The Cooktop's Pyroceram Glass Burner retains heat very well, so please allow the Burner to cool down for 1 HOUR before moving or storing the Cooktop. Keep out of reach of children while it is cooling

USING YOUR EVERYDAY ELECTRIC COOKTOP

SETTING	SUGGESTED USE
WARM	Serving & holding foods at a (low) warm temperature
LOW	Gently warming & holding foods at a warm temperature
MEDIUM	Simmering, cooking grains, eggs, toasting sandwiches
HI	Cooking meats, sautéing, frying
SEAR	Boiling water, searing meats, steaming



CLEANING & MAINTENANCE



The Everyday Electric Cooktop's max run time is 1 hour, after which you should let your Cooktop fully cool down before using again.

Once you're finished cooking, allow the Cooktop's Burner to cool down for 1 HOUR before moving or storing, as the Burner will still be very hot. Keep out of reach of children while it is cooling.

There may be an odor when using your Cooktop for the first time: this is normal and will dissipate after initial use.

To clean your Cooktop, make sure it is unplugged and wipe clean with a damp sponge or cloth. Wipe completely dry before operating again.


The Everyday Electric Cooktop has a removable knob for easy cleaning.

Do NOT immerse your Cooktop in water or any other liquids.

**FEEL GOOD
GUARANTEE™**

Dash values quality and workmanship and stands behind this product with our Feel Good Guarantee™. To learn more about our commitment to quality, visit bydash.com/feelgood.

Our customer support teams in the US and Canada are at your service Monday - Friday during the times below.
Contact us at **1 (800) 898-6970** or support@bydash.com

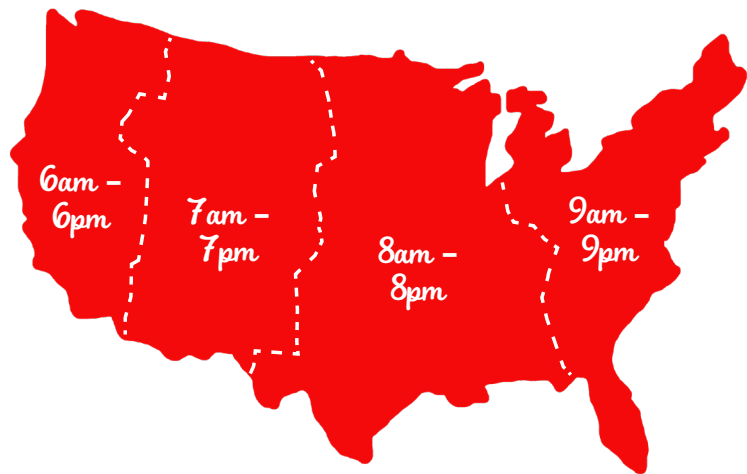

Hey **Hawaii!** You can reach our customer service team from **3AM to 3PM**.
And also, **Alaska**, feel free to reach out from **5AM to 5PM**.

STOREBOUND, LLC - 1 YEAR LIMITED WARRANTY

Your StoreBound product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, StoreBound, LLC will repair or replace the defective part. To process a warranty claim, contact Customer Support at 1-800-898-6970 for further assistance and instruction. A Customer Support agent will assist you by troubleshooting minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating the date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. We are unable to ship returns to a PO box. StoreBound will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

Send all inquiries to support@bydash.com.

There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. STOREBOUND SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

REPAIRS

DANGER! Risk of electric shock! The Dash Everyday Electric Cooktop is an electrical appliance. Do not attempt to repair the appliance yourself under any circumstances. Contact Customer Support regarding repairs to the appliance.

TECHNICAL SPECIFICATIONS

Voltage 120V ~ 60Hz
Power Rating 1200W
Stock#: DECT100_20220613_V2

**COMPATIBLE
WITH ALL
COOKWARE!**



1-800-898-6970 | @bydash | bydash.com