



#DMAF300UP1

DASH AIR FRYER **ACCESSORY BUNDLE**

Instruction Manual | Recipe Guide





DASH AIR FRYER ACCESSORY BUNDLE

Parts & Features	4
Using the Double Layer Rack	6-7
Using the Pizza Pan	8
Using the Deep Dish Baking Pan	9
Cleaning & Maintenance	10
Recipes	13
Customer Support	14
Warranty	15



the dash team!

PARTS & FEATURES



Deep Dish Baking Pan



Pizza Pan



Air Fryer Double Layer Rack



Skewers

USING YOUR AIR FRYER DOUBLE LAYER RACK

Remove packaging and wash before first use.

In order to avoid ingredients sticking to the stainless steel material, we recommend using a small amount of cooking spray, or olive oil, on the Rack and Skewers.



- 1** When using the Double Layer Rack to cook with Skewers, first remove the Crisper Drawer.



- 2** Then place the Double Layer Rack inside the Crisper Drawer without the Skewers.


USING YOUR AIR FRYER DOUBLE LAYER RACK



- 3** Take your Skewers and spear your ingredients. Hook each Skewer on the top layer of the Rack, with the pointy end of each Skewer resting in the opposing notches.



- 4** Place the Crisper Drawer back in the Air Fryer. To create additional cooking space in your Air Fryer, use the Double Layer Rack without Skewers. Use the space below and above the Rack to cook ingredients.

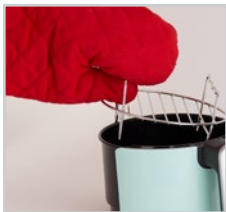

- 5** When removing the Rack from the Crisper Drawer, use oven mitt or tongs.

Caution: Be careful when removing the Rack as the Crisper Drawer and Double Layer Rack could still be hot from the crisping cycle.

USING YOUR AIR FRYER PIZZA PAN

Remove packaging and wash before first use.

In order to avoid ingredients sticking to the pan, we recommend using a small amount of cooking spray, or olive oil, on the Pizza Pan.



- 1** When using the Pizza Pan to cook, place your ingredients or meal in the Pizza Pan. Then place the Pizza Pan in the Crisper Drawer.



- 2** Place the Crisper Drawer back in the Air Fryer.



- 3** When removing the Pizza Pan from the Crisper Basket, always use oven mitts or tongs.
Caution: Be careful when removing the Pizza Pan as the Basket & Pan could still be hot from the crisping cycle.

USING YOUR AIR FRYER DEEP DISH BAKING PAN

Remove packaging and wash before first use.

In order to avoid ingredients sticking to the pan, we recommend using a small amount of cooking spray, or olive oil, on the Deep Dish Baking Pan.



- 1** When using the Deep Dish Baking Pan to cook, place your ingredients in the Deep Dish Baking Pan. Then place your Deep Dish Baking Pan inside the Crisper Drawer.



- 2** Place the Crisper Drawer back in the Air Fryer.



- 3** When removing the Deep Dish Baking Pan from the Crisper Drawer, always use oven mitts or tongs.
Caution: Be careful when removing the Deep Dish Baking Pan as the accessory could still be hot from the cycle.

CLEANING & MAINTENANCE

The Air Fryer Accessories are dishwasher safe.

Do not place the Accessories in an oven, microwave, or other heated kitchen appliance.





AIR FRYER ACCESSORIES

RECIPE GUIDE

Scan this to see
our recipes and
start cooking!




CUSTOMER SUPPORT

**FEEL GOOD
GUARANTEE™**

Dash values quality and workmanship and stands behind this product with our Feel Good Guarantee™. To learn more about our commitment to quality, visit bydash.com/feelgood.

Our US based customer support team is your service Monday-Friday during the times below.

Reach us at **1 (800) 898-6970** or **support@bydash.com**

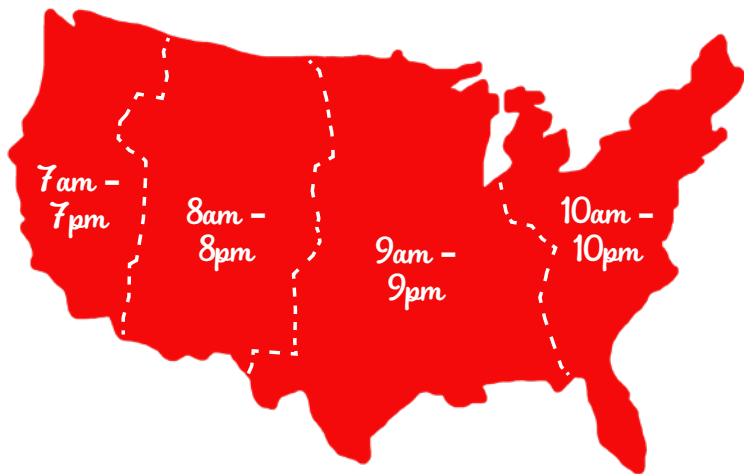

Hey **Hawaii!** You can reach our customer service team from **5AM to 5PM**.

And also, **Alaska**, feel free to reach out from **6AM - 6PM**.

STOREBOUND, LLC - 1 YEAR LIMITED WARRANTY

Your StoreBound product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, StoreBound, LLC will repair or replace the defective part. To process a warranty claim, contact Customer Support at 1-800-898-6970 for further assistance and instruction. A Customer Support agent will assist you by troubleshooting minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating the date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. We are unable to ship returns to a PO box. StoreBound will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

Send all inquiries to support@storebound.com.

There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. STOREBOUND SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Refurbished items or items not purchased through an authorized retailer are not eligible for warranty claims.

REPAIRS

Do not attempt to repair the appliance yourself under any circumstances.

Contact Customer Support regarding repairs to the appliance.

TECHNICAL SPECIFICATIONS

Stock#: DMAF300UP1_20200512_V2



1-800-898-6970 | @unprocessyourfood | bydash.com