



recipes
inside!

A handwritten-style red text "recipes inside!" with a red arrow pointing from the text towards the open waffle maker.

#DMMWH600

MULTI MINI HEART WAFFLE MAKER

Instruction Manual | Recipe Guide





the dash team!

MULTI MINI HEART WAFFLE MAKER

Important Safeguards.....	4-7
Parts & Features.....	8
Using Your Multi Mini Heart Waffle Make.....	9-12
Cleaning & Maintenance.....	13
Troubleshooting.....	14-15
Recipes.....	17-25
Customer Support.....	26
Warranty.....	27



IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

When using electrical appliances, basic safety precautions should always be followed, including:

- Read all instructions.
- Remove all bags and packaging from appliance before use.
- Never leave appliance unattended when in use.
- Make sure the appliance is cleaned thoroughly before using.
- Do not use appliance for other than intended use. For household use only. Do not use outdoors.
- Warning: Hot surfaces! Never touch the Cooking Surface or Cover while appliance is in use. Always lift and lower the Cover by the Cover Handle.
- DO NOT lift the Cover so that your arm is over the Cooking Surface as it is hot and may cause injury. Lift from the side.
- To prevent the risk of fire, electric shock, or personal injury, do not put cord, plug, or appliance in or near water or other liquids. The Multi Mini Heart Waffle Maker is NOT dishwasher safe.
- Never use abrasive cleaning agents to clean your appliance as this may damage the Multi Mini Heart Waffle Maker and its nonstick Cooking Surface.
- Do not operate this appliance with a damaged cord, damaged plug, after the appliance malfunctions, is dropped, or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- DO NOT use the Multi-Mini Heart Waffle Maker near water or other liquids, with wet hands, or while standing on a wet surface.
- For maintenance other than cleaning, please contact StoreBound directly at 1-800-898-6970 from 9AM - 9PM EST Monday - Friday or by email at support@bydash.com.
- Do not use metal utensils on the Cooking Surface as this will damage the nonstick surface.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience or knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- This appliance is not a toy. Do not let children use this appliance. Close supervision is necessary when any kitchen appliance is used by or near children.

- Do not place appliance on or near a hot gas burner, hot electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oils or other hot liquids.
- Refrain from using attachments that are not recommended by the appliance manufacturer, as this may result in fire, electric shock, or personal injury.
- Allow Multi Mini Heart Waffle Maker to cool completely before moving, cleaning, or storing.
- Do not let the cord touch hot surfaces or hang over the edge of tables or counters.
- Always be sure to unplug the appliance from outlet prior to moving, cleaning, storage, and when not in use.
- StoreBound shall not accept liability for damages caused by improper use of the appliance.
- Improper use of the Multi Mini Heart Waffle Maker can result in property damage or even in personal injury.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not completely fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- A short power supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. An extension cord may be used if care is exercised in its use. If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be a grounding 3-wire cord. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

GARANTIES IMPORTANTES: Veuillez lire et conserver ce mode d'emploi et d'entretien

Lors de l'utilisation d'appareils électriques, il faut toujours respecter les précautions de sécurité de base, notamment:

- Lisez toutes les instructions.
- Retirez tout sac ou emballage de l'appareil avant utilisation.
- Ne laissez jamais l'appareil sans surveillance pendant son utilisation.
- Assurez-vous que l'appareil est minutieusement nettoyé avant utilisation.
- N'utilisez pas l'appareil en dehors de son utilisation prévue. Pour usage ménager uniquement. Ne l'utilisez pas à l'extérieur.
- Avertissement : Surfaces chaudes! Ne touchez jamais la surface de cuisson ou le couvercle pendant l'utilisation de l'appareil. Soulevez et baissez toujours le couvercle à l'aide de sa poignée.
- NE soulevez PAS le couvercle pour que votre bras se trouve au-dessus de la surface de cuisson brûlante, car cela pourrait entraîner des blessures. Soulevez par le côté.
- Afin d'éviter les risques de feux, d'électrocution, ou de dommages corporels, ne mettez pas le cordon, la prise ou l'appareil dans ou à proximité de l'eau ou d'autres liquides. Le mini gaufrier multi coeurs n'est PAS lavable en machine.
- N'utilisez jamais des produits d'entretien

- abrasifs pour nettoyer l'appareil, car cela pourrait endommager le mini gaufrier multi coeurs et sa surface de cuisson anti-adhérente.
- N'utilisez pas cet appareil avec un cordon ou une prise endommagé(e), ou si l'appareil est défaillant, s'il est tombé ou endommagé de quelque façon. Pour toute inspection, réparation ou ajustement, ramenez l'appareil au détaillant agréé le plus proche.
- N'utilisez PAS le mini gaufrier multi coeurs à proximité de l'eau ou d'autres liquides, avec des mains mouillées, ou si vous vous tenez sur une surface mouillée.
- Pour toute question liée à l'entretien autre que le nettoyage, veuillez contacter StoreBound directement au 1-800-898-6970 de 9h à 21h HNE du lundi au vendredi, ou par courriel à support@bydash.com.
- N'utilisez pas d'ustensiles en métal sur la surface de cuisson car cela endommagerait la surface anti-adhérente.
- Cet appareil peut être utilisé par des personnes dont les capacités physiques, sensorielles ou mentales sont réduites ou qui manquent d'expérience et de connaissances, à condition qu'elles aient reçu une

supervision ou des instructions concernant l'utilisation de l'appareil en toute sécurité et qu'elles comprennent les risques encourus.

- L'appareil n'est pas un jouet. Ne laissez pas d'enfants utiliser cet appareil. Une étroite surveillance est nécessaire lorsqu'un appareil est utilisé par ou à proximité d'enfants.
- Ne placez pas l'appareil sur ou à proximité d'un brûleur à gaz ou électrique, ou d'un four chaud.
- Faites attention lorsque vous déplacez un appareil contenant des huiles chaudes ou d'autres liquides chauds.
- Il faut faire preuve d'une extrême prudence lorsque l'on déplace un appareil contenant des huiles chaudes ou d'autres liquides chauds.
- Laissez le mini gaufrier multi coeurs refroidir complètement avant tout déplacement, nettoyage ou entreposage.
- Une attention particulière doit être apportée quand l'appareil est utilisé par ou à proximité d'enfants.
- Ne laissez pas le cordon toucher des surfaces chaudes ou pendre au niveau des bords de tables ou de comptoirs.
- Assurez-vous toujours de débrancher l'appareil de la prise électrique avant tout déplacement, nettoyage ou entreposage.

GARANTIES IMPORTANTES: Veuillez lire et conserver ce mode d'emploi et d'entretien

PARTS & FEATURES



USING YOUR MULTI MINI HEART WAFFLE MAKER

Before first use, remove all packaging material and thoroughly clean your Multi Mini Heart Waffle Maker.



Never touch the Cooking Surface or Cover while appliance is in use.



DO NOT lift the Cover so that your arm is over the Cooking Surface as it is hot and may cause injury.



Always lift and lower the Cover by the Cover Handle. Lift from the side.

USING YOUR MULTI MINI HEART WAFFLE MAKER

USING YOUR MULTI MINI HEART WAFFLE MAKER



A



B



C



D

- 1 Place the appliance on a stable and dry surface. Plug cord into a power outlet. The Indicator Light will illuminate, signaling that the Multi Mini Heart Waffle Maker is heating up. When the Multi Mini Heart Waffle Maker is at cooking temperature, the Indicator Light will turn off (**photo A**).
- 2 Unclip the Latch on the Cover Handle and carefully lift the Cover by the Cover Handle (**photo B**).

- 3 Carefully lift the Cover by the Cover Handle and spray both Cooking Surfaces with a small amount of non-aerosol cooking oil (**photo C**).
- 4 Pour batter onto each plate of the Cooking Surface and close the Cover (**photo D**).



Aerosol cooking sprays often contain additives that can cause nonstick surfaces to become sticky and hard to clean over time. To ensure the longevity of your product, use a spray bottle and a neutral oil (vegetable, canola, etc.) to lubricate cooking surfaces.



**E****F**

- 5** Once waffles are cooked to your preference, carefully remove them from the Cooking Surface with a heat-resistant nylon, wood, or silicone cooking utensil (**photo E**).

NOTE: Do not use metal utensils to remove or place food on the Cooking Surface as this will damage the nonstick surface.

- 6** When you have finished cooking, unplug your Multi Mini Heart Waffle Maker and allow it to cool before moving or cleaning (**photo F**).

Always allow the appliance to cool completely before moving, cleaning, or storing. Do not submerge appliance in water or any other liquids. Never use abrasive cleaning agents to clean your appliance as this may damage the Multi Mini Heart Waffle Maker.

In order to keep your Multi Mini Heart Waffle Maker in pristine working order, thoroughly clean the appliance after each use. This will prevent the build-up of food or oil.

- Unplug Multi Mini Heart Waffle Maker and allow it to cool completely.
- Using a damp, soapy cloth, wipe down the Cooking Surface and Cover. Thoroughly rinse the cloth and wipe again.
- Thoroughly dry Multi Mini Heart Waffle Maker before storing.
- If there is food burned onto the Cooking Surface, pour on a little cooking oil and let sit for 5 to 10 minutes. Scrub the Cooking Surface with a sponge or soft bristled brush to dislodge food. Use a damp, soapy cloth to wipe down the Cooking Surface. Thoroughly rinse the cloth and wipe again. If any food remains, pour on cooking oil and let sit for a few hours, then scrub and wipe clean.
- Never use abrasive cleaning agents to clean your appliance as this may damage the Multi Mini Heart Waffle Maker and its nonstick Cooking Surface.

TROUBLESHOOTING

While Dash products are durable, you may encounter one or more of the problems listed below. If the issue is either not solved by the solutions recommended below or not included on this page, please contact our Customer Support Team at 1-800-898-6970 or support@bydash.com.

ISSUE	SOLUTION
The light on the Multi Mini Heart Waffle Maker keeps shutting off.	This is normal. During the cooking process, the heating element will automatically turn on and off to regulate the temperature and ensure that the Cooking Surface does not get too hot or cold. When this occurs, the Indicator Light turns on and off.
How do I know when the Multi Mini Heart Waffle Maker is heated and ready to use?	When the Multi Mini Heart Waffle Maker reaches the optimal temperature, the Indicator Light shuts off and that means you're ready to get cooking!
There is no On/Off Button. How do I turn the Multi Mini Heart Waffle Maker off and on?	To turn on, simply plug in the power cord. When you're done cooking, turn off the Multi Mini Heart Waffle Maker by unplugging it.

TROUBLESHOOTING

ISSUE	SOLUTION
When using my Multi Mini Heart Waffle Maker, the Cover gets very hot. Is this normal?	Yes, this is completely normal. When using your Multi Mini Heart Waffle Maker, always lift and lower the Cover by the Cover Handle. To prevent personal injury, DO NOT lift the Cover so that your arm is over the Cooking Surface as it is hot and may cause injury. Lift from the side.
After using my Multi Mini Heart Waffle Maker a few times, food is starting to stick to the surface. What is happening?	There is probably a build-up of burnt food residue on the Cooking Surface. This is normal, especially when cooking with sugar. Allow the appliance to cool fully, pour on a little cooking oil and let sit for 5-10 minutes. Scrub Surface with a sponge or soft bristled brush to dislodge food. Use a damp, soapy cloth to wipe down the Cooking Surface. Rinse the cloth and wipe again. If food remains, pour on cooking oil and let sit for a few hours, then scrub and wipe clean.
The Indicator Light will not turn on and the Cooking Surface is failing to heat.	<ol style="list-style-type: none">1. Ensure that the power cord is plugged into the power outlet.2. Check to make sure the power outlet is operating correctly.3. Determine if a power failure has occurred in your home, apartment or building.



RECIPE GUIDE



Follow us!

@bydash | recipes, videos, & inspiration

@unprocessyourfood | veg & vegan-friendly meals



CLASSIC MINI WAFFLES

Ingredients: Yields 12-14 waffles

1 cup flour
1 tbsp sugar
2 tsp baking powder
1/4 tsp salt
1 egg
1 cup milk
2 tbsp melted butter or vegetable oil

Directions:

1. In a medium bowl, sift the flour, sugar, baking powder, and salt. Whisk the egg, milk, and melted butter in a separate bowl. Add the wet ingredients to the dry and mix until just incorporated.
2. Use a non-aerosol oil sprayer or silicone basting brush to apply oil to both cooking surfaces. Pour 2 tbsp of the batter into each heart in the Multi Mini Waffle Maker and cook until golden brown, around 5 minutes. Repeat with the remaining batter.
3. Serve with a drizzle of maple syrup and fresh berries.



RED VELVET MINI WAFFLES

Ingredients: Yields 27-29 waffles

2 cups all-purpose flour	1 ¾ cups buttermilk
¼ cup white granulated sugar	2 large eggs
¼ cup cocoa powder	¼ cup unsalted butter
1 tsp baking powder	2 tsp vanilla extract
½ tsp baking soda	1 tbsp red food coloring
½ tsp cinnamon	½ tsp vanilla extract
1 tsp salt	

<i>Cream Cheese Icing</i>
2 tbsp butter, melted
2 tbsp cream cheese, softened
½ cup powdered sugar
¼ tsp vanilla extract
2-3 tbsp milk

Directions:

1. In a small pan over low heat, melt butter. Shut off heat so butter is not hot when added to the mix.
2. Mix together the dry ingredients and set aside.
3. Beat eggs in a bowl. Slowly stir in buttermilk, butter, vanilla and food coloring.
4. Mix dry ingredients into wet in three rounds. Fully incorporate all dry ingredients before adding the next round.
5. Use a non-aerosol oil sprayer or silicone basting brush to apply oil to both cooking surfaces. Pour 2 tbsp of the batter into each heart in the Multi Mini Waffle Maker and cook until finished, around 5 minutes. Repeat with the remaining batter.
6. Serve and enjoy!





BANANA BREAD MINI WAFFLES

Ingredients: Yields 23-25 waffles

- | | |
|---------------------------------------------|-------------------------|
| 1 ½ cups all-purpose flour | ¾ cup buttermilk |
| 1 tsp baking powder | ¼ cup light brown sugar |
| ¼ tsp baking soda | 2 large eggs |
| ¼ tsp kosher salt | 3 tbsp canola oil |
| 1 cup mashed bananas
(roughly 2 bananas) | |

Directions:

1. Whisk together flour, baking powder, baking soda and salt in a medium bowl.
2. Mash bananas with fork or place in stand mixer with paddle attachment until no large chunks remain. Add buttermilk, brown sugar, eggs and oil. Whisk until well-combined. Add dry ingredients into the wet and mix until no clumps remain.
3. Use a non-aerosol oil sprayer or silicone basting brush to apply oil to both cooking surfaces. Pour 2 tbsp of the batter into each heart in the Multi Mini Waffle Maker and cook until golden brown, around 5 minutes. Repeat with the remaining batter.
4. Serve with additional bananas, honey and powdered sugar, if desired.



BROWNIE MINI WAFFLES

Ingredients: Yields 11-13 waffles

6 tbsp bittersweet chocolate
2 tbsp unsweetened chocolate
 $\frac{3}{4}$ stick unsalted butter
 $\frac{3}{4}$ cup sugar
1 tsp vanilla extract
2 large eggs
 $\frac{1}{2}$ tsp salt
 $\frac{1}{2}$ cup all-purpose flour
 $\frac{1}{2}$ cup mini chocolate chips

Toppings

Chopped walnuts
Shredded coconut

Directions:


1. Melt chocolate and butter and mix together until smooth. In a medium bowl, whisk together eggs, sugar and vanilla extract.
2. Add egg mixture to chocolate and mix until no clumps remain. Stir in salt and flour until just combined. Fold in chocolate chips.
3. Use a non-aerosol oil sprayer or silicone basting brush to apply oil to both cooking surfaces. Pour 2 tbsp of the batter into each heart in the Multi Mini Waffle Maker and cook until finished, around 5 minutes. Repeat with the remaining batter.
4. Serve with toppings of your choice and enjoy!





Dash values quality and workmanship and stands behind this product with our Feel Good Guarantee™. To learn more about our commitment to quality, visit bydash.com/feelgood.

Our customer support teams in the US and Canada are at your service Monday - Friday during the times below.
Contact us at **1 (800) 898-6970** or support@bydash.com

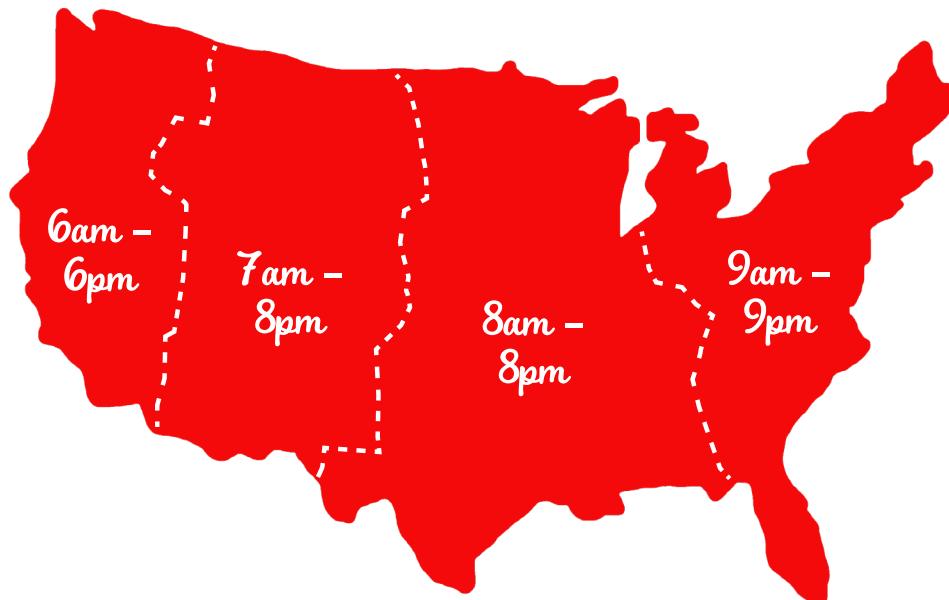

Hey Hawaii! You can reach our customer service team from **3AM to 3PM**.
And also, Alaska, feel free to reach out from **5AM to 5PM**.

STOREBOUND, LLC – 1 YEAR LIMITED WARRANTY

Your StoreBound product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, StoreBound, LLC will repair or replace the defective part. To process a warranty claim, contact Customer Support at 1 (800) 898-6970 for further assistance and instruction. A Customer Support agent will assist you by troubleshooting minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating the date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. We are unable to ship returns to a PO box. StoreBound will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

Send all inquiries to support@bydash.com.
There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. STOREBOUND SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

REPAIRS

DANGER! Risk of electric shock! The Dash Multi Mini Heart Waffle Maker is an electrical appliance.

Do not attempt to repair the appliance yourself under any circumstances.
Contact Customer Support regarding repairs to the appliance.

TECHNICAL SPECIFICATIONS

Model: DMMWH600
Voltage: 120V ~ 60Hz
Power Rating: 760W
Stock#: DMMWH600_20220429_V5
Made in China



This product has passed food safety testing in accordance with FDA guidelines.



1-800-898-6970 | @bydash | bydash.com