



*recipes
inside!*



#DMTO100

MINI TOASTER OVEN

Instruction Manual | Recipe Guide





MINI TOASTER OVEN

- Important Safeguards..... 4-9
- Parts & Features..... 10-11
- Using Your Mini Toaster Oven 12-13
- Toasting Chart 14-15
- Cleaning & Maintenance 16-17
- Recipes..... 18-27
- Notes..... 28-29
- Customer Support 30
- Warranty..... 31

the dash team!

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

When using electrical appliances, basic safety precautions should be followed, including:

- Read all instructions.
- Remove all bags and packaging from appliance before use.
- Make sure the appliance is cleaned thoroughly before using.
- Never leave appliance unattended when in use.
- Do not use appliance for other than intended use.
- For household use only. Do not use outdoors.
- Close supervision is necessary when any appliance is used by or near children.
- A fire may occur if the toaster-oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation. Do not store any item on top of the appliance when in operation.
- Do not touch hot surfaces. Use handles or knobs.
- Allow appliance to cool completely prior to assembly, disassembly or cleaning.
- Oversized foods or metal utensils must not be inserted in a toaster as they may create a fire or risk of electric shock.
- Do not store any materials, other than the manufacturer's recommended accessories in this toaster when not in use.
- Extreme caution should be used when using containers constructed of materials other than metal or glass.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not place any of the following materials in the toaster: paper, cardboard, plastic or similar materials.
- Do not cover any part of the toaster with metal foil. This will cause overheating of the toaster.
- Use extreme caution when removing tray or disposing of hot grease.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts creating a risk of electric

- shock.
- During first use, it is common to see a small amount of smoke, or experience a slight odor. This is normal.
- Do not open the door of the Mini Toaster Oven during use. This will cause the heat to escape and affect the cooking process.
- Do not spray water on the door of the Mini Toaster Oven while the appliance is in use.
- This appliance does NOT include a convection function, and therefore is not appropriate for baking poultry or meat. Use this appliance for warming ingredients within the designated 15 minutes time frame.
- Use oven mitts when removing ingredients from the Toaster.
- When cleaning, be careful of the fragile quartz tube. A broken quartz tube may result in electric shock or other injury.
- Do not operate this appliance with a damaged cord, damaged plug, after the appliance malfunctions, is dropped, or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- For maintenance other than cleaning, please contact StoreBound directly at 1-800-898-6970 from 9AM-9PM ET Monday-Friday or by email at support@bydash.com.
- Do not place appliance on or near a hot gas burner, hot electric burner, or in a heated oven.
- Refrain from using attachments that are not recommended by the appliance manufacturer, as this may result in fire, electric shock, or personal injury.
- Do not let the cord touch hot surfaces, or hang over the edges of tables or counters.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they are provided with supervision and instruction concerning use of the appliance by a person responsible for their safety.
- Always be sure to unplug the appliance from the outlet prior to moving, cleaning, storage, and when not in use.
- To disconnect, turn the timer knob to "OFF", then remove plug from wall outlet.
- There is no On/Off button on the Mini Toaster Oven. To turn the Mini Toaster on, simply plug in the Mini Toaster Oven and set the appropriate time. To turn off, simply unplug the Mini Toaster Oven.
- StoreBound shall not accept liability for damages caused by improper use of the appliance.
- Improper use of the appliance can result in property damage or even in personal injury.

- To protect against electrical shock, do not immerse cord, plugs or the appliance in water or other liquid.
- Make sure that the voltage indicated on the appliance matches the local mains voltage.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not completely fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- The power supply cord is short to reduce risk from becoming entangled in or tripping over a longer cord. An extension cord may be used if care is exercised in its use. If an extension

cord is used, the marked electrical rating of the extension cord should be at least as high as the electrical rating of the appliance. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.



The Mini Toaster Oven is hot while in use. For safe handling use oven mitts or wait until the oven has cooled completely.

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

MESURES DE SÉCURITÉ IMPORTANTES: VEUILLEZ LIRE ET CONSERVER CE MANUEL D'UTILISATION

Lors de l'utilisation d'appareils électriques, des précautions élémentaires de sécurité doivent être respectées, notamment:

- Lisez toutes les instructions.
- Retirez tous les sachets et emballages de l'appareil avant l'utilisation.
- Ne laissez jamais l'appareil sans surveillance pendant l'utilisation.
- Assurez-vous que l'appareil est bien nettoyé avant l'utilisation.
- Ne pas utiliser l'appareil pour d'autres utilisations que celle prévue. Usage domestique seulement.
- Une surveillance étroite est nécessaire lorsque l'appareil est utilisé par ou près des enfants.
- Un incendie peut se produire si le four grille-pain est couvert ou touche des matériaux inflammables, y compris des rideaux, des rideaux, des murs, etc., en cours de fonctionnement. Ne rangez aucun objet sur l'appareil lorsqu'il est en marche.
- Ne pas utiliser l'appareil pour d'autres utilisations que celle prévue.
- Ne touchez pas les surfaces chaudes. Utilisez des gants ou des maniques.
- Laisser refroidir avant de monter ou démonter.
- Des aliments trop gros ou des ustensiles en métal ne doivent pas être insérés dans un four toaster, car ils peuvent provoquer un incendie ou un risque de choc électrique.
- Soyez extrêmement prudent lorsque vous déplacez un appareil contenant de l'huile chaude ou d'autres liquides chauds.
- Ne pas utiliser à l'extérieur.
- Ne stockez aucun matériel, autre que les accessoires recommandés par le fabricant, lorsque ce four n'est pas utilisé.
- Soyez extrêmement prudent lorsque vous utilisez des contenants autres qu'en métal ou en verre.
- Ne pas utiliser cet appareil si le cordon est endommagé, si la prise est endommagée, après un dysfonctionnement de l'appareil, sa chute, ou si l'appareil est endommagé de quelque manière que ce soit. Retournez cet appareil auprès du centre de service agréé le plus proche pour un examen, une réparation, ou un ajustement.
- Ne placez aucun des matériaux suivants dans le four: papier, carton, plastique ou semblables.

MESURES DE SÉCURITÉ IMPORTANTES

- Ne pas couvrir le plateau ramasse-miettes ou aucune partie du four avec du papier aluminium. Cela cause la surchauffe du four.
- Pour tout entretien autre que le nettoyage, contactez directement StoreBound au +1-800-898-6970 de 9h à 1h (HNE) du lundi au vendredi ou par email support@bydash.com.
- Ne placez pas l'appareil sur ou près d'une source de chaleur telle que: brûleur au gaz ou électrique chaud, ou dans un four chauffé.
- Soyez extrêmement prudent lorsque vous retirez le plateau ou que vous vous débarrassez de la graisse chaude.
- Il faut faire preuve d'une extrême prudence lors du déplacement d'un appareil contenant de l'huile chaude ou d'autres liquides chauds.
- Évitez d'utiliser des accessoires qui ne sont pas recommandés par le fabricant de l'appareil, car cela pourrait provoquer un incendie, une électrocution ou des blessures.
- Un incendie peut se produire si le four est recouvert ou s'il est en contact avec un matériau inflammable, y compris des rideaux, des tentures, des murs, et autres, lorsqu'il est en marche. Ne rangez aucun objet sur l'appareil en cours de fonctionnement.
- Ne pas laisser le cordon d'alimentation toucher à des surfaces chaudes, ou pendre d'un comptoir ou d'une table.
- Afin de prévenir tout choc électrique, n'immergez pas le cordon, la prise ou l'appareil dans de l'eau ou d'autres liquides.
- Cet appareil n'est pas destiné à être utilisé par des personnes (y compris les enfants) avec des capacités physiques, sensorielles ou mentales réduites, ou sans expérience et connaissances à moins qu'une personne responsable de leur sécurité supervise l'utilisation.
- Assurez-vous de débrancher l'appareil de la prise de courant avant de le déplacer, le nettoyer, et ranger l'appareil, et lorsqu'il n'est pas utilisé.
- Pour déconnecter, réglez le bouton de la minuterie sur "OFF", puis retirez la fiche de la prise murale.
- Il n'y a pas de bouton Allumé / Eteint sur le mini-four grille-pain. Pour allumer le mini-grille-pain, il suffit de brancher le mini-grille-pain et de régler l'heure appropriée. Pour l'éteindre, débranchez simplement le mini-grille-pain.
- Ne pas nettoyer avec un tampon à récurer métallique. Des parties peuvent se détacher du tampon et toucher les parties électriques, ce qui peut entraîner un risque de choc électrique.
- Au cours de la première utilisation, il est courant de voir une petite quantité de fumée, ou de sentir une légère odeur. Ceci est normal.
- N'ouvrez pas la porte du Four Toaster Mini pendant l'utilisation. Cela va laisser la chaleur s'échapper et affecter le processus de cuisson.
- Ne vaporisez pas d'eau sur la porte du Four Toaster Compact pendant l'utilisation de l'appareil.
- Cet appareil n'inclut PAS de fonction de convection, et n'est donc pas approprié pour la cuisson de la volaille ou des

MESURES DE SÉCURITÉ IMPORTANTES


- viandes. Utilisez cet appareil pour réchauffer les ingrédients dans le délai indiqué de 15 minutes.
- Assurez-vous de porter des gants protecteurs lorsque vous retirez des ingrédients du four.
- Pour le déconnecter, tournez la minuterie sur "OFF", puis débranchez la prise.
- Toujours débrancher et laisser refroidir le four avant de le nettoyer.
- StoreBound n'accepte aucune responsabilité pour des dommages causés par une utilisation impropre de l'appareil.
- Une utilisation impropre de l'appareil peut entraîner des dommages matériels ou même des blessures corporelles.
- Pour vous protéger contre les chocs électriques, n'immergez pas le cordon, les fiches et l'appareil dans l'eau ou tout autre liquide.
- L'usage d'accessoires non-recommandés par le fabricant de l'appareil peut causer des blessures.
- Cet appareil est muni d'une fiche polarisée (une lame est plus large que l'autre). Afin de réduire le risque de choc électrique, cette fiche ne peut être insérée dans une prise polarisée que d'une seule façon. Si la fiche ne rentre pas complètement dans la prise, retournez-la. Si elle ne rentre toujours pas, contactez un électricien qualifié. N'essayez pas de modifier la fiche de quelque façon que ce soit.
- Le cordon d'alimentation est court afin de réduire les risques de blessures ou de dommages pouvant être causés par le fait de trébucher ou d'emmêler dans le cordon. Une rallonge peut être utilisée si des précautions sont prises lors de son utilisation. Si une rallonge est utilisée, sa capacité électrique doit être équivalente ou supérieure à la puissance de l'appareil. La rallonge doit être arrangée de façon à ne pas pendre d'un comptoir ou d'une table, ou de toute autre surface où des enfants pourraient s'y suspendre ou trébucher involontairement.



Le Four Toaster Mini est chaud pendant l'utilisation. Pour une manipulation en toute sécurité, utilisez des gants isolants ou attendez que le four soit complètement refroidi.

**MESURES DE SÉCURITÉ IMPORTANTES:
VEUILLEZ LIRE ET CONSERVER CE
MANUEL D'UTILISATION**

PARTS & FEATURES

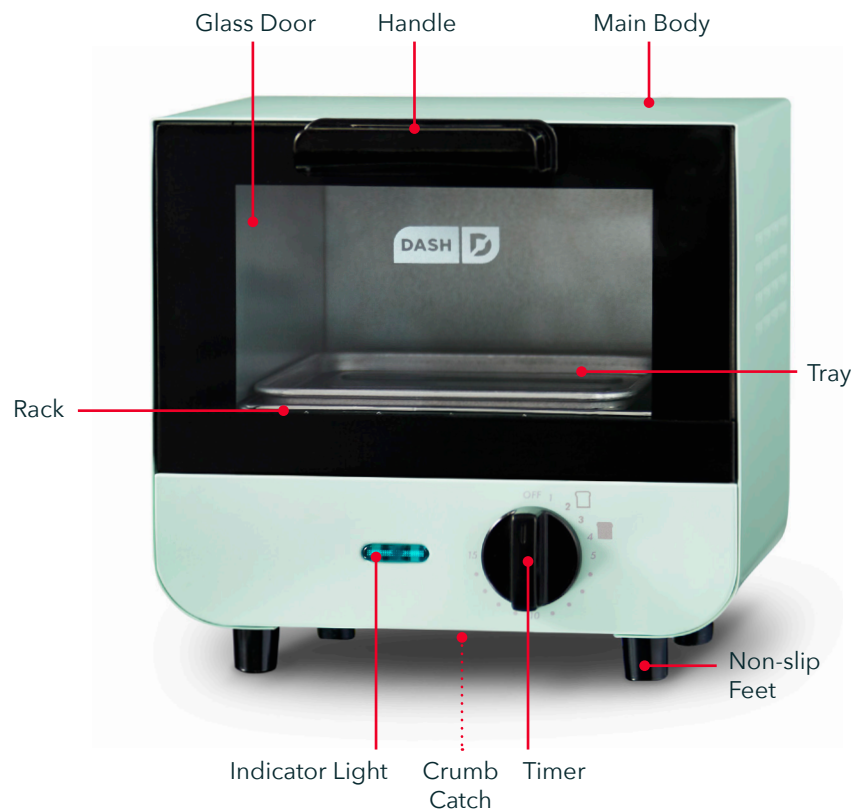

USING YOUR MINI TOASTER OVEN

BEFORE USING YOUR MINI TOASTER:

Remove all packaging materials.

Check that the Mini Toaster has no visible damage and that no parts are missing.

Before using the appliance for the first time or before using it after prolonged storage, wash and dry the appliance and any accompanying accessories. See "Cleaning & Maintenance" for instructions.

Your Dash Mini Toaster is always set to 400°F, so you don't have to worry about setting the temperature. To cook recipes that use a different temperature, simply adjust the time accordingly.

WARNING: Your Mini Toaster Oven is hot, so do not touch the outside or inside while using.

WARNING: Despite its small size, your Mini Toaster Oven is very powerful! Do not cook toast with it for longer than 4 minutes as indicated by the icon on the dial, as your toast may burn. Ensure your toast is at least 1/2 inch away from the heating elements within the Mini Toaster Oven: failure to do so may cause your toast to burn.

USING YOUR MINI TOASTER OVEN

NOTE: Do not cook toast for longer than 4 minutes as indicated by the icon on the dial, as your toast may burn.



- 1 Place the appliance on a stable, flat, heat-resistant surface. Plug the Mini Toaster into a wall socket.
NOTE: There is no On/Off button on the Mini Toaster Oven. To turn the Mini Toaster on, simply plug in the Mini Toaster Oven and set the appropriate time. To turn off, set the timer dial to the "off" position or unplug.



- 2 Place your food on the Rack and/or Tray inside the Mini Toaster. Close the Glass Door. If using the Tray to toast, it is recommended to flip your food halfway through the cooking process. Ensure your toast is at least 1/2 inch away from the heating elements within the Mini Toaster Oven: failure to do so may cause your toast to burn. Flip at the halfway mark if using the Tray.



- 3 Turn the Timer to the appropriate setting. Once you have set the time, the Indicator Light will illuminate.
NOTE: To set the Timer for less than 5 minutes, turn the Timer past 5 minutes, then back to your desired cooking time.



- 4 When the cooking time has elapsed, the Mini Toaster will ring. Use oven mitts to remove your food from the Mini Toaster as the appliance and your food will be hot.
NOTE: Do not cook toast for longer than 4 minutes as indicated by the icon on the dial, as your toast may burn.



TOASTING CHART

PLEASE NOTE:

This Toasting Chart is a guideline. Actual cooking times may vary depending on your food. Your Dash Mini Toaster is always set to 400°F, so you don't have to worry about setting the temperature. To cook recipes that use a different temperature, simply adjust the time accordingly.

The ☐ and ◼ symbols around the Timer indicate light and dark toasting settings. The ☐ symbol represents the estimated time for light toast and the ◼ symbol represents the estimated time for dark toast. These symbols are only guidelines and your actual cooking time may vary depending on your ingredients.

TOASTING LEVEL	TIME
Light	2 minutes
Medium	3 minutes
Dark	4 minutes

NOTE: Do not cook toast for longer than 4 minutes as indicated by the icon on the dial. Be careful not to set the dial over 4 minutes when making toast, as this may result in burnt toast and/or smoke.



CLEANING & MAINTENANCE

BEFORE CLEANING YOUR MINI TOASTER OVEN:

Ensure that you have unplugged the appliance before cleaning.

Allow the oven to cool completely before cleaning.

Thoroughly clean the Mini Toaster after each use.

WHEN CLEANING YOUR MINI TOASTER OVEN:

Use a damp cloth to wipe down the exterior of the appliance.

Dry with a soft cloth.

Do not use abrasive cleaning agents to clean the appliance.

Use warm water to clean the Rack, Tray, and Crumb Catch. Wipe down with a dry, clean cloth.

Open the Crumb Catch by pulling toward the front of the Mini Toaster until the latch has been released.

Be sure to do this over a trash can as crumbs may fall out. The Crumb Catch will open but it will not remove entirely. Clean Crumb Catch weekly if you use it often.



Using a damp, soapy cloth, wipe down the interior of the Mini Toaster. Thoroughly rinse the cloth and wipe again. Do not leave residual water in the oven.

WARNING: Be careful not to touch or damage the quartz heating element while cleaning.

Always dry the Mini Toaster thoroughly.

It is highly recommended that you clean and dry the Rack and Tray by hand, after each use.



RECIPE IDEAS



Follow us!

@bydash | recipes, videos, & inspiration

@unprocessyourfood | veg & vegan-friendly meals



PEANUT BUTTER & BANANA TOAST

Ingredients:

1 slice bread, toasted
peanut butter, to taste
½ banana, sliced
cinnamon, to taste

Directions:

Spread peanut butter on the toast and top with sliced banana. Sprinkle with cinnamon, and enjoy!



ALMOND BUTTER BLUEBERRY TOAST

Ingredients:

1 slice bread, toasted
almond butter, to taste
blueberries, to taste
granola, to taste

Directions:

Spread almond butter on the toast and top with blueberries. Sprinkle granola on top. Enjoy!



CANTALOUPE & PROSCIUTTO TOAST

Ingredients:

1 slice bread, toasted
2-3 slices cantaloupe
1 piece prosciutto
feta, to taste

Directions:

Top toast with cantaloupe, prosciutto, and a sprinkle of feta. Enjoy!



EGG & AVOCADO TOAST

Ingredients:

1 slice bread, toasted
½ avocado, mashed
salt, to taste
pepper, to taste
1 egg, fried or to preference
sriracha

Directions:

Mash half of an avocado. Add salt and pepper, to taste. Mix until well combined. Spread the mashed avocado evenly across toast, top with the fried egg, and drizzle with sriracha. Enjoy!



PESTO & PARMESAN TOAST

Ingredients:

- 1 slice bread, toasted
- ½ avocado, sliced
- 2 tbsp pesto
- 1-2 tbsp parmesan, shaved

Directions:

Spread the pesto on your toast, top with the avocado and then the shaved parmesan.





CURRIED HERB PITA CHIPS

Ingredients:

¼ cup olive oil
2 tbsp honey
1 tsp curry powder
½ tsp dried parsley
1 package (8-10 oz) whole wheat pita bread

Directions:

In a small cup, stir together olive oil, honey, curry powder, and parsley. Split each pita crosswise into 2 rounds; brush each round with the oil mixture. Cut each round into quarters and then cut each quarter in half. Line the Tray with parchment paper. Place pita pieces on the Tray. The chips can be baked in batches. Slide the Tray into the Mini Toaster Oven. Toast for 4 minutes. Store in plastic zip-loc bag.

NOTE: Make sure the parchment paper isn't in contact with any of the heating elements.



STRAWBERRY NUTELLA TOAST

Ingredients:

1 slice bread, toasted
1 tbsp of nutella
strawberries, to preference


Directions:

Toast bread for 2-4 minutes. Slice strawberries. Spread nutella and top with strawberries.

FEEL GOOD GUARANTEE™

Dash values quality and workmanship and stands behind this product with our Feel Good Guarantee™. To learn more about our commitment to quality, visit bydash.com/feelgood.

Our customer support teams in the US and Canada are at your service Monday - Friday during the times below. Contact us at **1 (800) 898-6970** or support@bydash.com

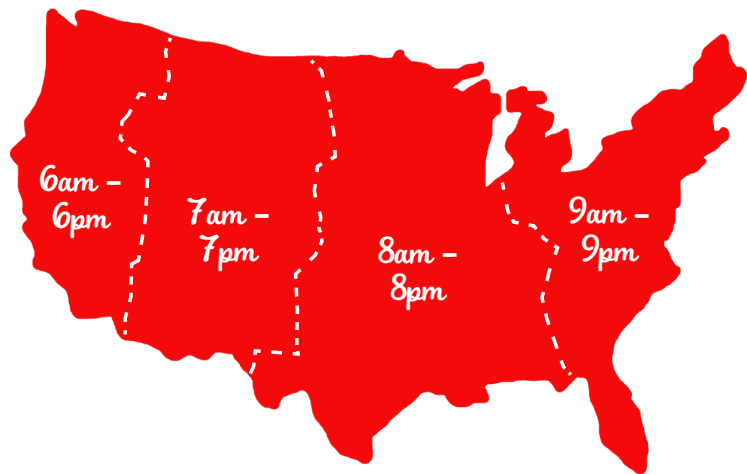

Hey **Hawaii!** You can reach our customer service team from **3AM to 3PM**. And also, **Alaska**, feel free to reach out from **5AM - 5PM**.

STOREBOUND, LLC - 1 YEAR LIMITED WARRANTY

Your StoreBound product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, StoreBound, LLC will repair or replace the defective part. To process a warranty claim, contact Customer Support at 1-800-898-6970 for further assistance and instruction. A Customer Support agent will assist you by troubleshooting minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating the date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. We are unable to ship returns to a PO box. StoreBound will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

Send all inquiries to support@bydash.com. There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. STOREBOUND SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

REPAIRS

DANGER! Risk of electric shock! The Dash Mini Toaster Oven is an electrical appliance. Do not attempt to repair the appliance yourself under any circumstances. Contact Customer Support regarding repairs to the appliance.

TECHNICAL SPECIFICATIONS

Voltage 120V ~ 60Hz
 Power Rating 550W
 Stock#: DMTO100_20180918_v9
 Made in Indonesia



1-800-898-6970 | @bydash | bydash.com