



recipes
inside!

A handwritten-style red text "recipes inside!" is written diagonally across the top right corner. A red arrow points upwards and to the left from the end of the text towards the top of the blender's pitcher.

#DQB150

QUEST BLENDER

Instruction Manual | Recipe Guide





QUEST BLENDER

Important Safeguard.....	4-7
Parts & Features.....	8
Control Dial Settings.....	10
Before First Use.....	11
Using Your Quest Blender.....	12-17
Removing the Blade.....	18-19
Cleaning & Maintenance.....	21
Recipes.....	23-37
Customer Support.....	38
Warranty.....	39

the dash team!

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

When using electrical appliances, basic safety precautions should be followed, including:

- Read all instructions carefully.
- Remove all packaging and labels from appliance prior to use.
- To protect against risk of electrical shock, do not put cord, plugs, or appliance in or near water or other liquids.
- For any maintenance other than cleaning, please contact StoreBound directly at 1-800-898-6970 from 9AM - 9PM EST Monday - Friday, or by email at support@bydash.com.
- Keep appliance away from children when in use.
- Unplug the appliance from the outlet when not in use, during assembly, during disassembly, and before cleaning.
- Avoid contact with moving parts.
- Do not operate this appliance with a damaged cord, damaged plug, after the appliance malfunctions, is dropped, or damaged in any manner.
- Only use attachments that are recommended or sold by the appliance manufacturer.
- Do not use the appliance outdoors.
- Do not leave your Dash Quest Blender unattended while it is operating.
- Do not let the cord hang over the edge of tables, counters, or touch hot surfaces.
- Always make sure that the Pitcher is locked securely in place before engaging the motor. Do not remove the Pitcher before the blender is finished operating.
- Make sure that the Dial is in the "0" position after each use. Make sure that the motor stops completely before disassembling.
- Do not place your fingers or other foreign objects into the appliance while it is operating. If food becomes lodged in the blades, turn off and unplug the appliance before trying to remove the ingredients.
- Do not use the appliance if any of the parts are damaged.
- Do not use without the Lid in place.
- Keep hands and utensils away from moving blades while appliance is engaged to reduce the risk of severe injury or damage to the Blender.
- The blades in the Blender are sharp. Handle carefully. Do not touch the blades in the base of the Pitcher with bare hands.
- Do not place the appliance on or near a hot gas plate, hot electric burner, or in a heated oven.
- When cleaning, do not submerge the Motor Base (with electrical parts) in any liquid; instead use a soft, wet cloth to wipe down.
The Dash Quest Blender Motor Base is NOT dishwasher safe.
- Do not operate the blender when the Pitcher is empty.
- When blending tough or dry foods for a prolonged period of time, the temperature monitoring system may shut down the motor to prevent overheating. This may occur when the Blender is overloaded. Unplug the Blender

and place the Motor Base in a well-ventilated area, allowing it to cool down for 45 minutes. Try removing some of the ingredients before continuing to blend.

- Make sure the Lid is closed tightly during blending to prevent liquid from splashing out.
- Keep hands and utensils out of the Pitcher while the motor is running to prevent injuries or damages.
- When making sauces, stuffing, etc., add 2-3 cups of ingredients at a time. Keep the blending time below 2 minutes to prevent the motor from overloading or overheating. If the motor stops abruptly, allow the motor temperature to decrease before continuing to blend.
- Always place soft or liquid ingredients in the blender before adding hard ingredients or ice cubes.
- Wait until the blades come to a complete stop before removing the Pitcher. If not done accordingly, the drive gear may become damaged.
- If a burning odor comes from the Blender, shut the appliance off immediately. This may be caused by abrasion of the rubber feet on the Motor Base. Make sure that the rubber feet are stable and that the appliance is properly assembled.
- If the blades become jammed during the blending process, use the Tamper to stir the food in the Pitcher, allowing air to escape. Close the Lid tightly and continue to blend.
- When blending tough or sticky foods, begin blending at a low speed. If the blender does not mix the ingredients to your preference, disconnect the appliance and use a spoon or spatula to incorporate the ingredients and release any captured air in the Pitcher. Close the Lid and continue blending.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience or knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- This appliance is not a toy. Do not let children use this appliance. Close supervision is necessary when any kitchen appliance is used by or near children.
- StoreBound shall not accept liability for damages caused by improper use of the appliance.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not completely fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- For household use only.

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

GARANTIES IMPORTANTES: Veuillez lire attentivement ce manuel avant d'utiliser l'appareil.

Lors de l'utilisation d'appareils électriques, des précautions élémentaires de sécurité doivent être respectées, notamment:

- Lisez attentivement toutes les instructions.
- Retirez tous les emballages et étiquettes de l'appareil avant de l'utiliser.
- Pour vous protéger contre les risques de choc électrique, ne placez le cordon, les fiches ou l'appareil dans ou près de l'eau ou d'autres liquides.
- Pour toute maintenance autre que le nettoyage, veuillez contacter StoreBound directement au 1-800-898-6970 de 7h00 à 19h00 HNP du lundi au vendredi, ou par e-mail à support@bydash.com.
- Gardez l'appareil hors de portée des enfants lors de son utilisation.
- Débranchez l'appareil de la prise de courant lorsqu'il n'est pas utilisé, pendant le montage, le démontage et avant le nettoyage.
- Evitez tout contact avec les pièces mobiles.
- N'utilisez pas cet appareil avec un cordon endommagé, une prise endommagée, après un dysfonctionnement de l'appareil, une chute ou un de toute manière.
- Utilisez uniquement des accessoires recommandés ou vendus par le fabricant de l'appareil.
- N'utilisez pas l'appareil à l'extérieur.
- Ne laissez pas votre Dash Quest Blender sans surveillance pendant son fonctionnement.
- Ne laissez pas le cordon pendre sur le bord des tables, des comptoirs ou toucher des surfaces chaudes.
- Assurez-vous toujours que le pichet est bien verrouillé en place avant d'engager le moteur. Ne retirez pas le pichet avant que le mélangeur ait fini de fonctionner.
- Assurez-vous que le cadran est en position «0» après chaque utilisation. Assurez-vous que le moteur s'arrête complètement avant de le démonter.
- Ne placez pas vos doigts ou d'autres objets étrangers dans l'appareil pendant son fonctionnement. Si des aliments se logent dans les lames, éteignez et débranchez l'appareil avant d'essayer de retirer les ingrédients.
- N'utilisez pas l'appareil si l'une des pièces est endommagée.
- Ne pas utiliser sans le couvercle en place.
- Gardez les mains et les ustensiles éloignés des lames en mouvement lorsque l'appareil est engagé pour réduire le risque de blessures graves ou de dommages au mélangeur.
- Les lames du mélangeur sont tranchantes. Manipulez avec soin. Ne touchez pas les lames à la base du pichet à mains nues.
- Ne placez pas l'appareil sur ou près d'une plaque à gaz chaude, d'un brûleur électrique chaud ou dans un four chauffé.
- Lors du nettoyage, ne plongez pas la base du moteur (avec des pièces électriques) dans un liquide; utilisez plutôt un chiffon doux et humide pour essuyer.
- La base du moteur du mélangeur Dash Quest n'est PAS lavable au lave-vaisselle.
- N'utilisez pas le mélangeur lorsque le pichet est vide.

- Lors du mélange d'aliments durs ou secs pendant une période prolongée, le système de surveillance de la température peut arrêter le moteur pour éviter une surchauffe. Cela peut se produire lorsque le mélangeur est surchargé. Débranchez le mélangeur et placez la base du moteur dans un endroit bien ventilé, lui permettant de refroidir pendant 45 minutes. Essayez de retirer certains des ingrédients avant de continuer à mélanger.
- Assurez-vous que le couvercle est bien fermé pendant le mélange pour empêcher les éclaboussures de liquide.
- Gardez les mains et les ustensiles hors du pichet pendant que le moteur tourne pour éviter les blessures ou les dommages.
- Lorsque vous préparez des sauces, des farces, etc., ajoutez 2 à 3 tasses d'ingrédients à la fois. Gardez le temps de mélange en dessous de 2 minutes pour empêcher le moteur de surcharger ou de surchauffer. Si le moteur s'arrête brusquement, laissez la température du moteur diminuer avant de continuer à mélanger.
- Placez toujours les ingrédients mous ou liquides dans le mélangeur avant d'ajouter des ingrédients durs ou des glaçons.
- Attendez que les lames s'arrêtent complètement avant de retirer le pichet. Si ce n'est pas fait en conséquence, le pignon d'entraînement peut être endommagé.
- Si une odeur de brûlé provient du mélangeur, éteignez immédiatement l'appareil. Cela peut être dû à l'abrasion des pieds en caoutchouc sur la base du moteur. Assurez-vous que les pieds en caoutchouc sont stables et que l'appareil est correctement assemblé.
- Si les lames se coincent pendant le processus de mélange, utilisez le Tamper pour remuer les aliments dans le pichet, permettant à l'air de s'échapper. Fermez bien le couvercle et continuez à mélanger.
- Lorsque vous mélangez des aliments durs ou collants, commencez à mélanger à basse vitesse. Si le mélangeur ne mélange pas les ingrédients selon vos préférences, débranchez l'appareil et utilisez une cuillère ou une spatule pour incorporer les ingrédients et libérer tout l'air capturé dans le pichet. Fermez le couvercle et continuez à mélanger.
- Cet appareil peut être utilisé par des personnes dont les capacités physiques, sensorielles ou mentales sont réduites ou qui manquent d'expérience et de connaissances, à condition qu'elles aient reçu une supervision ou des instructions concernant l'utilisation de l'appareil en toute sécurité et qu'elles comprennent les risques encourus.
- L'appareil n'est pas un jouet. Ne laissez pas d'enfants utiliser cet appareil. Une étroite surveillance est nécessaire lorsqu'un appareil est utilisé par ou à proximité d'enfants.
- StoreBound décline toute responsabilité pour les dommages causés par une mauvaise utilisation de l'appareil.
- Cet appareil a une fiche polarisée (une lame est plus large que l'autre). Pour réduire le risque de choc électrique, cette fiche ne peut être insérée dans une prise polarisée que dans un sens. Si la fiche ne rentre pas complètement dans la prise, inversez-la. Si elle ne rentre toujours pas, contactez un électricien qualifié.
- N'essayez en aucun cas de modifier la fiche.
- Pour usage domestique uniquement.

GARANTIES IMPORTANTES: Veuillez lire attentivement ce manuel avant d'utiliser l'appareil.

PARTS & FEATURES



CONTROL DIAL SETTINGS

BEFORE FIRST USE

SETTING	FUNCTION
P - Pulse setting	The Blender will only blend on the Pulse Setting while the Control Dial is held in the "P" position. This setting is great for chopping herbs and nuts as well as giving you more precise control over the blending process.
0 - Off	Off
I - Low Speed	Use this setting when you want some texture. Salsas, milkshakes, batters and chopped veggies turn out great on this setting.
II - High Speed	This setting is perfect for a smooth consistency or fine texture. Use this setting for crushing spices, liquefying, and blending soups.

- Read the entire instruction manual and save it for further use.
- Remove any stickers and packaging before use.
- Use a wet cloth to wipe down the Motor Base.
- Wash the Lid, Filler Cap, and Pitcher with soapy water and a sponge. Use a dish brush to clean the blades. Do not use your hands.
- **WARNING:** DO NOT SUBMERGE THE MOTOR BASE IN WATER OR OTHER LIQUIDS.
MAKE SURE THE BLENDER IS UNPLUGGED.



USING YOUR QUEST BLENDER

USING YOUR QUEST BLENDER



- 1 Begin by adding liquid ingredients to the Pitcher (**photo A**).



- 2 Add solid ingredients, such as fruits and vegetables (**photo B**).
The blending process will be quicker if items are loosely chopped into medium-sized pieces.



- 3 Attach the Lid to the Pitcher, pressing down to secure (**photo C**).



- 4 Rest the Motor Base on a flat, stable surface. Add the Pitcher to the Motor Base and plug in the appliance (**photo D**).

USING YOUR QUEST BLENDER

USING YOUR QUEST BLENDER

**E**

- 5 Once placed on top of the Motor Base, rotate clockwise to lock into place (**photo E**).

**F**

- 6 You will notice the arrow on the base of the Pitcher line up with the arrow on the Motor Base (**photo F**).

WARNING: Keep hands and utensils out of the Pitcher when in use. Always make sure that the Lid is secure before blending.

**G**

- 7 To Pulse, rotate the dial repeatedly towards the Pulse Setting, labeled "P" (**photo G**).

**H**

- 8 To use the Blender on Low power, turn the Dial to "I" (**photo H**).

USING YOUR QUEST BLENDER

USING YOUR QUEST BLENDER



9 To use the Blender on High power, turn the Dial to "II" (**photo I**).



10 Blend until desired consistency is reached (**photo J**). Then turn the dial to "0" to turn it off.



11 Once blending is completed, rotate the Pitcher counter-clockwise and lift to remove (**photo K**).



12 Remove the Lid and serve (**photo L**).

REMOVING THE BLADE



A



B



C



D

1 Remove the Pitcher, turn upside down and place carefully onto a stable surface (**photo A**).

2 Unscrew the Blade Lock (**photo B**).

3 Carefully remove the Blade (**photo C**).

4 Remove the Blade Seal from around the Blade for cleaning (**photo D**).

NOTE FOR REASSEMBLY: Reinsert the parts in the opposite order they were removed and firmly screw the Blade Lock back into place.

REMOVING THE BLADE

CLEANING & MAINTENANCE



- Before cleaning or moving the appliance, make sure to unplug the Blender.
- Remove the Pitcher from the Motor Base.
- Empty any contents from the Pitcher.
- To remove the Blade, turn the Blade Lock clockwise until you can lift the Lock out of place. Then carefully remove the Blades and Blade Seal (see pages 18-19).
- Hand wash only.
- If you prefer you can wash the Pitcher in the sink with hot, soapy water, using a brush to clean the Blade.
- Dry the base of the Pitcher thoroughly.
- Wipe down the Motor Base with a damp cloth.
- If you removed the Blade Assembly for cleaning, reinsert the parts in the opposite order they were removed, and firmly screw the Blade Lock counterclockwise back into place.
- When you are storing the Pitcher for an extended period of time, store it upside down, without the Lid, to allow any residual moisture to evaporate.
- **IMPORTANT:** DO NOT SUBMERGE THE MOTOR BASE IN WATER OR OTHER LIQUIDS.



RECIPE GUIDE



Follow us!

@bydash | recipes, videos, & inspiration

@unprocessyourfood | veg & vegan-friendly meals



VERY BERRY SMOOTHIE

Ingredients:

1 ½ cups milk
8 frozen strawberries
½ cups frozen blueberries
4 tbsp Greek yogurt
1 banana, halved
4 tsp ground flax seeds
agave, to taste

Directions:

1. Add all of the ingredients to the Quest Blender, adding the frozen berries last.
Blend on speed "ll" until creamy.





PINEAPPLE MINT SMOOTHIE

Ingredients:

1 cup frozen pineapple chunks

2 cups orange juice

½ cup plain yogurt

6-7 mint leaves

Directions:

1. Add all of the ingredients to the Quest Blender, adding the frozen pineapple last.
Blend all ingredients on speed "I" until the desired consistency is reached.



STRAWBERRY KIWI SMOOTHIE

Ingredients:

1 ½ cups apple juice

2 frozen bananas, cut into 2" pieces

8 strawberries, halved

2 kiwis, sliced

honey, to taste

Directions:

1. Add all of the ingredients to the Quest Blender, adding the frozen banana last.
Blend all ingredients on speed "II" until creamy.



GREEN GOODNESS SMOOTHIE

Ingredients:

1 cup frozen pineapple chunks

2 cups orange juice

½ cup plain yogurt

6-7 mint leaves

Directions:

1. Add all of the ingredients to the Quest Blender. Blend all ingredients on speed "II" until consistency is smooth. Serve cold.





COCONUT MOCHA SHAKE

Ingredients:

1 cup cold brew coffee concentrate
1 cup coconut milk
2 frozen bananas, cut into 2" pieces
4 tbsp unsweetened cocoa powder

Directions:

1. Fill the Quest Blender with all of the ingredients, making sure to add the frozen bananas last.
2. Cover with the Lid and blend on speed "ll" for about 1 minute or until smooth.



PALEO MINT CHOCOLATE SHAKE

Ingredients:

2 frozen bananas, cut into 2" pieces
2 tbsp almond butter
4 tbsp cocoa powder
½ tsp mint extract
1 tsp vanilla extract
2 cups almond milk

Directions:

1. Fill the Quest Blender with all of the ingredients, making sure to add the frozen bananas last.
2. Cover with the Lid and blend on speed "ll" for about 1 minute or until smooth.



PEACHES 'N CREAM SHAKE

Ingredients:

1 cup canned or fresh peaches
½ cup vanilla ice cream
1 ½ cups milk
honey, to taste

Directions:

1. Add all of the ingredients to the Quest Blender. Blend all ingredients on speed "I" until desired consistency is reached.



POWER SHAKE

Ingredients:

2 frozen bananas, cut into 2" pieces
1 scoop vanilla protein powder
½ cup rolled oats
2 cups milk
¼ tsp cinnamon

Directions:

1. Fill the Quest Blender with all of the ingredients, adding the frozen banana last. Cover with the Lid and blend on speed "II" for about a minute or until smooth.



CHOCOLATE PEANUT BUTTER BANANA SMOOTHIE

Ingredients:

2 frozen bananas, cut into 2" pieces
2 tbsp peanut butter
4 tbsp cocoa powder
2 cups milk

Directions:

1. Add milk first, then cocoa powder and peanut butter, and finally the bananas to your Quest Blender. Blend for about a minute on speed "II". Enjoy!





BUTTERNUT SQUASH SOUP

Ingredients:

1 small butternut squash, peeled, seeded, and cut into $\frac{3}{4}$ " cubes	$\frac{1}{2}$ tsp cinnamon pinch of nutmeg
1 cup chicken stock	crumbled Gorgonzola cheese, to garnish
1 cup water	chopped walnuts, to garnish
$\frac{1}{2}$ small onion, diced	creme fraiche or Greek yogurt, to garnish
1 tbsp butter	

Directions:

1. Melt butter in a large saucepan over medium heat. Add the butternut squash, stirring to coat the squash in butter. Cook for 3 minutes. Add the chicken stock, water, onion, and spices.
2. Bring to a boil and then reduce heat to low. Cover and simmer for about 20 minutes or until the squash is tender.
3. Remove from heat and let cool. Once the mixture is near room temperature, transfer to the Quest Blender and blend on speed "ll" until smooth. Pour soup into bowl and heat in microwave.
4. Garnish with creme fraiche, gorgonzola, and walnuts.



MANGO MARGARITA

Ingredients:

1 $\frac{1}{2}$ cups frozen mango chunks, thawed
$\frac{1}{2}$ cup tequila
$\frac{1}{4}$ cup lime juice
2 $\frac{1}{2}$ tbsp agave
1 $\frac{1}{2}$ cup ice


Directions:

1. Fill the Quest Blender with all of the ingredients, adding the frozen mango last. Blend all ingredients on speed "ll" until the desired consistency is reached. Serve in margarita glasses with salted rims.



Dash values quality and workmanship and stands behind this product with our Feel Good Guarantee™. To learn more about our commitment to quality, visit bydash.com/feelgood.

Our customer support teams in the US and Canada are at your service Monday - Friday during the times below.
Contact us at **1 (800) 898-6970** or support@bydash.com

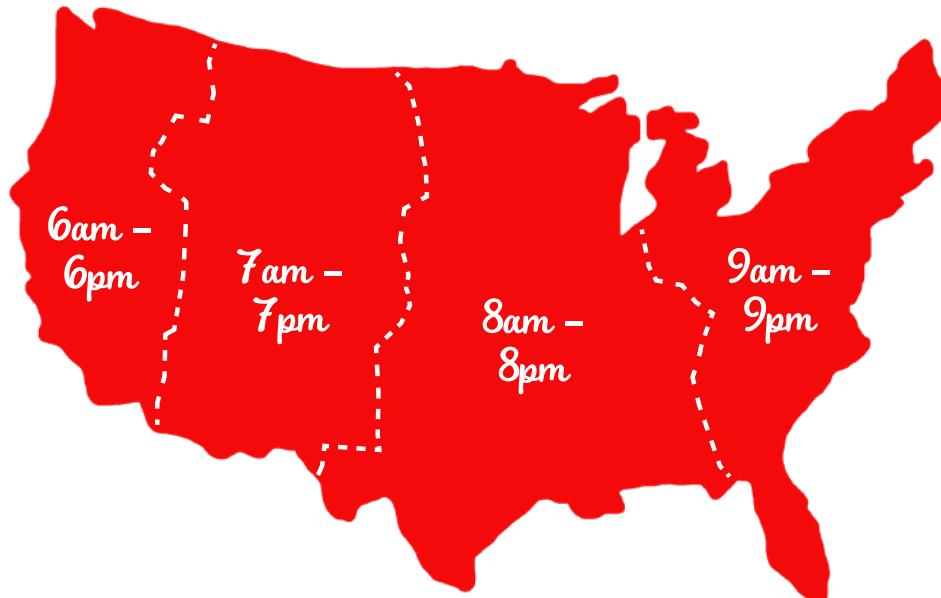

Hey **Hawaii!** You can reach our customer service team from **3AM to 3PM**.
And also, **Alaska**, feel free to reach out from **5AM to 5PM**.

STOREBOUND, LLC – 1 YEAR LIMITED WARRANTY

Your StoreBound product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, StoreBound, LLC will repair or replace the defective part. To process a warranty claim, contact Customer Support at 1 (800) 898-6970 for further assistance and instruction. A Customer Support agent will assist you by troubleshooting minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating the date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. We are unable to ship returns to a PO box. StoreBound will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

Send all inquiries to support@bydash.com.
There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. STOREBOUND SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Refurbished items or items not purchased through an authorized retailer are not eligible for warranty claims.

REPAIRS

DANGER! Risk of electric shock! The Dash Quest Blender is an electrical appliance.
Do not attempt to repair the appliance yourself under any circumstances.
Contact Customer Support regarding repairs to the appliance.

TECHNICAL SPECIFICATIONS

Voltage 120V ~ 60Hz
Power Rating 600W
Stock#: DQB150_20221025_V6



1-800-898-6970 | @bydash | bydash.com