



#DSIM100

 
SHAVED ICE MAKER

Instruction Manual | Recipe Guide



**WELCOME
TO THE FOODIE
FAMILY**

We hope you *love* our
products as much as
our team does. 

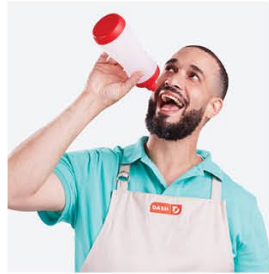



SHAVED ICE MAKER

Important Safeguards.....	4-7
Parts & Features	8-11
Assembling Up Your Maker	12
Using Your Dash Shaved Ice Maker	13-14
Disassembling Your Maker	15-16
Cleaning & Maintenance.....	17
Recipes	19-25
Customer Support	26
Warranty.....	27

IMPORTANT SAFEGUARDS

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

When using electrical appliances, basic safety precautions should always be followed, including:

- Read all instructions
- When using electrical appliances, basic safety precautions should be followed including:
 - Read all instructions.
 - Remove all bags and packaging from appliance before use.
 - Never leave appliance unattended when in use.
 - Make sure the appliance is cleaned thoroughly before using.
 - Do not use appliance for other than its intended use. For household use only. Do not use outdoors.
 - To prevent electric shock, do not submerge the cord, plugs, motor unit, or any electrical parts in water or other liquids.
 - Do not operate the machine without ice. Do not use the appliance to shave or crush substances other than ice.
 - Do not place your fingers in the appliance, as the blades are sharp and may cause injury.
 - Do not attempt to sharpen the blades.
 - In order to prevent the Dash Shaved Ice Maker from overheating, do not operate this appliance for more than 2 minutes continuously. Allow the appliance to rest in between uses.
 - Do not operate this appliance with a damaged cord, damaged plug, after the appliance malfunctions, is dropped, or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- For maintenance other than cleaning, please contact StoreBound directly at 1-800-898-6970 Monday-Friday or by email at support@bydash.com.
- Do not place appliance on or near a hot gas burner, hot electric burner, or in a heated oven.
- Refrain from using attachments that are not recommended by the appliance manufacturer, as this may result in fire, electric shock, or personal injury.
- Do not let the cord touch hot surfaces, or hang over the edges of tables or counters.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience of knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- This appliance is not a toy. Do not let children use this appliance. Close supervision is necessary when any kitchen appliance is used by or near children.
- Always be sure to unplug the appliance from the outlet prior to moving, cleaning, storage, and when not in use.

IMPORTANT SAFEGUARDS

- StoreBound shall not accept liability for damages caused by improper use of the appliance.
- Improper use of the appliance can result in property damage or even in personal injury.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not completely fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- A short power supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. An extension cord may be used if care is exercised in its use. If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

GARANTIES IMPORTANTES

GARANTIES IMPORTANTES: VEUILLEZ LIRE ET CONSERVER CE MANUEL D'INSTRUCTIONS ET D'ENTRETIEN

Lors de l'utilisation d'appareils électriques, les précautions de sécurité de base doivent être suivies, notamment:

- Lisez toutes les instructions.
- Retirez tous les sacs et emballages de l'appareil avant de l'utiliser.
- Ne laissez jamais l'appareil sans surveillance lorsqu'il est utilisé.
- Assurez-vous que l'appareil est bien nettoyé avant de l'utiliser.
- N'utilisez pas l'appareil pour un usage autre que celui prévu. Usage domestique seulement. Ne pas utiliser à l'extérieur.
- Pour éviter les chocs électriques, ne pas plonger le cordon, les fiches, le bloc moteur ou des pièces électriques dans de l'eau ou dans d'autres liquides.
- Ne pas utiliser la machine sans glace. N'utilisez pas l'appareil pour piler des substances autres que la glace.
- Ne placez pas vos doigts dans l'appareil, car les lames sont coupantes et peuvent provoquer des blessures.
- Ne tentez pas d'aiguiser les lames.
- Afin d'éviter la surchauffe de la Machine à Glace Pilée Dash, ne faites pas fonctionner cet appareil plus de 2 minutes de façon continue. Laissez l'appareil reposer entre les utilisations.
- Ne pas utiliser cet appareil si le cordon est endommagé, si la prise est endommagée, après un dysfonctionnement de l'appareil, sa chute, ou si l'appareil est endommagé de quelque manière que ce soit. Retournez cet appareil auprès du centre de service agréé le plus proche pour un examen, une réparation, ou un ajustement.
- Pour tout entretien autre que le nettoyage, contactez directement StoreBound au +1-800-898-6970 du lundi au vendredi ou par email support@dash.com.
- Ne placez pas l'appareil sur ou près d'une source de chaleur telle que: brûleur au gaz ou électrique chaud, ou dans un four chauffé.
- Évitez d'utiliser des pièces non recommandées par le fabricant de l'appareil, car cela peut entraîner un incendie, un choc électrique ou des blessures corporelles.
- Ne pas laisser le cordon d'alimentation toucher à des surfaces chaudes, ou pendre d'un comptoir ou d'une table.
- Cet appareil peut être utilisé par des personnes dont les capacités physiques, sensorielles ou mentales sont réduites ou qui manquent d'expérience et de connaissances, à condition qu'elles aient reçu une supervision ou des instructions concernant l'utilisation de l'appareil en toute sécurité et qu'elles comprennent les risques encourus.

GARANTIES IMPORTANTES

- L'appareil n'est pas un jouet. Ne laissez pas d'enfants utiliser cet appareil. Une étroite surveillance est nécessaire lorsqu'un appareil est utilisé par ou à proximité d'enfants.
- Veuillez toujours à débrancher l'appareil de la prise de courant avant de le déplacer, de le nettoyer, de le ranger et lorsqu'il n'est pas utilisé.
- StoreBound n'accepte aucune responsabilité pour des dommages causés par une utilisation impropre de l'appareil.
- L'utilisation impropre de l'appareil peut entraîner des dommages matériels ou même des blessures corporelles.
- Cet appareil est muni d'une fiche polarisée (une lame est plus large que l'autre). Afin de réduire le risque de choc électrique, cette fiche ne peut être insérée dans une prise polarisée que d'une seule façon. Si la fiche ne rentre pas complètement dans la prise, retournez-la. Si elle ne rentre toujours pas, contactez un électricien qualifié. N'essayez pas de modifier la fiche de quelque façon que ce soit.
- Le cordon d'alimentation est court afin de réduire les risques de blessures ou de dommages pouvant être causés par le fait de trébucher ou de s'emmêler dans le cordon. Une rallonge peut être utilisée si des précautions sont prises lors de son utilisation. Si une rallonge est utilisée, sa capacité électrique doit être équivalente ou supérieure à la puissance de l'appareil. La rallonge doit être arrangée de façon à ne pas pendre d'un comptoir ou d'une table, ou de toute autre surface où des enfants pourraient s'y suspendre ou trébucher inintentionnellement.

 
GARANTIES IMPORTANTES: VEUILLEZ LIRE ET CONSERVER CE MANUEL D'INSTRUCTIONS ET D'ENTRETIEN

PARTS & FEATURES





PARTS & FEATURES

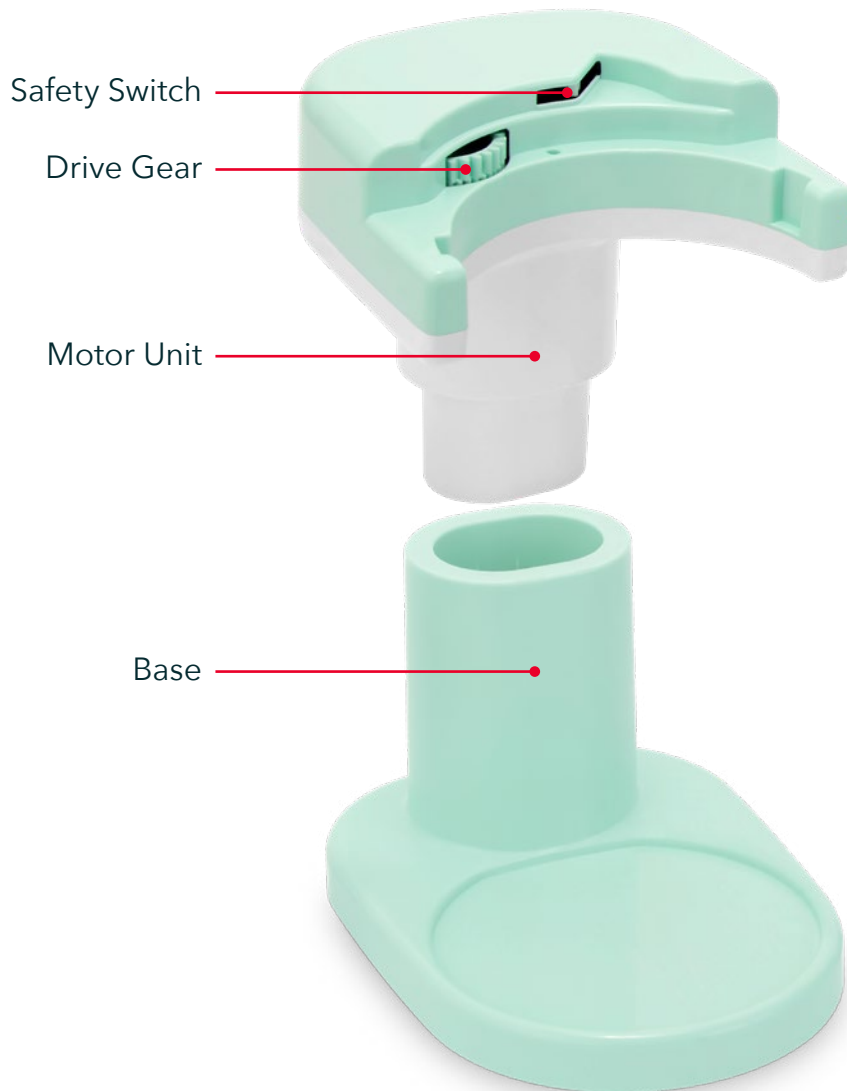

PARTS & FEATURES

 
Interior Bowl



Clear Lid



Gear Hoop

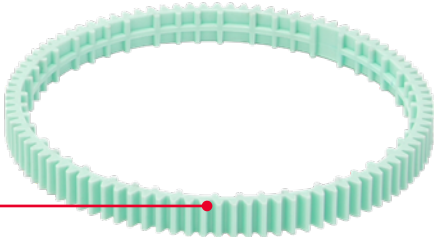


Ice Guard



Dial



 Exterior Bowl

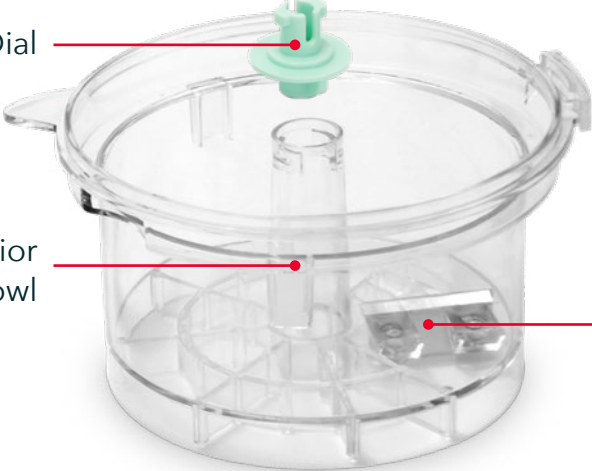

Shaving Blade



ASSEMBLING THE MAKER

TO ASSEMBLE:

After unpacking the Dash Shaved Ice Maker, be sure to clean all parts prior to first use. Refer to pages 10-14 for instructions and details. Prior to assembling the Shaved Ice Maker for use, ensure that the unit is NOT plugged into an electrical outlet. Do NOT assemble the Shaved Ice Maker when it is plugged into an electrical outlet.



- 1 Place the Base on a stable and dry surface.
- 2 Install the Motor Unit on the Base (**photo A**).
- 3 Align and insert the Exterior Bowl onto the assembled Motor Unit and Base (**photo B**). The two notches on the side of the Exterior Bowl should fit into the two notches on the inside of the Motor Unit.
- 4 Once Exterior Bowl is installed, plug in the Power Cord to an electrical outlet.

USING THE MAKER



- 1** Place ice cubes inside the Interior Bowl. The bowl should be filled to the top level. If the ice has been in the freezer for a long time, it may be too hard and may need to rest at room temperature for a few minutes before shaving. The machine will then produce a fluffier snow (**photo A**).
- 2** Place the Clear Lid on top of the Interior Bowl, locking it into place by aligning the fin-shaped notch on the lid with the corresponding notch on the Motor Unit (**photo B**).

USING THE MAKER



- 3** Place an empty bowl on the base of the unit. This bowl will be used to collect the shaved ice. Insert the Ice Guard to help the ice shavings go more directly into the bowl. To insert, slide the Ice Guard into place so that the notches on the Ice Guard and the Exterior Bowl align (**photo C**).
- 4** To activate the machine, turn the lid counter clockwise until the fin-shaped notch activates the Safety Switch (**photo D**). To stop the shaving process, turn the lid clockwise to deactivate the Safety Switch. For optimal results, hold onto the lid during the shaving process to ensure all ice is shaved.

Unplug the Dash Shaved Ice Maker after each use.

DISSASSEMBLING THE MAKER

To prevent injury, always ensure that the appliance is switched off and that it is not plugged into an electrical outlet before assembling or disassembling the Dash Shaved Ice Maker.

TO DISASSEMBLE:



- 1 Once the Shaved Ice Maker is unplugged, remove the Dial from the Interior Bowl by turning it counter clockwise (**photo A**).
- 2 Remove the Interior Bowl (**photo B**).

DISSASSEMBLING YOUR MAKER



- 3** Remove the Gear Hoop and Ice Guard from the Exterior Bowl then remove Exterior Bowl **(photo C)**.

WARNING: The Shaving Blade in the Shaved Ice Maker is sharp! Handle with extreme care. Do not put hands near the Shaving Blade while the Shaved Ice Maker is connected to the power outlet.

- 4** Lift up the Motor Unit to release it from the Base **(photo D)**.

CLEANING & MAINTENANCE

IMPORTANT:

- Disassemble the appliance before cleaning.
- When cleaning, exercise caution and avoid touching the Shaving Blade to prevent injury.
- DO NOT submerge the Motor Unit in water or other liquids. Instead, wipe the Motor Unit with a damp cloth to clean then dry thoroughly.
- Avoid using abrasive cleaning agents when cleaning the appliance.
- All other parts besides the Motor Unit may be washed in warm water with mild soap and rinsed (**photo A**). No part of the Shaved Ice Maker is dishwasher safe; handwash all pieces.
- Dry all parts thoroughly before storing.





RECIPE GUIDE



Follow us!

@bydash | recipes, videos, & inspiration

@unprocessyourfood | veg & vegan-friendly meals

TRADITIONAL FRUITY SHAVED ICE

Directions:

- 1** Assemble the Dash Shaved Ice Maker.
- 2** Before adding to the Shaved Ice Maker, blend or purée fruit in a food processor or blender.
- 3** Then, pour the purée into a saucepan and add the rest of ingredients for the recipe and sugar or sweetener. Cook over medium heat, stirring occasionally until boiling. Turn heat to low and continue to simmer for five minutes then remove from heat. Strain if necessary and place in fridge to chill prior to adding to ice.
- 4** Shave the ice using the Shaved Ice Maker. Pour a tablespoon or two of fully chilled syrup over the shaved ice and enjoy!

COLOR	FLAVOR	INGREDIENTS
Red	Strawberry/ Raspberry	1½ cups strawberries or raspberries 2 tablespoons lemon or lime juice ¾ cup water ¾ cup sugar
Orange	Mango-Pineapple	1 cup pineapple, cubed 1 cup sliced mango ¼ cup sugar
Yellow	Lemon	1½ cups lemon juice 1 cup water 1¼ cups sugar
Green	Coconut-Lime	½ cup lime juice ¼ cup sugar ½ teaspoon green food coloring (add after the syrup has cooled) Toasted coconut, for topping
Blue	Blueberries	1 cup blueberries 1 cup sugar 1 cup water
Purple	Concord Grapes	2 pounds Concord grapes 1½ cups sugar



MILKY SHAVED ICE WITH STRAWBERRIES & KIWI

Prep Time: 10-12 minutes • Inactive Prep Time: 4-6 hours • Serves: 4-6

Ingredients:

2 cups whole milk

1 10-ounce package frozen strawberries, thawed but not drained

3 tablespoons sugar

1 teaspoon fresh lemon juice, more optional

4 tablespoons condensed milk, plus more for serving

Sliced fresh strawberries and kiwi (for serving)

Directions:

1. Fill ice molds with whole milk and place on a level surface in freezer. Freeze until solid, about 4–6 hours.
2. Place frozen strawberries and sugar in a medium saucepan. Bring to a boil over medium heat. Simmer for 5-8 minutes or until saucy. Remove from heat and crush berries with a potato masher or fork. Mix in lemon juice. Taste and add more lemon juice as needed. Chill strawberry sauce until cold, about 45 minutes.
3. Remove frozen milk from freezer and let thaw for five minutes. Place into the Dash Shaved Ice Maker and shave according to directions.
4. To serve, place 1 tablespoon condensed milk and 1 tablespoon strawberry sauce into each glass. Spoon shaved ice on top, dividing evenly.
5. Top shaved ice with fresh strawberries, kiwis, and more strawberry sauce. Then drizzle more condensed milk on top.
6. Serve immediately and enjoy this berry delicious treat!



COLA COOL TREAT

Prep Time: 18-20 minutes • Serves: 4-6

Ingredients:

1 bottle premade cola syrup

Or make your own using 2 liters of cola
(recipe below)

Ice cubes

Directions:

1. For homemade cola syrup, pour 2 liters of cola into saucepan. Bring to a boil over high heat. Once boiling, reduce heat down to a simmer. Simmer for 18-20 minutes.
2. Remove from heat and allow syrup to cool completely. Transfer syrup to a glass bottle and set aside—it's ready to use at any time.
3. Place ice cubes into Dash Shaved Ice Maker and place serving bowl underneath.
4. Begin to shave ice. Once bowl is full, pour cola syrup (homemade or premade) over shaved ice.
5. Serve immediately and enjoy this cola cooldown!



SHAVED WATERMELON SUGAR ICE

Inactive Prep Time: 2 hours • Prep Time: 10 minutes • Serves: 2-3

Ingredients:

4 cups frozen watermelon (cut small)

$\frac{2}{3}$ cup coconut cream, sweetened condensed milk or yogurt (optional)

4 teaspoons honey or any sweetener

Lime slices to garnish, optional

Directions:

1. Cut the watermelon into pieces or buy it pre-cut. Place on a baking sheet and freeze for at least 2 hours.
2. In a small serving bowl, mix the coconut milk with any sweetener of your choice.
3. Place the frozen watermelon into the Dash Shaved Ice Maker, place the coconut milk bowl underneath the Maker, and shave ice onto top of sweetened milk.
4. If desired, garnish with fresh lime juice. Serve immediately and savor this sweet summer treat!



RAINBOW SHAVED ICE

Prep Time: 10-15 minutes • Serves: 1-2

Ingredients:

2 tablespoons strawberry syrup (see pages 20-21)

2 tablespoons pineapple-mango syrup (see pages 20-21)

2 tablespoons blueberry syrup (see pages 20-21)

Directions:

 
1. Prepare fruit syrups as per recipes and directions on pages 20-21.
2. Use the Shaved Ice Maker to shave the desired amount of ice.
3. To create the “rainbow,” you will pour each flavor of syrup in a line across the shaved ice so that each color takes up an equal third of space. Begin by pouring the strawberry syrup in a straight line across one side the shaved ice, leaving room for two more lines of syrup. Pour the pineapple-mango syrup in a line next to the strawberry syrup. Then pour the blueberry syrup in a straight line across the rest of the shaved ice.

CUSTOMER SUPPORT



We want you to Feel Good about your Dash products! Sign up for our Feel Good Rewards program at bydash.com/feelgood to **DOUBLE** your warranty, part of our commitment to quality and customer satisfaction.

We're here to help! Our customer support teams in the US and Canada are at your service Monday - Friday. Contact us at **1 (800) 898-6970** or support@bydash.com.

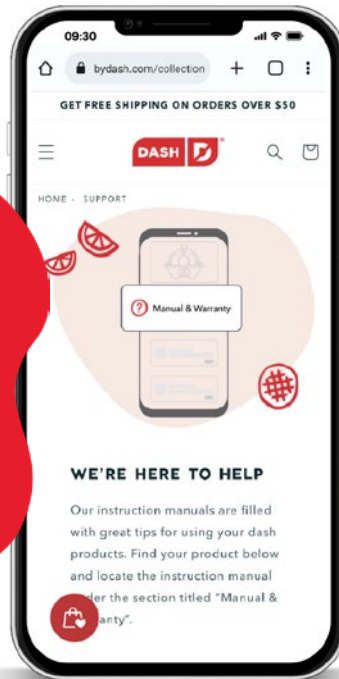

STOREBOUND, LLC - 1 YEAR LIMITED WARRANTY

Your StoreBound product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, StoreBound, LLC will repair or replace the defective part. To process a warranty claim, contact Customer Support at support@bydash.com for further assistance and instruction. A Customer Support agent will assist you by troubleshooting minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating the date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. StoreBound will not ship to a PO Box. StoreBound will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

All replacement inquiries are to be submitted to support@bydash.com or contact Customer Support at 1-800-898-6970. There are no express warranties except as listed above.

Warranty is voided if used outside of the 50 states of the United States, the District of Columbia or the 10 provinces of Canada. Warranty is voided if used with an electric adapter/converter or used with any voltage plug other than 120V.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. STOREBOUND SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Refurbished items or items not purchased through an authorized retailer are not eligible for warranty claims.

REPAIRS

DANGER! Risk of electric shock! The Dash Shaved Ice Maker is an electrical appliance.

Do not attempt to repair the appliance yourself under any circumstances.
Contact Customer Support regarding repairs to the appliance.

TECHNICAL SPECIFICATIONS

Voltage 120V ~ 60Hz

Power Rating 85W

Stock#: DSIM100_20171215_v11



1-800-898-6970 | @bydash | bydash.com