




CHEF SERIES AIR FRYER OVEN AIR FRYER BASKET BUNDLE

AIR FRYER BASKET BUNDLE

Includes

- 1 Oven Rack for the Chef Series Air Fryer Oven
- 1 Air Fry Basket for the Chef Series Air Fryer Oven

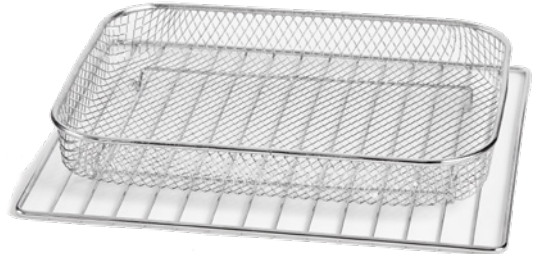

Use & Care

To use the Air Fry Basket, place the Oven Rack inside the Chef Series Air Fryer Oven and rest the Air Fry Basket on top of it. This will allow air to circulate around the Air Fry Basket and cook from all sides.

When air frying foods that may drip, use the Air Fry Basket nested in the Baking Pan that comes with your Chef Series Air Fryer Oven, or with the Baking Pan placed beneath the Air Fry Basket and Oven Rack.

The Air Fry Basket & Oven Rack are **NOT dishwasher safe**. They should be cleaned using warm, soapy water and a soft sponge or soft brush.



WARNING: When removing food, the Air Fry Basket and Oven Rack will be hot. Use a heat-safe oven glove when handling the Air Fry Basket and Oven Rack.



STOREBOUND, LLC – 1 YEAR LIMITED WARRANTY

Your StoreBound product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, StoreBound, LLC will repair or replace the defective part. To process a warranty claim, contact Customer Support at 1-800-898-6970 for further assistance and instruction. A Customer Support agent will assist you by troubleshooting minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating the date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. We are unable to ship returns to a PO box. StoreBound will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

Send all inquiries to support@storebound.com.

There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. STOREBOUND SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Need Help?

Our US-based customer support team is at your service Monday - Friday during the times below.

Reach us at 1 (800) 898-6970 7am-7pm Pacific Time Zone or support@bydash.com

