

#DAFT2350UPDB01

AIR FRYER OVEN **ROTATING BASKET**

Instruction Manual



AIR FRYER OVEN ROTATING BASKET



Parts You Need From Your Air Fryer Oven3

Air Fryer Oven Rotating Basket.....4

Setting Up Your Rotating Basket5-6

Using the Rotating Basket7-8

Removing the Rotating Basket9

Customer Support10

Warranty11

PARTS YOU NEED FROM YOUR AIR FRYER OVEN



Removal Tool



(Spin Side)

(Gear Side)


Rotisserie Bar



(Screws)


Rotisserie Forks

CHEF SERIES AIR FRYER OVEN

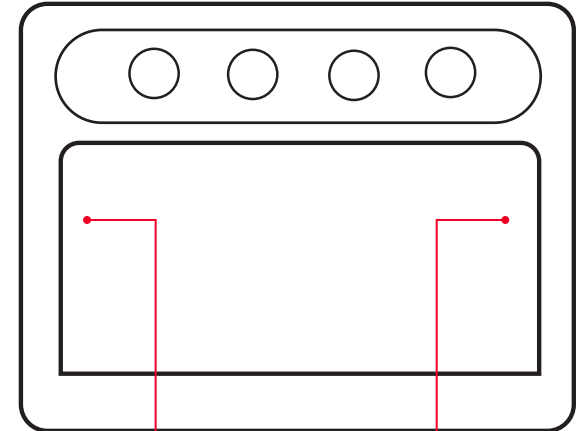




Rotisserie Bar Holder

Inside on the left.

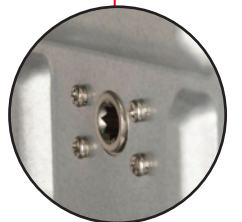

Rotisserie Bar Gear

Inside on the right.

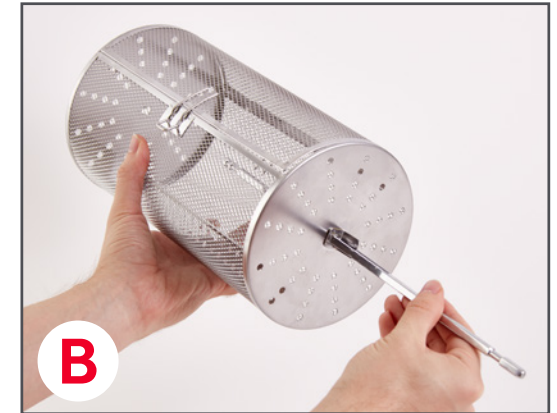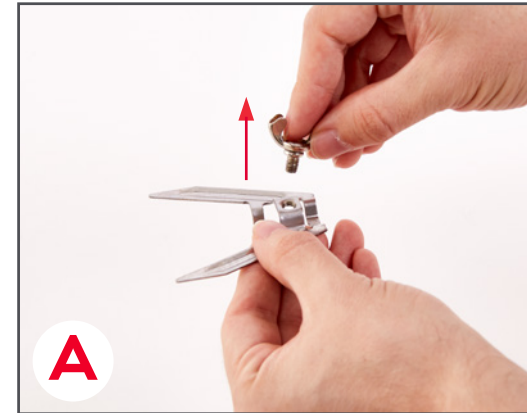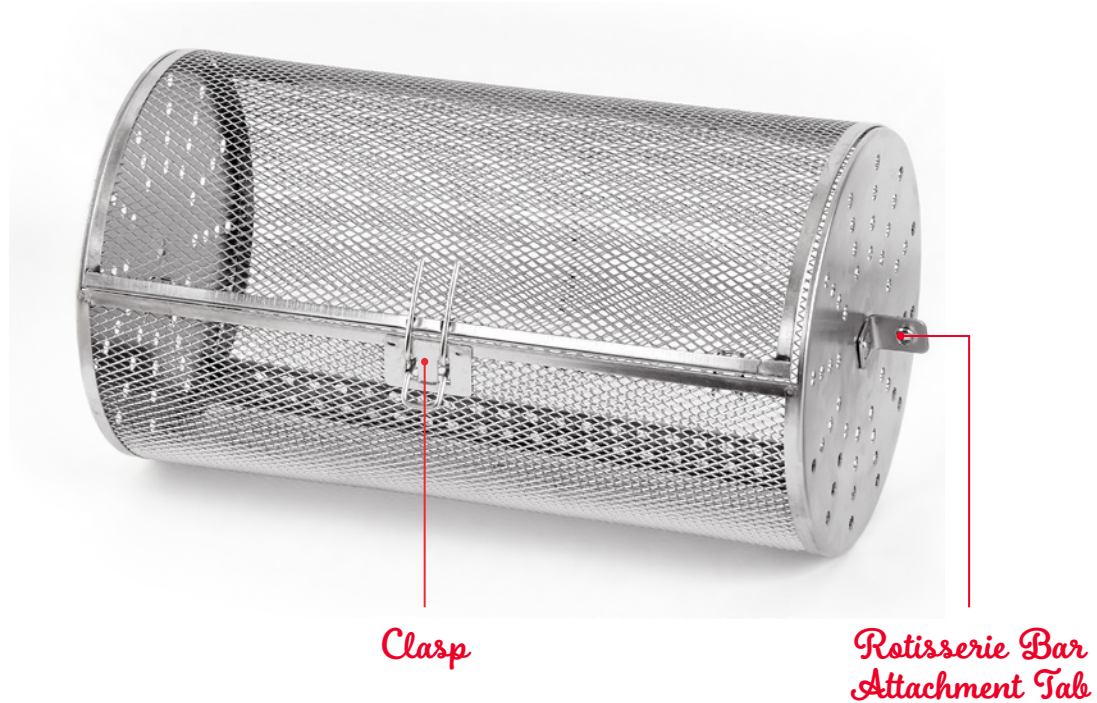

- 1** Carefully remove the Screws from the Rotisserie Forks of your Chef Series Air Fryer Oven (**photo A**). You will need the Screws and the Rotisserie Bar to assemble the Rotating Basket.
- 2** Insert the Rotisserie Bar through the holes on the Rotating Basket, making sure that it goes all the way through to the other side (**photo B**).

SETTING UP YOUR ROTATING BASKET



3 Attach the Screws through the holes on the Attachment Tab of the Rotating Basket, and tighten them so that the Rotating Basket is held in place (photo C). Make sure to secure both sides.

4 Your Rotating Basket is now ready to use (photo D)!

5 Remove any cooking trays from the Chef Series Air Fryer Oven and place the Drip Tray at the bottom of the Air Fryer Oven, beneath the heating element.



USING THE ROTATING BASKET



6 Place any items you wish to cook in the Rotating Basket and close the door of the basket firmly so the Clasp snaps shut (photo E).




7 Open the Air Fryer Oven (photo F) and put the square component of the Rotating Basket into the Rotisserie Bar Gear on the interior right side of the Air Fryer Oven (photo G), making sure it is aligned and fully inserted.



8 Place the Spin Side of the Rotating Basket in the Holder on the other side of the Air Fryer Oven (photo H).



USING THE ROTATING BASKET

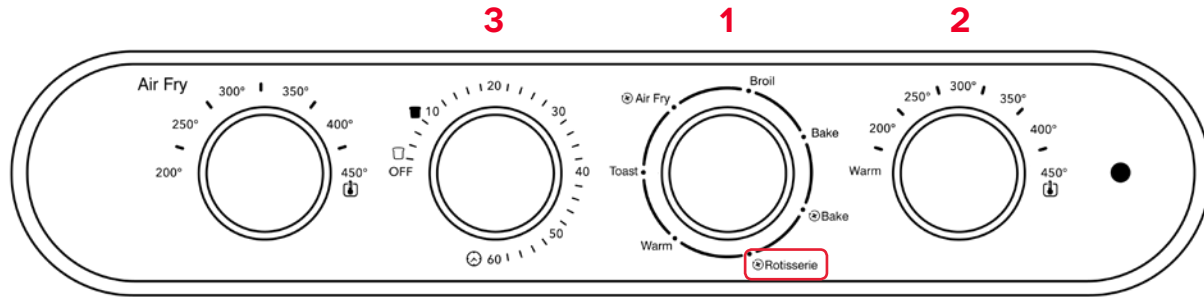

- 9 Turn the Function Dial (1) to the Rotisserie Setting (this will cause the Rotating Basket to rotate). Set the Temperature Dial (2) to your desired temperature. Then, turn the Timer Dial (3) to your desired cooking time to start the oven.
- 10 The Power Light will illuminate. The Timer Dial will ring when cooking is complete. To stop cooking at any time, turn the Timer Dial to the "Off" position.

REMOVING THE ROTATING BASKET



- 11 When cooking is finished, use a kitchen glove and the Removal Tool to take the Rotating Basket out of the Air Fryer Oven (photo I).
NOTE: ALWAYS use the Removal Tool and kitchen gloves, as the Rotating Basket will be hot.
- 12 Allow the Rotating Basket to sit for a few minutes before opening. Open the Rotating Basket using kitchen gloves (photo J).

CLEANING AND MAINTENANCE


To preserve the longevity of the Rotating Basket, it should be hand-washed using soap and water.

Do not put any electric parts of the Dash Chef Series Air Fryer Oven in water.

**FEEL GOOD
GUARANTEE™**

Dash values quality and workmanship and stands behind this product with our Feel Good Guarantee™. To learn more about our commitment to quality, visit bydash.com/feelgood.

Our US-based customer support team is at your service
Monday - Friday during the times below.
Reach us at **1 (800) 898-6970** or support@bydash.com

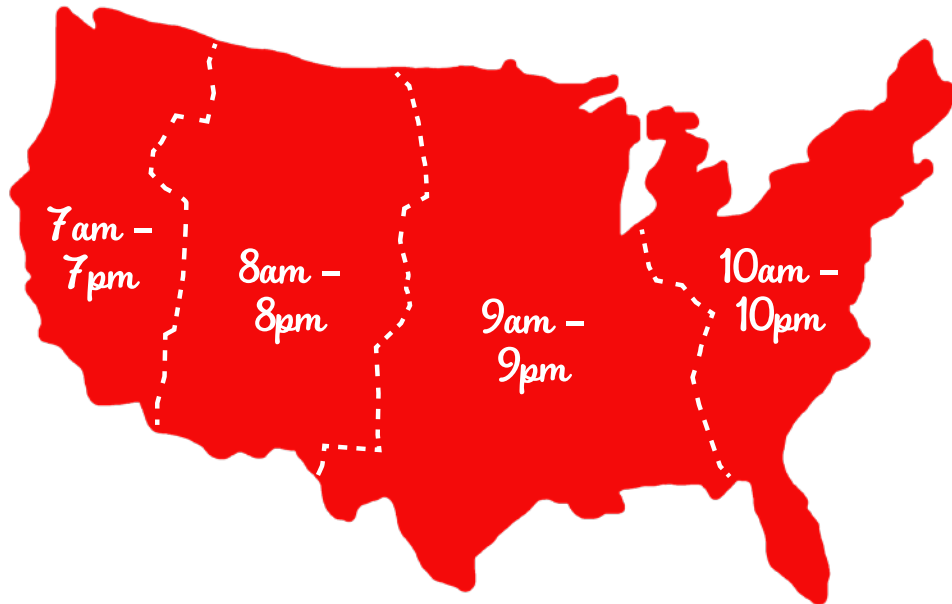

Hey **Hawaii!** You can reach our customer service team from **5AM to 5PM**.
And also, **Alaska**, feel free to reach out from **6AM - 6PM**.

STOREBOUND, LLC – 1 YEAR LIMITED WARRANTY

Your StoreBound product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, StoreBound, LLC will repair or replace the defective part. To process a warranty claim, contact Customer Support at 1-800-898-6970 for further assistance and instruction. A Customer Support agent will assist you by troubleshooting minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating the date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. We are unable to ship returns to a PO box. StoreBound will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

Send all inquiries to support@storebound.com.
There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. STOREBOUND SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

ATTENTION: This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they are provided with supervision and instruction concerning use of the appliance by a person responsible for their safety.

DAFT2350UPDB01_20191016_v1
Made in China



1-800-898-6970 | @unprocessyourfood | bydash.com