



DAPP150V2

FRESH POP POPCORN MAKER

Instruction Manual | Recipe Guide



**WELCOME
TO THE FOODIE
FAMILY**

We hope you *love* our products as much as our team does.




FRESH POP POPCORN MAKER



Important Safeguards.....	4-9
Parts & Features.....	11
Using Your Popcorn Maker	12-15
Tips & Tricks.....	16
Cleaning & Maintenance	17
Recipes.....	19-29
Customer Support.....	30
Warranty.....	31

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

When using electrical appliances, basic safety precautions should always be followed, including:

- Read all instructions before use.
- Remove all bags and packaging from appliance before use.
- Never leave appliance unattended when in use.
- Make sure the appliance is cleaned thoroughly before using.
- Do not use appliance for other than intended use. For household use only. Do not use outdoors.
- Only use the appliance on a stable, dry surface.
- ATTENTION: This appliance cannot be used with an external timer or a separate remote control.
- Do not place appliance on or near a hot gas burner, hot electric burner, or in a heated oven.
- Do not put the product in high temperature environments, close to strong magnets, flammable materials including gas, etc. in order to avoid fire accidents.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- This appliance can be used by persons with reduced physical, sensory, or mental capabilities or lack of experience of knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- This appliance is not a toy. Do not let children use this appliance. Close supervision is necessary when any kitchen appliance is used by or near children.
- The Popcorn Maker will not shut off

- automatically. To avoid overheating, please add popcorn kernels before operating. Do not operate the appliance without popcorn kernels.
- Do not touch hot surfaces. Use oven gloves when handling hot surfaces.
- Do not flip the popcorn maker without oven gloves.
- DO NOT use the Popcorn Maker near water or other liquids, with wet hands, or while standing on a wet surface.
- To prevent the risk of fire, electric shock, or personal injury, do not put cord, plug, or appliance in or near water or other liquids. The Popcorn Maker is NOT dishwasher safe.
- Do not let the cord touch hot surfaces or hang over the edge of tables or counters.
- Do not pull, bend, or compress the power cord with heavy objects to avoid accidents such as electric shock or fire.
- Refrain from using attachments that are not recommended by the appliance manufacturer, as this may result in fire, electric shock, or personal injury.
- After turning the power on, do not attempt to disassemble the Popcorn Maker. Do not put spoons or other utensils into the popcorn maker.
- Allow the appliance to rest for at least 10 minutes between popping cycles.
- Do not exceed a 5-minute maximum continuous usage time.
- Unplug the appliance and allow to cool prior to assembly/disassembly, moving, cleaning, storage, and when not in use. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
- Do not submerge the base or any electric parts in liquid.
- Do not operate this appliance with a damaged cord, damaged plug, after the appliance malfunctions, is dropped, or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- For maintenance other than cleaning, please contact StoreBound directly at 1-800-898-6970 Monday – Friday or by email at support@bydash.com.

- StoreBound shall not accept liability for damages caused by improper use of the appliance.
- Improper use of the appliance can result in property damage or even in personal injury.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not completely fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- A short power supply cord is to be provided to reduce the risk

resulting from becoming entangled in or tripping over a longer cord. An extension cord may be used if care is exercised in its use. If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be a grounding 3-wire cord. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

GARANTIES IMPORTANTES: VEUILLEZ LIRE ET CONSERVER CE MODE D'EMPLOI ET D'ENTRETIEN

Lors de l'utilisation d'appareils électriques, il faut toujours respecter les précautions de sécurité de base, notamment:

- Lisez toutes les instructions avant utilisation.
- Retirez tout sac ou emballage de l'appareil avant utilisation.
- Ne laissez jamais l'appareil sans surveillance pendant son utilisation.
- Assurez-vous que l'appareil est minutieusement nettoyé avant utilisation.
- N'utilisez pas l'appareil en dehors de son utilisation prévue. Pour usage ménager uniquement. Ne l'utilisez pas à l'extérieur.
- N'utilisez l'appareil que sur une surface stable et sèche.
- ATTENTION : Cet appareil ne peut pas être utilisé avec une minuterie externe ou un télécommande.
- Ne placez pas l'appareil sur ou à proximité d'un brûleur à gaz ou électrique, ou d'un four chaud.
- Ne placez pas le produit dans des environnements à haute température, à proximité d'aimants puissants, de matériaux inflammables, notamment de gaz, etc. afin d'éviter les accidents d'incendie.
- Une extrême prudence doit être utilisée lors du déplacement d'un appareil contenant de l'huile chaude ou d'autres liquides chauds.
- Cet appareil peut être utilisé par des personnes dont les capacités physiques, sensorielles ou mentales sont réduites ou qui manquent d'expérience et de connaissances, à condition qu'elles aient reçu une supervision ou des instructions concernant l'utilisation de l'appareil en toute sécurité et qu'elles comprennent les risques encourus.

- Cet appareil n'est pas un jouet. Ne laissez pas d'enfants utiliser cet appareil. Une étroite surveillance est nécessaire lorsqu'un appareil est utilisé par ou à proximité d'enfants.
- La machine à pop-corn ne s'éteindra pas automatiquement. Afin d'éviter une surchauffe, veuillez ajouter les grains de maïs avant le fonctionnement. N'utilisez pas l'appareil sans grain de maïs.
- Ne touchez pas les surfaces chaudes. Utilisez des gants de cuisine lorsque vous manipulez des surfaces chaudes.
- Ne retournez pas la machine à pop-corn sans gants de cuisine.
- N'utilisez PAS la machine à pop-corn à proximité de l'eau ou d'autres liquides, avec des mains mouillées, ou si vous vous tenez sur une surface mouillée.
- Afin d'éviter les risques de feux, d'électrocution, ou de dommages corporels, ne mettez pas le cordon, la prise ou l'appareil dans ou à proximité de l'eau ou d'autres liquides. La machine à pop-corn n'est PAS lavable en machine.
- Ne laissez pas le cordon toucher des surfaces chaudes ou pendre au niveau des bords de tables ou de comptoirs.
- Ne tirez pas, ne pliez pas ou ne comprimez pas le cordon d'alimentation avec des objets lourds pour éviter des accidents tels qu'un choc électrique ou un incendie.
- Évitez d'utiliser des accessoires qui ne sont pas recommandés par le fabricant de l'appareil, car ils pourraient entraîner un feu, une électrocution ou un dommage corporel.
- Après avoir mis l'appareil sous tension, n'essayez pas de démonter la machine à pop-corn. Ne mettez pas de cuillères ou d'autres ustensiles dans la machine à pop-corn.
- Laissez l'appareil reposer pendant au moins 10 minutes entre les cycles d'éclatement.
- Ne dépassez pas les 5 minutes de temps maximal d'utilisation continue.
- Débrancher l'appareil et laissez refroidir avant montage/démontage, déplacement, nettoyage ou entreposage. Pour débrancher, saisissez la fiche et retirez-la de la prise. Ne tirez jamais sur le cordon d'alimentation.
- Ne plongez pas la base ni aucune

pièce électrique dans du liquide.

- N'utilisez pas cet appareil avec un cordon endommagé, une prise endommagée, ou si l'appareil est défaillant, s'il est tombé ou endommagé de quelque façon. Pour toute inspection, réparation ou ajustement, ramenez l'appareil au détaillant agréé le plus proche.
- Pour toute question liée à l'entretien autre que le nettoyage, veuillez contacter StoreBound directement au 1-800-898-6970 du lundi au vendredi, ou par courriel à support@bydash.com.
- StoreBound n'est nullement responsable des dommages causés par une mauvaise utilisation de l'appareil.
- Une mauvaise utilisation de l'appareil peut entraîner des dommages matériels ou même des blessures corporelles.
- Cet appareil a une fiche polarisée (un des brins est plus large que

l'autre). Afin de réduire le risque d'électrocution, cette fiche ne s'insère dans la prise électrique que d'une façon. Si la fiche ne s'insère pas complètement dans la prise, inversez la fiche. Si elle ne s'insère toujours pas, contactez un électricien qualifié. N'essayez pas de modifier la fiche de quelque façon que ce soit.

- Un cordon d'alimentation court doit être fourni afin d'éviter le risque d'emmêlement ou de trébuchement lié aux cordons plus longs. Une rallonge peut être utilisée à condition de faire attention. Si une rallonge est utilisée, la puissance électrique indiquée sur la rallonge doit être au moins aussi grande que celle de l'appareil. Si l'appareil est connecté à la terre, la rallonge doit être un cordon tripolaire avec prise de terre. La rallonge doit être disposée de manière à ne pas reposer sur le comptoir ou sur la table où elle peut être tirée par un enfant ou source de trébuchement involontaire.

GARANTIES IMPORTANTES:
VEUILLEZ LIRE ET CONSERVER CE
MODE D'EMPLOI ET D'ENTRETIEN



PARTS & FEATURES



USING THE POPCORN MAKER

NOTE: Wash the Popcorn Maker and parts with a damp cloth prior to use. Dry before using.

WARNING: DO NOT put butter into the Aluminum Heat Chamber.

CAUTION: Aluminum Heat Chamber will get very hot. NEVER insert fingers into the chamber while the Maker is cooking. Avoid touching the Maker after cooking until it has completely cooled.



- 1 Prior to cooking, assemble the Popcorn Maker by placing the Top Cover onto the Body until it clicks into place (**photo A**). To begin cooking, set the Popcorn Maker on a flat and stable surface.
- 2 Using the Measuring Cup, add one Measuring Cup of kernels into the Aluminum Heat Chamber through the Popcorn Inlet (**photo B**). **Note:** One Measuring Cup is the maximum amount of kernels that can be added for one cooking cycle. Any more than that will prevent the appliance from functioning.

USING THE POPCORN MAKER



- 3 Put the Measuring Cup back on the Top Cover after each use. It is optional to place a tablespoon of butter into the Measuring Cup for melting while the Maker pops the corn (**photo C**).
- 4 Place a large bowl under the Spout so that the edge of the bowl is touching the Body of the Popcorn Maker. Be sure that there is nothing blocking the Spout so the popcorn can eject properly (**photo D**).

USING THE POPCORN MAKER



- 5** To begin cooking, press the Power Button (**photo E**). The Maker will begin heating.
- 6** After a few minutes, popcorn will begin to eject from the Maker, and cooking will continue until all kernels are popped. The popping cycle will last about 3 minutes (**photo F**).

CAUTION: The Popcorn Maker gets very hot. Refrain from touching the Top Cover or Measuring Cup while it's cooking. Don't touch until completely cool.

USING THE POPCORN MAKER



- 7** Once popping is complete, turn the unit off by pressing the Power Button to "Off." Then unplug the unit (**photo G**).
- 8** Once the Popcorn Maker has cooled, carefully remove the butter-filled Measuring Cup and pour the melted butter onto the freshly popped popcorn. Mix the popcorn well to distribute the butter evenly (**photo H**).

- Always ensure that the Spout is securely in place before turning the Popcorn Maker on.
- Always place a large bowl under the Spout to catch popped corn before turning the Popcorn Maker.
- After the first popping cycle, wait for approximately 10 to 12 minutes before using the Popcorn Maker again.
- To melt butter, place a small amount in the Measuring Cup and place it on the Top Cover during the popping process.
- Never put the butter in the Aluminum Heat Chamber.
- If the butter isn't entirely melted after a popping cycle, leave the unit on for a few more minutes to let the hot air melt the butter.
- **DO NOT** exceed one Measuring Cup of kernels in one cycle as this will overflow the machine.
- The minimum amount of kernels for one popping cycle is ½ of the Measuring Cup. **DO NOT** use less than this as this will result in burnt popcorn.
- For best results use fresh kernels. Old kernels may be dry and fail to pop. If kernels are dry, try placing them to a 12-ounce sealable jar with 1 teaspoon of water. Seal, shake, and let sit overnight to rehydrate.

KERNELS	POPPED CORN
1 Measuring Cup	16 Cups
½ Measuring Cup	8 Cups

- Unplug the unit before attempting to disassemble or clean it.
- Allow the Popcorn Maker to cool completely before disassembling and cleaning it.
- Clean the Body of the Popcorn Maker including the inner Aluminum Heating Chamber with a damp cloth. Never immerse the Body of the Popcorn Maker in water. Never use metal or abrasive cleaning agents as they will damage the Maker.
- The Top Cover and the Measuring Cup can be cleaned in warm soapy water.
- Store the clean, dry, unplugged Popcorn Maker in a safe, dry place out of the reach of children.



RECIPE GUIDE



Follow us!

@bydash | recipes, videos, & inspiration

@unprocessyourfood | veg & vegan-friendly meals



MOVIE THEATER POPCORN

Prep Time: 3-5 minutes • Cook Time: 5-10 minutes • Serves: 16 cups popcorn

Ingredients:

- 1 Measuring Cup kernels
- 4 tablespoons butter
- Dash of salt

Directions:

1. Add 1 Measuring Cup of kernels into the Aluminum Heating Chamber through the Popcorn Inlet. Add 4 tablespoons of butter for melting to the Measuring Cup and place it back on the top of the Top Cover.
2. Place a large bowl directly underneath the Spout. To begin cooking, press the power button on the Base. After a few moments, popped corn will begin ejecting from the Spout with the full popping cycle taking about 3 minutes.
3. Once popping is complete, remove the Measuring Cup of melted butter from the Top Cover and pour it over the popcorn. Sprinkle with a dash of salt and mix with tongs to distribute evenly.
4. Serve hot, start snacking, and hit play on movie night!





HOMEMADE UNPROCESSED POP

Prep Time: 2-3 minutes • *Cook Time:* 5-10 minutes • *Serves:* 16 cups popcorn

Ingredients:

1 Measuring Cup kernels
4 tablespoons coconut oil
Dash of salt

Directions:

1. Add 1 Measuring Cup of kernels into the Aluminum Heating Chamber through the Popcorn Inlet. Add 4 tablespoons of solidified coconut oil for melting to the Measuring Cup and place it back on the top of the Top Cover.
2. Place a large bowl directly underneath the Spout. To begin cooking, press the power button on the Base. After a few moments, popped corn will begin ejecting from the Spout with the full popping cycle taking about 3 minutes.
3. Once popping is complete, remove the Measuring Cup of coconut oil from the Top Cover and pour it over the popcorn. Sprinkle with a dash of salt and mix with tongs to distribute evenly.
4. Serve and pop this vegan snack like it's hot!



SPICY RANCH POPCORN

Prep Time: 3-5 minutes • *Cook Time:* 5-10 minutes • *Serves:* 16 cups popcorn

Ingredients:

1 Measuring Cup kernels
3 tablespoons butter, melted
3 teaspoons garlic powder
3 teaspoons dried parsley
3 teaspoons cayenne pepper
3 teaspoons dried chives

Directions:

1. Add 1 Measuring Cup of kernels into the Aluminum Heating Chamber through the Popcorn Inlet.
2. Place a large bowl directly underneath the Spout. To begin cooking, press the power button on the Base. After a few moments, popped corn will begin ejecting from the Spout with the full popping cycle taking about 3 minutes.
3. In a small dish, combine the melted butter and spices. Slowly pour the spice mixture over the popped corn while mixing with tongs. Continue mixing until kernels are fully coated.
4. Serve and enjoy this crowd-pleasing favorite!



CHEESY CHEDDAR POPCORN

Prep Time: 3-5 minutes • *Cook Time:* 5-10 minutes • *Serves:* 16 cups popcorn

Ingredients:

- 1 Measuring Cup kernels
- 4 tablespoons butter
- 1 teaspoon mustard powder
- 1 cup cheese powder
- 1 teaspoon red chili powder

Directions:

1. Add 1 Measuring Cup of kernels into the Aluminum Heating Chamber through the Popcorn Inlet. Add 4 tablespoons of butter for melting to the Measuring Cup and place it back on the top of the Top Cover.
2. Place a large bowl directly underneath the Spout. To begin cooking, press the power button on the Base. After a few moments, popped corn will begin ejecting from the Spout with the full popping cycle taking about 3 minutes.
3. Once popping is complete, remove the Measuring Cup of melted butter from the Top Cover and pour it over the popcorn. Pour remaining ingredients on top and toss the popcorn with tongs until all kernels are fully coated.
4. Serve, snack, and say cheeessee!



EASY CARAMEL CORN

Prep Time: 3-5 minutes • *Cook Time:* 10-12 minutes • *Serves:* 16 cups popcorn

Ingredients:

- 1 Measuring Cup kernels
- 1/2 cup butter
- 1 cup brown sugar
- 1/4 cup milk
- 1 teaspoon vanilla extract

Directions:

1. Add 1 Measuring Cup of kernels into the Aluminum Heating Chamber through the Popcorn Inlet.
2. Place a large bowl directly underneath the Spout. To begin cooking, press the power button on the Base. After a few moments, popped corn will begin ejecting from the Spout with the full popping cycle taking about 3 minutes.
3. To prepare the caramel sauce, add the brown sugar, butter, and milk to a small saucepan on the stovetop. Bring to a gentle boil and cook until thickened, about 1 to 2 minutes. Remove from heat and stir in the vanilla extract.
4. Drizzle the caramel mixture over the popcorn and mix with tongs until all kernels are fully covered. Allow the popcorn to cool by spreading it out onto a cookie sheet covered with aluminum foil.
5. Serve when cooled and enjoy this carnival classic!



CASHEW CARAMEL CORN

Prep Time: 3-5 minutes • *Cook Time:* 15-20 minutes • *Serves:* 16 cups popcorn

Ingredients:

1 Measuring Cup kernels	2 cups cashews
½ cup coconut sugar	¾ cups butter
¼ teaspoon baking soda	1½ cups light brown sugar, packed
½ teaspoon vanilla	

Directions:

1. Add 1 Measuring Cup of kernels into the Aluminum Heating Chamber through the Popcorn Inlet.
2. Place a large bowl directly underneath the Spout. To begin cooking, press the power button on the Base. After a few moments, popped corn will begin ejecting from the Spout with the full popping cycle taking about 3 minutes.
3. Prepare the caramel coating by combining the sugars and butter in a small saucepan. Cook over medium heat until it comes to a boil, about 5 minutes. Stir continuously. Remove from heat, and then stir in vanilla and baking soda.
4. Top the popcorn with the cashews and caramel and mix with tongs until all kernels are fully coated. Spread onto a cookie sheet lined with parchment paper and bake at 300°F for 15-20 minutes, turning once.
5. Serve, snack, and go nuts!



SPICY JALAPEÑO POPCORN

Prep Time: 3-5 minutes • *Cook Time:* 5-10 minutes • *Serves:* 16 cups popcorn

Ingredients:

1 Measuring Cup kernels
4 tablespoons coconut oil
1 teaspoon jalapeño flakes

Directions:

1. Add 1 Measuring Cup of kernels into the Aluminum Heating Chamber through the Popcorn Inlet. Add 4 tablespoons of solidified coconut oil for melting to the Measuring Cup and place it back on the top of the Top Cover.
2. Place a large bowl directly underneath the Spout. To begin cooking, press the power button on the Base. After a few moments, popped corn will begin ejecting from the Spout with the full popping cycle taking about 3 minutes.
3. Once popping is complete, remove the Measuring Cup of melted coconut oil from the Top Cover and pour it over the popcorn.
4. Sprinkle jalapeño flakes over the popcorn and mix with tongs until all kernels are fully coated.
5. Serve hot to bring some spice to movie night!



S'MORES POPCORN

Prep Time: 3-5 minutes • Cook Time: 5-10 minutes • Serves: 16 cups popcorn

Ingredients:

1 Measuring Cup kernels ½ cup mini marshmallows
2 cups of Golden Grahams™ Cereal ½ cup chocolate chips

Directions:


1. Add 1 Measuring Cup of kernels into the Aluminum Heating Chamber through the Popcorn Inlet.
2. Place a large bowl directly underneath the Spout. To begin cooking, press the power button on the Base. After a few moments, popped corn will begin ejecting from the Spout with the full popping cycle taking about 3 minutes.
3. Add marshmallows and Golden Grahams™ to the popcorn bowl and mix with tongs. Spread mixture on a baking sheet.
4. Melt the chocolate in the microwave, 15 seconds at a time, stirring in between cycles to prevent burning.
5. Drizzle chocolate over the popcorn mixture and allow to harden, about 10 minutes.
6. Pass this sweet favorite around the campfire and enjoy!





We want you to Feel Good about your Dash products! Sign up for our Feel Good Rewards program at bydash.com/feelgood to DOUBLE your warranty, part of our commitment to quality and customer satisfaction.

We're here to help! Our customer support teams in the US and Canada are at your service Monday - Friday. Contact us at **1 (800) 898-6970** or support@bydash.com.

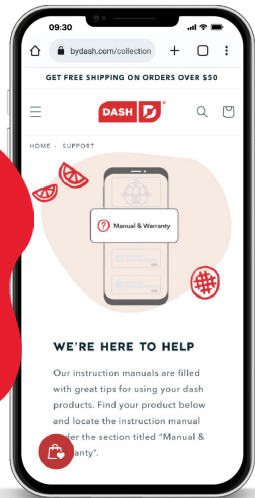

STOREBOUND, LLC - 1 YEAR LIMITED WARRANTY

Your StoreBound product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, StoreBound, LLC will repair or replace the defective part. To process a warranty claim, contact Customer Support at support@bydash.com for further assistance and instruction. A Customer Support agent will assist you by troubleshooting minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating the date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. StoreBound will not ship to a PO Box. StoreBound will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

All replacement inquiries are to be submitted to support@bydash.com or contact Customer Support at 1-800-898-6970. There are no express warranties except as listed above.

Warranty is voided if used outside of the 50 states of the United States, the District of Columbia or the 10 provinces of Canada. Warranty is voided if used with an electric adapter/convertor or used with any voltage plug other than 120V.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. STOREBOUND SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Refurbished items or items not purchased through an authorized retailer are not eligible for warranty claims.

REPAIRS

DANGER! Risk of electric shock! The Dash Fresh Pop Popcorn Maker is an electrical appliance. Do not attempt to repair the appliance yourself under any circumstances. Contact Customer Support regarding repairs to the appliance.

COPYRIGHT NOTICES

All trademarks not owned by StoreBound that appear in the manual are property of their respective owners, who are not affiliated with StoreBound.

Golden Grahams™ is a trademark of General Mills IP Holdings II, LLC.

TECHNICAL SPECIFICATIONS

Voltage 120V ~ 60Hz
Power Rating 1400W
Stock#: DAPP150V2_20170809_V17



This product has passed food safety testing in accordance with FDA guidelines.



1-800-898-6970 | @bydash | bydash.com