



# DBB800

# SUPERSQUEEZE™ **BATTER BOTTLE**

Instruction Manual






# SUPERSQUEEZE™ BATTER BOTTLE

Parts & Features .....	4
Using Your Batter Bottle .....	5-7
Tips & Tricks .....	8
Care & Use .....	9
Sweet Ideas.....	10-11
Notes.....	12-13
Customer Support .....	14
Warranty.....	15

 *the dash team!*

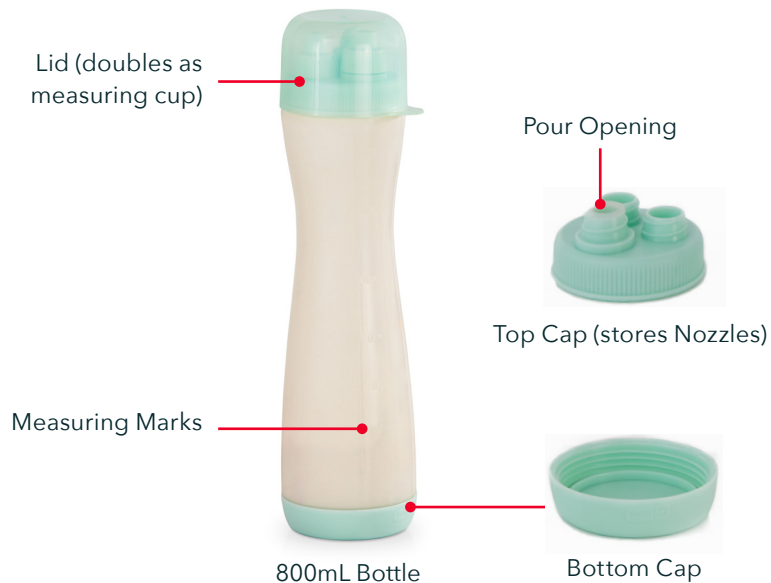

Thin Nozzle



Medium Nozzle



Thick Nozzle



Gasket



- 1** Unscrew the Top or Bottom Cap from the Batter Bottle. **(photo A).**
- 2** Add your ingredients to the Bottle. The more liquid the batter, the easier it will be to pour using the Batter Bottle. **(photo B).**

## USING YOUR BATTER BOTTLE



- 3 Attach the Top Cap securely (photo C).
- 4 Choose your Nozzle and attach it to the Pour Opening. The other two rings on the the Batter Bottle can be used to hold Nozzles while not in use, but do not work to pour batter (photo D).

## USING YOUR BATTER BOTTLE



- 5 Turn the Batter Bottle upside down and squeeze to pour (photo E).
- 6 When finished pouring, attach the Lid for storage (photo F).  
**NOTE:** The lid is not spill-proof so only store upright.



The SuperSqueeze™ Batter Bottle performs best with thin batters like icing and pancake mix. Thick batter like cookie dough or donut mix will be more difficult to pour using the Batter Bottle.



Do not use chunky ingredients like chocolate chips or large sprinkles in the Batter Bottle, as they may get stuck in the Nozzles and clog the bottle or be difficult to remove.



**WARNING:** Do not fill the Batter Bottle with hot ingredients like hot oil or melted chocolate. The plastic of the batter bottle poses risk of burning if touched with hands, and it is not designed to hold hot liquid.

Your Batter Bottle and Nozzles are top-rack dishwasher safe. They can also be cleaned using a soft sponge and warm, soapy water.

The Batter Bottle is NOT microwave safe.

The Nozzles of your Batter Bottle are heat safe up to 400°F. Do not rest or set the Batter Bottle on hot surfaces for extended periods of time.



Silicone Gasket inside of the top cap is removable for easy cleaning and is Top Rack Dishwasher Safe.

# SWEET IDEAS

## *Store Leftovers*

Save batter and sauces in the fridge for meals that are easy to assemble.



## *Pancake Art*

Use the Thin Nozzle for fine lines and the Thick Nozzle to fill.

## *Rainbow Waffles*

Use a second Batter Bottle to alternate colors in your waffle maker.



## *Creative Plating*

Serve up aioli and savory sauces with a restaurant-style twist!






**FEEL GOOD  
GUARANTEE™**

Dash values quality and workmanship and stands behind this product with our Feel Good Guarantee™. To learn more about our commitment to quality, visit [bydash.com/feelgood](http://bydash.com/feelgood).

Our customer support teams in the US and Canada are at your service Monday - Friday during the times below. Contact us at **1 (800) 898-6970** or [support@bydash.com](mailto:support@bydash.com)

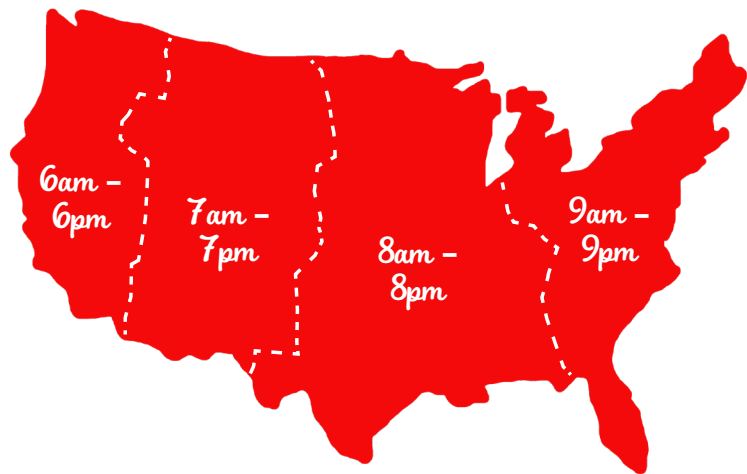

Hey **Hawaii!** You can reach our customer service team from **3AM to 3PM**. And also, **Alaska**, feel free to reach out from **5AM to 5PM**.

**STOREBOUND, LLC - 1 YEAR LIMITED WARRANTY**

Your StoreBound product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, StoreBound, LLC will repair or replace the defective part. To process a warranty claim, contact Customer Support at 1-800-898-6970 for further assistance and instruction. A Customer Support agent will assist you by troubleshooting minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating the date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. We are unable to ship returns to a PO box. StoreBound will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

Send all inquiries to [support@bydash.com](mailto:support@bydash.com).

There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. STOREBOUND SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

**REPAIRS**

Do not attempt to repair the appliance yourself under any circumstances. Contact Customer Support regarding repairs to the appliance.

**TECHNICAL SPECIFICATIONS**

Stock#: [DBB800\\_20210728\\_V3](#)

Made in China







1-800-898-6970 | @bydash | bydash.com