



 
# DCJ100

# COMPACT POWER JUICER


Instruction Manual | Recipe Guide



# COMPACT POWER JUICER

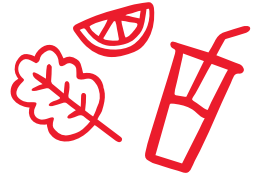

 **WELCOME TO THE FOODIE FAMILY**  
We hope you *love* our products as much as our team does. 

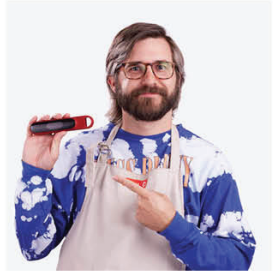

- Important Safeguards..... 4-5
- Parts & Features .....6
- Setting Up The Compact Power Juicer..... 7-9
- Using The Compact Power Juicer ..... 11-13
- Cleaning & Maintenance..... 14
- Recipes ..... 17-25
- Customer Support ..... 26
- Warranty ..... 27

## IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

When using electrical appliances, basic safety precautions should always be followed, including:

- Read all instructions before use.
- Remove all bags and packaging from appliance.
- Only use the appliance on a stable, dry surface.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience of knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- This appliance is not a toy. Do not let children use this appliance. Close supervision is necessary when any kitchen appliance is used by or near children.
- This appliance is NOT intended for commercial use. This appliance is suitable to be used in a household environment such as:
  - Home or office kitchen.
  - Hotel or motel rooms and other residential settings.
  - Guest rooms or similar.
- **ATTENTION:** This appliance cannot be used with an external timer or a separate remote control.
- Before use, check if the voltage indicated on the appliance corresponds with the voltage of your power net.
- Do not let the cord hang on a hot surface or over the edge of a table or counter top.
- Never use the appliance when the cord or plug is damaged, after malfunction or when the appliance is damaged. In that case, take the appliance to the nearest qualified service center for check-up and repair.
- For maintenance other than cleaning, please contact StoreBound directly at 1-800-898-6970 Monday-Friday or by email at support@bydash.com.
- Close supervision is necessary when the appliance is used by or near children.
- StoreBound shall not accept liability for damages caused by improper use of the appliance.
- Improper use of the appliance can result in property damage or even in personal injury.
- Turn the appliance OFF, then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
- Never let the machine work for longer than 20 minutes at a time.

## GARANTIES IMPORTANTES: VEUILLEZ LIRE ET CONSERVER CE MODE D'EMPLOI ET D'ENTRETIEN

Lors de l'utilisation d'appareils électriques, il faut toujours respecter les précautions de sécurité de base, notamment:

- Lisez toutes les instructions avant utilisation.
- Retirez tous les sacs et emballages de l'appareil
- N'utilisez l'appareil que sur une surface stable et sèche.
- Cet appareil peut être utilisé par des personnes dont les capacités physiques, sensorielles ou mentales sont réduites ou qui manquent d'expérience et de connaissances, à condition qu'elles aient reçu une supervision ou des instructions concernant l'utilisation de l'appareil en toute sécurité et qu'elles comprennent les risques encourus.
- L'appareil n'est pas un jouet. Ne laissez pas d'enfants utiliser cet appareil. Une étroite surveillance est nécessaire lorsqu'un appareil est utilisé par ou à proximité d'enfants.
- Cet appareil n'est PAS destiné à un usage commercial. Cet appareil convient pour être utilisé dans un environnement domestique tel que:
  - Cuisine à la maison ou au bureau.
  - Chambres d'hôtel ou de motel et autres environnements résidentiels.
  - Chambres d'hôtes ou similaires.
- **ATTENTION :** Cet appareil ne peut pas être utilisé avec une minuterie externe ou un télécommande.
- Avant utilisation, vérifiez si la tension indiquée sur l'appareil correspond à la tension de votre réseau électrique.
- Ne laissez pas le cordon pendre sur une surface chaude ou sur le bord d'une table ou d'un comptoir.
- N'utilisez jamais l'appareil lorsque le cordon ou la fiche sont endommagés, après un dysfonctionnement ou lorsque l'appareil est endommagé. Dans ce cas, apportez l'appareil au centre de service qualifié le plus proche pour vérification et réparation.
- Pour l'entretien autre que le nettoyage, veuillez contacter StoreBound directement au 1-800-898-6970 9h à 21h HNE du lundi au vendredi ou par courriel à support@bydash.com.
- Une surveillance étroite est nécessaire lorsque l'appareil est utilisé par ou à proximité d'enfants.
- StoreBound décline toute responsabilité pour les dommages causés par une mauvaise utilisation de l'appareil.
- Une mauvaise utilisation de l'appareil peut entraîner des dommages matériels ou même des blessures corporelles.
- Éteignez l'appareil, puis débranchez-le de la prise lorsqu'il n'est pas utilisé, avant d'assembler ou de démonter des pièces et avant de le nettoyer. Pour débrancher, saisissez la fiche et retirez-la de la prise. Ne tirez jamais sur le cordon d'alimentation.
- Ne laissez jamais la machine fonctionner plus de 20 minutes à la fois.

## PARTS & FEATURES



## SETTING UP THE COMPACT POWER JUICER

### BEFORE FIRST USE

- Remove all parts from the packaging.
- Wash all removable and washable parts, such as the Ingredient Pusher, Juice Container, Pulp Container, Juice Bowl, and Sieve, in warm, soapy water or in the dishwasher. Rinse and dry thoroughly.
- **CAUTION:** Never submerge the Motor Block in water!

### SETTING UP THE COMPACT POWER JUICER



- 1** Make sure the Juicer is unplugged and the On/Off Dial is turned to 0 or Off prior to assembling (**photo A**).
- 2** Position the Juice Bowl on the Motor Block and turn clockwise to lock it in place. Note: if the Juice Bowl is not properly locked in place, the motor will not turn on (**photo B**).



## SETTING UP THE COMPACT POWER JUICER



**3** Place the Sieve on the Axle and twist to lock it in place (photo C).



**4** Place the Lid on the Juice Bowl and twist to lock it in place (photo D).

## SETTING UP THE COMPACT POWER JUICER



**5** Slide the Pulp Container onto the back of the Juice Bowl (photo E).



**6** Position the Juice Container under the Juice Spout and place the Lid on top of the Container (photo F).

### DISASSEMBLY:

- 1** Turn the On/Off Dial to 0 and unplug the Juicer.
- 2** Remove the Juice Container and Pulp Container.
- 3** Remove the Lid from the Juice Bowl and twist the Sieve to remove it from the Axle.
- 4** Turn the Juice Bowl counterclockwise to remove it.

## USING THE COMPACT POWER JUICER



- 1 Before using, make sure that the Juicer is turned off and plug it in. Clean fruits and vegetables you wish to juice and cut them into pieces (photo A).
- ⚠ **CAUTION:** The peel, pit, core, and seeds must be removed from fruits such as oranges, grapefruit, pineapple, and melons before use.
- NOTE:** The juicer is not suitable for juicing fibrous fruits such as sugarcane. Some fruits do not contain enough liquid to juice. These include avocado, banana, mango, and apricot.
- 2 Turn on the On/Off Dial. There are two speeds. Speed I is low for softer ingredients and Speed II is high for harder ingredients (photo B).

## USING THE COMPACT POWER JUICER



- 3** Insert the pieces of food into the Ingredient Chute (**photo C**). Push the food down into the Juice Bowl using the Pusher (**photo D**).

**! CAUTION:** DO NOT insert fingers or other foreign objects into the Ingredient Chute while the machine is in use. Use only the Pusher and NOT spoons, forks, tongs, etc. Never leave the machine running with an empty Bowl, always add ingredients to juice.

- 4** If the machine becomes stuck during use, turn the machine off, remove the plug from the outlet and disassemble the machine according to the instructions. Clean the Juice Bowl and Sieve, reassemble, then try to start the machine again.

## USING THE COMPACT POWER JUICER



- 5** When the Pulp Container or Juice Container are full or when all fruits and vegetables have been juiced, turn the On/Off Dial to 0 and empty the containers (**photo E**).
- 6 NOTE:** If the machine overheats, it will turn off automatically. Turn the machine off and wait 30 minutes, then turn the machine on again.

**TIP:** Juice should always be stored in the refrigerator.

**! CAUTION:** Never let the machine work for longer than 20 minutes at a time.



## CLEANING & MAINTENANCE

- Remove the plug from the outlet and allow the machine to cool completely before cleaning.
- Remove the Containers and disassemble the rest of the parts in reverse order of assembly (see page 9).
- **DO NOT** submerge the Motor Block in water.
- Empty the Containers and clean the Pusher, Sieve, Juice Bowl, and Lids using warm, soapy water or in the dishwasher.
- **DO NOT** use harsh metal sponges, as they could damage the machine.
- Be careful when cleaning the Sieve. The Sieve is sharp.
- Dry all parts thoroughly after cleaning. Once completely dry, reassemble, and store in a dry place.







tropical wheatgrass  
juice on page 19!

# RECIPE GUIDE



Follow us!

@bydash | recipes, videos, & inspiration

@unprocessyourfood | veg & vegan-friendly meals



# MAUI WOWIE

## *Ingredients:*

- 2 pineapple rounds
- 1 inch of ginger
- ¼ cup of sparkling water

## *Directions:*

1. Chop up the pineapple and remove the rind from the rounds.
2. Turn the Juicer on. Place the pineapple pieces in the Ingredient Chute and use the Pusher to push them through.
3. Chop up the ginger and place it in the Ingredient Chute. Use the Pusher to push the ginger through the Juicer.
4. Now pour the sparkling water through the Juicer. The water will help to get the juice out of the Juicer.
5. Serve and enjoy!



# TROPICAL WHEATGRASS

## *Ingredients:*

- 2-3 inch bundle of wheatgrass
- 2 cups of fresh pineapple
- 2 oranges
- 1 papaya

## *Directions:*

1. Harvest 8-inch blades of wheatgrass by snipping the blades of grass ½ inch above the soil.
2. Using a strainer, wash the blades of wheatgrass under clean running water.
3. Chop the wheatgrass blades on a clean cutting board.
4. Juice the wheatgrass in the Juicer. Then add cubed pineapple, oranges, and papaya.
5. Serve and enjoy!





# WATERMELON PUNCH

## *Ingredients:*

½ watermelon  
1 lemon  
5 oranges  
½ pineapple

## *Directions:*

1. Remove the rind from the watermelon and chop the watermelon into small pieces.
2. Turn the Juicer on. Place the watermelon pieces into the Ingredient Chute and use the Pusher to push the pieces through the Juicer.
3. Remove the peel and rind from the lemon. Chop the lemon into smaller pieces and put in the Ingredient Chute. Use the Pusher to push the lemon through the Juicer.
4. Peel the oranges. Place the orange slices into the Ingredient Chute and use the Pusher to push the orange slices through the Juicer.
5. Chop up and remove the peel from the pineapple. Put the pineapple pieces into the Ingredient Chute and use the Pusher to push the pineapple through the Juicer. Serve and enjoy!







# MEAN GREEN

## *Ingredients:*

6 kale leaves  
1 cucumber  
4 celery stalks  
2 green apples  
½ inch lemon

## *Directions:*

1. Chop up the kale leaves.
2. Turn the Juicer on. Place the kale into the Ingredient Chute and use the Pusher to push the kale leaves through the Juicer.
3. Chop up the cucumber and place in the Ingredient Chute. Use the Pusher to push the cucumber through the Juicer.
4. Chop up the celery stalks and place in the Ingredient Chute. Use the Pusher to push the celery through the Juicer.
5. Slice the apples and remove the seeds. Place the apple slices in the Ingredient Chute and push through with the Pusher.
6. Remove the peel and rind from the lemon. Place the lemon piece in the Ingredient Chute and use the Pusher to push the lemon through the Juicer. Serve and enjoy!



# SUNSHINE JUICE

## *Ingredients:*

2 oranges  
½ cup of raspberries  
3 fresh mint leaves

## *Directions:*

1. Peel the oranges and turn them into slices.
2. Turn the Juicer on. Place the orange pieces into the Ingredient Chute and use the Pusher to push the food through the chute.
3. Place the raspberries into the Ingredient Chute and use the Pusher to push the fruit through the Juicer.
4. Put the mint leaves into the Ingredient Chute and use the Pusher to push the food through. Serve and enjoy!

## MORE RECIPE IDEAS

### CUCUMBER CURE



1 cucumber  
1 spinach leaf  
6 carrots

### APPLE GINGER ZINGER



1 apple  
2 carrots  
1 celery stalk  
1 inch ginger

### ORANGE CARROT



4 oranges  
8 carrots

### VERY BERRY JUICE



 
 
1 cup raspberries  
1 cup strawberries  
2 oranges  
2 red apples





We want you to Feel Good about your Dash products! Sign up for our Feel Good Rewards program at [bydash.com/feelgood](https://bydash.com/feelgood) to **DOUBLE** your warranty, part of our commitment to quality and customer satisfaction.

We're here to help! Our customer support teams in the US and Canada are at your service Monday - Friday. Contact us at **1 (800) 898-6970** or [support@bydash.com](mailto:support@bydash.com).

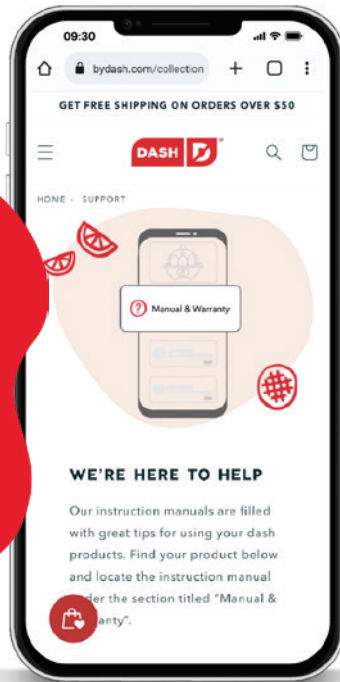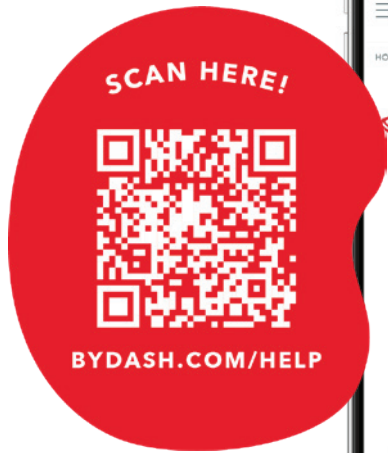

## STOREBOUND, LLC - 1 YEAR LIMITED WARRANTY

Your StoreBound product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, StoreBound, LLC will repair or replace the defective part. To process a warranty claim, contact Customer Support at [support@bydash.com](mailto:support@bydash.com) for further assistance and instruction. A Customer Support agent will assist you by troubleshooting minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating the date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. StoreBound will not ship to a PO Box. StoreBound will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

All replacement inquiries are to be submitted to [support@bydash.com](mailto:support@bydash.com) or contact Customer Support at 1-800-898-6970. There are no express warranties except as listed above.

Warranty is voided if used outside of the 50 states of the United States, the District of Columbia or the 10 provinces of Canada. Warranty is voided if used with an electric adapter/converter or used with any voltage plug other than 120V.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. STOREBOUND SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Refurbished items or items not purchased through an authorized retailer are not eligible for warranty claims.

## REPAIRS

**DANGER!** Risk of electric shock! The Dash Compact Power Juicer is an electrical appliance. Do not attempt to repair the appliance yourself under any circumstances. Contact Customer Support regarding repairs to the appliance.

## TECHNICAL SPECIFICATIONS

Voltage 120V~60Hz  
Power Rating 350W max  
Stock#: DCJ100\_20230530\_V9



This product has passed food safety testing in accordance with FDA guidelines.







1-800-898-6970 | @bydash | bydash.com