



*recipes
inside!*

#DEOM8100



EXPRESS POCKET & OMELETTE MAKER

Instruction Manual | Recipe Guide



EXPRESS POCKET & OMELETTE MAKER

Important Safeguards.....	4-7
Parts & Features.....	8
Using Your Express Pocket & Omelette Maker.....	10-11
Troubleshooting.....	12-13
Recipes.....	14-27
Notes.....	28-29
Customer Support.....	30
Warranty.....	31

the dash team!

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

When using electrical appliances, basic safety precautions should be followed, including:

- Read all instructions.
- Remove all bags and packaging from appliance before use.
- Warning: this appliance becomes hot very quickly. Certain foods may cook much faster than others. Exercise care.
- Never leave appliance unattended when in use.
- Make sure the appliance is cleaned thoroughly before using.
- Do not use appliance for other than intended use.
- For household use only. Do not use outdoors.
- Warning: Hot surfaces! Never touch the Cooking Surfaces or Cover while appliance is in use. Always lift and lower the Cover by the Cover Handle.
- DO NOT lift the Cover so that your arm is over the Cooking Surfaces as it is hot and may cause injury. Lift from the side.
- To prevent the risk of fire, electric shock, or personal injury, do not put cord, plug, or appliance in or near water or other liquids.
- The Express Pocket & Omelette Maker is NOT dishwasher safe.
- Never use abrasive cleaning agents, such as, metal utensils to clean your appliance as this may damage the Express Pocket & Omelette Maker and its non-stick Cooking Surfaces.
- Do not operate this appliance with a damaged cord, damaged plug, after the appliance malfunctions, is dropped, or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- DO NOT use the Express Pocket & Omelette Maker near water or other liquids, with wet hands, or while standing on a wet surface.
- For maintenance other than cleaning, please contact StoreBound directly at 1-800-898-6970 from 7AM-7PM PST Monday-Friday or by email at support@storebound.com.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they are provided

with supervision and instruction concerning use of the appliance by a person responsible for their safety.

- Do not place appliance on or near a hot gas burner, hot electric burner, or in a heated oven.
- Be cautious when moving an appliance containing hot oils or other hot liquids.
- Refrain from using attachments that are not recommended by the appliance manufacturer, as this may result in fire, electric shock, or personal injury.
- Allow Express Pocket & Omelette Maker to cool completely before moving, cleaning, or storing.
- Close supervision is necessary when any appliance is used by or near children.
- Do not let the cord touch hot surfaces or hang over the edge of tables or counters.
- Always be sure to unplug the appliance from outlet prior to moving, cleaning, storage, and when not in use.
- StoreBound shall not accept liability for damages caused by improper use of the appliance.
- Improper use of the Express Pocket & Omelette Maker can result in property damage or personal injury.
- This appliance has a polarized plug (one blade is wider than the other).
- To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not completely fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- A short power supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- An extension cord may be used if exercised with care. If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
- If the appliance is of the grounded type, the extension cord should be a grounding 3-wire cord.
- The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

MESURES DE SÉCURITÉ IMPORTANTES: VEUILLEZ LIRE ET CONSERVER CE MANUEL D'UTILISATION

Lors de l'utilisation d'appareils électriques, des précautions élémentaires de sécurité doivent être respectées, notamment:

- Retirez tous les sacs et emballages de l'appareil avant utilisation.
- Attention: cet appareil chauffe très rapidement. Certains aliments peuvent cuire beaucoup plus vite que d'autres. Soins de l'exercice.
- Ne laissez jamais l'appareil sans surveillance lors de son utilisation.
- Assurez-vous que l'appareil est nettoyé à fond avant de l'utiliser.
- Ne pas utiliser cet appareil pour un usage autre que celui prévu. Pour usage domestique seulement. Ne pas utiliser à l'extérieur.
- Attention: surfaces chaudes! Ne touchez jamais les surfaces de cuisson ou le couvercle lorsque l'appareil est en marche. Soulevez et abaissez toujours le couvercle à l'aide de sa poignée.
- NE soulevez PAS le couvercle de manière à ce que votre bras repose sur les surfaces de cuisson, car il est chaud et peut provoquer des blessures. Soulevez sur le côté.
- Pour éviter tout risque d'incendie, de choc électrique ou de blessure, ne branchez pas de cordon, de fiche ni d'appareil dans ou près de l'eau ou d'autres liquides.
- Le fabricant Express Pocket & Omelette Maker ne va PAS au lave-vaisselle.
- N'utilisez jamais d'agents de nettoyage abrasifs, tels que des ustensiles en métal, pour nettoyer votre appareil, car cela pourrait endommager l'Express Pocket & Omelette Maker et ses surfaces de cuisson antiadhésives.
- Ne pas utiliser cet appareil avec un cordon ou une fiche endommagé, après un dysfonctionnement de l'appareil, une chute ou un dommage quelconque. Renvoyez l'appareil à un centre de service agréé le plus proche pour un examen, une réparation ou un réglage.
- N'UTILISEZ PAS Express Maker et Omelette Maker près de l'eau ou d'autres liquides, avec les mains mouillées ou debout sur une surface mouillée.
- Pour tout entretien autre que le nettoyage, veuillez contacter StoreBound directement au 1-800-898-6970 de 7h à 19h, du lundi au vendredi ou par courrier électronique à l'adresse support@storebound.com.
- Cet appareil n'est pas destiné à être utilisé par des personnes (y compris des enfants) ayant des capacités physiques, sensorielles ou mentales

réduites, ou manquant d'expérience et de connaissances, à moins que des personnes supervisées et instruites concernant leur utilisation par une personne responsable de leur sécurité.

- Ne placez pas l'appareil sur ou à proximité d'un brûleur à gaz chaud, d'un brûleur électrique chaud ou dans un four chauffé.
- Soyez prudent lorsque vous déplacez un appareil contenant des huiles chaudes ou d'autres liquides chauds.
- Evitez d'utiliser des accessoires qui ne sont pas recommandés par le fabricant de l'appareil car cela pourrait provoquer un incendie, un choc électrique ou des blessures.
- Laissez refroidir complètement Express Pocket & Omelette Maker avant de le déplacer, de le nettoyer, ou stocker.
- Une surveillance étroite est nécessaire lorsqu'un appareil est utilisé par ou à proximité d'enfants.
- Ne laissez pas le cordon toucher des surfaces chaudes ou pendre du bord de tables ou de comptoirs.
- Assurez-vous toujours de débrancher l'appareil de la prise de courant avant de le déplacer, de le nettoyer, de le ranger ou lorsqu'il n'est pas utilisé.
- StoreBound n'acceptera aucune responsabilité pour les dommages causés par une utilisation incorrecte de l'appareil.
- Une utilisation incorrecte de l'Express Pocket & Omelette Maker peut provoquer des dommages matériels ou des blessures.
- Cet appareil est doté d'une fiche polarisée (une des lames est plus large que l'autre).
- Pour réduire les risques d'électrocution, cette fiche ne peut être insérée dans une prise polarisée. Si la fiche ne s'insère pas complètement dans la prise, inversez-la. Si le problème persiste, contactez un électricien qualifié. N'essayez pas de modifier la fiche de quelque manière que ce soit.
- Un cordon d'alimentation court doit être fourni afin de réduire les risques d'enchevêtrement ou de trébuchement sur un cordon plus long.
- Une rallonge peut être utilisée si elle est exercée avec soin. Si une rallonge est utilisée, le calibre électrique indiqué doit être au moins égal à celui de l'appareil.
- Si l'appareil est du type mis à la terre, la rallonge doit être un cordon à 3 fils avec mise à la terre.
- La rallonge doit être disposée de manière à ne pas se poser sur le comptoir ou la table, où elle pourrait être tirée par des enfants ou faire trébucher involontairement.

MESURES DE SÉCURITÉ IMPORTANTES: VEUILLEZ LIRE ET CONSERVER CE MANUEL D'UTILISATION

PARTS & FEATURES



USING YOUR EXPRESS POCKET & OMELETTE MAKER

BEFORE FIRST USE:

Remove all packaging material, and thoroughly clean the Express Pocket & Omelette Maker.


Place the appliance on a stable and dry surface. Plug the cord into a power outlet. The Indicator Light will illuminate, signaling that the appliance is heating up.

Once the Cooking Surfaces reach their optimal cooking temperature, the Indicator Light will automatically shut off. Now, you're ready to get cooking!

USING YOUR EXPRESS POCKET & OMELETTE MAKER:



- 1 Carefully lift the Cover by the Cover Handle.

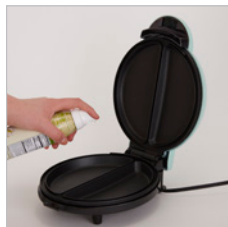

- 2 Spray both Cooking Surfaces with a little cooking spray.

USING YOUR EXPRESS POCKET & OMELETTE MAKER



- 3 Place food onto your desired side of the bottom Cooking Surface (or both sides!) and close the Cover of the Express Pocket & Omelette Maker.



- 4 Once food is cooked to your preference, carefully remove it from the Cooking Surface(s) with a heat-resistant nylon or silicone cooking utensil.

Do not use metal utensils to remove or place food on the Cooking Surfaces as this will damage the non-stick surface.

NOTE: When you have finished cooking, use caution as it may get very hot after use. Unplug your Express Pocket & Omelette Maker and allow it to cool before moving or cleaning.

While Dash products are durable, you may encounter one or more of the problems listed below. If the issue is either not solved by the solutions recommended below or not included on this page, please contact our Customer Support Team at 1-800-898-6970 or support@storebound.com.

ISSUE	SOLUTION
The light on the Express Pocket & Omelette Maker keeps shutting off.	This is normal. During the cooking process, the heating element will automatically turn on and off to regulate the temperature and ensure that the Cooking Surfaces do not get too hot or cold. When this occurs, the Indicator Light turns on and off.
How do I know when the Express Pocket & Omelette Maker is heated and ready to use?	When the appliance reaches the optimal temperature, the Indicator Light shuts off and that means you're ready to get cooking!
There is no On/Off Button. How do I turn the Express Pocket & Omelette Maker off and on?	To turn on, simply plug in the power cord. When you're done cooking, turn off the Express Pocket & Omelette Maker by unplugging it.
When using my Express Pocket & Omelette Maker, the Cover gets very hot. Is this normal?	Yes, this is completely normal. When using your Express Pocket & Omelette Maker, always lift and lower the Cover by the Cover Handle. To prevent personal injury, DO NOT lift the Cover so that your arm is over the Cooking Surfaces as they are hot and may cause injury. Always lift from the side. Be sure to either let the appliance cool down completely or wear an oven mitt when lifting the Cover.

ISSUE	SOLUTION
I am cooking meat on the Express Pocket & Omelette Maker and there is juice on the Cooking Surfaces. What do I do?	Carefully dab the Cooking Surfaces around the meat with a paper towel or napkin. If there is a lot of juice, remove the food from the Cooking Surfaces with heat-resistant plastic or silicone tongs and set aside. Then, wrap a paper towel around the tongs and use this to wipe the Cooking Surfaces and soak up the juices. When done, return the food to the Express Pocket & Omelette Maker and continue cooking.
After using my Express Pocket & Omelette Maker a few times, food is starting to stick to the surface. What is happening?	There is probably a build-up of burnt food residue on the Cooking Surfaces. This is normal, especially when cooking with sugar. Allow the appliance to cool fully, pour on a little cooking oil and let sit for 5-10 minutes. Scrub surfaces with a sponge or soft bristled brush to dislodge food. Use a damp, soapy cloth to wipe down the Cooking Surfaces. Rinse the cloth and wipe again. If food remains, pour on more cooking oil and let sit for a few hours, then scrub and wipe clean.
The Indicator Light will not turn on and the Cooking Surfaces are failing to heat.	Ensure that the power cord is plugged into the power outlet. Check to make sure the power outlet is operating correctly. Determine if power failure has occurred in your home, apartment or building.



EXPRESS POCKET
& OMELETTE MAKER

RECIPE BOOK



Follow us @unprocessyourfood
for recipes, videos, & daily inspiration



SWEET POTATO HASH

Ingredients:

2 slices bacon, cut into 1" pieces
1 medium sweet potato, peeled and cubed
2 tsp pickled jalapeños, diced (optional)

½ cup diced bell peppers
2 dashes fresh thyme
salt and pepper, to taste

Directions:

1. Plug in the Express Pocket & Omelette Maker and wait until the Indicator Light is illuminated. Place 1 slice of bacon on each Cooking Surface and cook, turning once until crisp (about 2 minutes on each side). Remove bacon but leave any rendered fat. Use a paper towel wrapped around the tongs to wipe out excess fat. Add the cubed sweet potato, divided evenly between each Cooking Surface.
2. Close the Express Pocket & Omelette Maker and let cook for 4 minutes. Open the Express Pocket & Omelette Maker. Add peppers, jalapeños, thyme, salt, and pepper to each Cooking Surface. Stir. Cover again and let cook for 2 minutes.
3. Open the Express Pocket & Omelette Maker, add the bacon to each Cooking Surface, and gently stir to combine all the ingredients. Close the Cover and let cook for an additional minute.





PIZZA POCKETS

Ingredients:

2 cups all-purpose flour
1 tsp baking powder
¾ cup milk
½ tsp salt

½ cup (1 stick) cold butter, cut into
small chunks
pepperoni and shredded mozzarella
cheese (or preferred fillings)
marinara sauce, for dipping

Directions:

1. Sift together the flour, baking powder, and salt. Add the butter and use a pastry cutter to combine the butter with the flour until it forms a coarse crumb.
2. Stir in the milk until the dough comes together. Roll your dough out on a floured surface so that it is ½-inch thick. Cut out as many 4-inch wide circles as you can. Alternatively, you can use store-bought biscuit dough or pizza dough.
3. Stretch the dough circles so they resemble the shape of the Cooking Surfaces in the Express Pocket & Omelette Maker. Plug in your Express Pocket & Omelette Maker.
4. Top one dough circle with pepperoni and mozzarella cheese. Top with another dough circle and pinch the edges closed. Cook the pizza pocket on a Cooking Surface until golden and crispy, and repeat with remaining dough circles and preferred fillings. Serve with a side of marinara sauce for dipping.



CAPRESE OMELETTE

Ingredients:

4 medium eggs
2-3 tbsp basil, cut into strips
6 cherry tomatoes, halved
½ cup shredded mozzarella
salt & pepper, to taste

Directions:

1. Whisk the eggs in a bowl and add salt to taste. Plug in the Express Pocket & Omelette Maker. When the Indicator Light turns on, open the Cover and spray or coat the Cooking Surfaces with olive oil.
2. Pour the eggs equally onto each Cooking Surface. Sprinkle the basil, mozzarella, and tomatoes over the eggs on each Cooking Surface. Cover the omelettes and lock the latch. After 2 minutes, open the Cover and flip the omelettes. Let cook another minute. Check to see that the eggs are cooked through.
3. Remove with a heat-resistant nylon or silicone cooking utensil. Season with pepper and serve.



EGG WHITE OMELETTE

Ingredients:

8 egg whites
2 tsp olive oil
½ cup frozen spinach, defrosted and drained
fresh parsley
grated romano cheese (optional)
salt and pepper, to taste

Directions:

1. Lightly grease the Cooking Surfaces and plug in the Express Pocket & Omelette Maker. Whisk the egg whites in a bowl for about a minute. Stir in the spinach, parsley, and cheese. Season with salt and pepper.
2. Once the appliance has preheated, pour the egg mixture into each Cooking Surface. Close the Cover and let cook for 2 minutes.
3. Open the Cover and flip the omelettes. Close the Cover and cook for another 2 minutes. Top each omelette with cheese and serve warm.



TURKEY BACON & AVOCADO **PANINI**

Ingredients:

4 slices sourdough bread
6 slices turkey bacon, cooked
4 slices turkey
2 slices mozzarella cheese
1 avocado, sliced
1 tomato, sliced
basil leaves
1-2 tbsp butter

Directions:

1. Plug in your Express Pocket & Omelette Maker. Butter one side of each slice of bread. Place two slices of bread, butter side down, on each Cooking Surface.
2. Layer each panini with mozzarella, turkey bacon, turkey, avocado, tomato and basil. Top with the two remaining slices of buttered bread, butter side up.
3. Close the Cover and cook until the bread is golden and the cheese is melted. Cut each panini in half and serve.



POTATO PANCAKES

Ingredients:

2 medium potatoes peeled
and shredded

1 egg

½ yellow onion, diced

2 tbsp flour

½ tsp onion powder

½ tsp salt

¼ tsp pepper

2 tbsp oil

Directions:

1. In a large bowl, add all of the ingredients except for the oil and mix until well combined. Use the oil to lightly grease each Cooking Surface. Plug in the appliance and, while it is heating up, scoop the potato mixture into small patties.
2. Place one patty on each Cooking Surface. Close the Cover. Cook until golden brown on one side. Open the Cover and flip the patties.
3. Cook until golden brown. Serve with Greek yogurt and applesauce.





EASY CHICKEN FAJITAS

Ingredients:

- | | |
|-------------------------------|-----------------------------|
| 1 ½ cups bell pepper strips | 3 whole tomatoes, chopped |
| 1 cup sliced onion | 4 whole wheat tortillas, 6" |
| ½ lb boneless chicken breasts | 1 tsp olive oil |
| 1 tsp chili powder | |
| ½ tsp ground cumin | |

Directions:

1. Plug in your Express Pocket & Omelette Maker. Using both Cooking Surfaces, sauté the bell peppers and onion with the olive oil until tender. Remove the peppers and onion from the Cooking Surfaces using a heat-resistant nylon or silicone cooking utensil.
2. Add the chicken to the Cooking Surfaces and sprinkle with the chili powder and cumin. Close the Cover and cook until the chicken is done.
3. Open the Cover and return the peppers and onion back to the Cooking Surfaces. Add the tomatoes and sauté until hot. Divide the fajita mixture among the tortillas.



SAVORY SHRIMP

Ingredients:

- | |
|--|
| ½ lb medium shrimp |
| 3-4 cloves garlic, sliced |
| salt |
| ½ lemon, juiced |
| 2 tbsp extra virgin olive oil, divided |

Directions:

1. Plug in your Express Pocket & Omelette Maker. Pour one tbsp of olive oil on each Cooking Surface. Let warm until hot but not smoking.
2. Add the shrimp and garlic cloves, dividing between the Cooking Surfaces. Season with salt.
3. Cook the shrimp with the Cover down until they turn pink and the shells are golden and charred. Squeeze the lemon juice over the shrimp, then serve.



CHOCOLATE FUDGE BROWNIES

Ingredients:

- | | |
|---|---|
| 6 oz bittersweet chocolate | 1 tsp salt |
| 2 oz unsweetened chocolate | 1 cup flour |
| $\frac{3}{4}$ cup (1 $\frac{1}{2}$ sticks) butter | 1 cup semisweet chocolate chips |
| 1 $\frac{1}{2}$ cups sugar | chopped walnuts or shredded coconut, optional |
| 2 tsp vanilla extract | |
| 4 eggs | |

Directions:


1. Melt the chocolate and butter together until smooth. In a separate bowl, whisk the eggs and then stir in the sugar and vanilla extract. Add the egg mixture to the chocolate and butter mixture and mix. Add salt and flour, stirring until just combined. Fold in the chocolate chips and optional add-ins.
2. Plug in your Express Pocket & Omelette Maker and lightly grease the Cooking Surfaces. Pour about $\frac{1}{2}$ cup of batter onto each Cooking Surface. Close the Cover and cook for 9-12 minutes. Check halfway through to see if you need to flip the brownies.



**FEEL GOOD
GUARANTEE™**

Dash values quality and workmanship and stands behind this product with our Feel Good Guarantee™. To learn more about our commitment to quality, visit bydash.com/feelgood.

Our US-based customer support team is at your service
Monday - Friday during the times below.
Reach us at **1 (800) 898-6970** or support@bydash.com

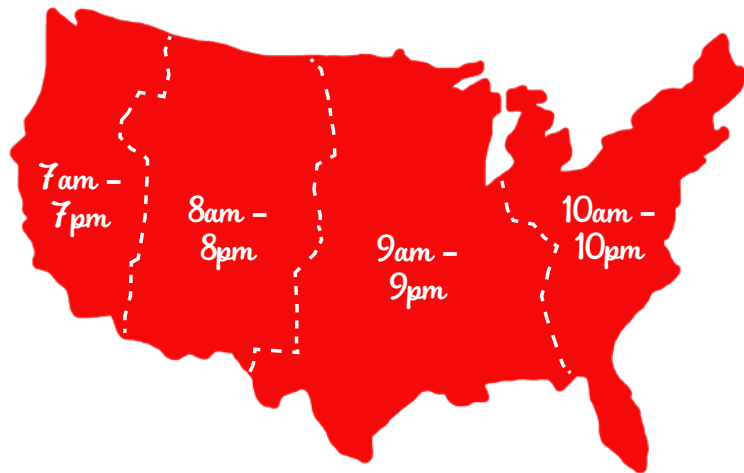

Hey **Hawaii!** You can reach our customer service team from **5AM to 5PM**.
And also, **Alaska**, feel free to reach out from **6AM - 6PM**.

STOREBOUND, LLC - 1 YEAR LIMITED WARRANTY

Your StoreBound product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, StoreBound, LLC will repair or replace the defective part. To process a warranty claim, contact Customer Support at 1-800-898-6970 for further assistance and instruction. A Customer Support agent will assist you by troubleshooting minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating the date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. We are unable to ship returns to a PO box. StoreBound will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

Send all inquiries to support@storebound.com.
There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. STOREBOUND SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

REPAIRS

DANGER! Risk of electric shock! The Express Pocket & Omelette Maker is an electrical appliance. Do not attempt to repair the appliance yourself under any circumstances. Contact Customer Support regarding repairs to the appliance.

TECHNICAL SPECIFICATIONS

Voltage 120V ~ 60Hz
Power Rating 760W
Stock#: DEOM8100_20200903_v9



1-800-898-6970 | @unprocessyourfood | bydash.com