



*recipe ideas
inside!*

#DETK300

INSULATED ELECTRIC KETTLE



Instruction Manual | Recipe Ideas



INSULATED ELECTRIC KETTLE

- Important Safeguards..... 4-7
- Parts & Features..... 8
- Safety Features 9
- Setting Up Your Insulated Electric Kettle 10
- Using Your Insulated Electric Kettle 11-13
- Cleaning & Maintenance 14
- Recipe Ideas 16-17
- Customer Support 18
- Warranty..... 19

the dash team!

IMPORTANT SAFEGUARDS

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

When using electrical appliances, basic safety precautions should be followed, including:

- Read all instructions.
- Remove all bags and packaging from appliance before use.
- Wash and dry Kettle before using for the first time.
- Only use water inside the Electric Kettle. Other pre-made beverages may damage the interior coating.
- Make sure that the Kettle, Power Base and cord are completely dry before each use.
- Prior to first-time use, boil water in the Kettle and then pour it out. This will help to eliminate any odors.
- For maintenance other than cleaning, please contact StoreBound directly at 1-800-898-6970 from 7AM - 7PM PT Monday - Friday or by email at support@storebound.com.
- To prevent the risk of fire, electric shock, or personal injury, do not place the cord, plug, or unit near water or other liquids.
- **WARNING:** To avoid electric shock, do not overfill Kettle. Water level should never go above the Max 1.7L marker.
- Never immerse the Power Base or Kettle in water or any other liquid; instead, wipe the surface with a soft, damp cloth, and properly clean inside of Kettle (see Cleaning & Maintenance instructions on page 14).
- Never leave appliance unattended when in use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they are provided with supervision and instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Always be sure to unplug the appliance from outlet prior to assembly, disassembly, cleaning, and storage.
- Allow Kettle to cool completely before cleaning or storing.
- Do not operate any appliance with a damaged cord or plug.
- Do not use the appliance if any of the parts are damaged.
- Refrain from using attachments that are

not recommended by the appliance manufacturer, as this may result in fire, electric shock, or personal injury.

- Do not use appliance outdoors or for commercial purposes.
- Do not let the cord touch hot surfaces or hang over the edge of tables or counters.
- Extension cords are not recommended for use with this appliance.
- If an extension cord must be used, make sure the electrical rating of the wire is compatible with the Kettle.
- Do not place appliance on or near a hot gas burner, hot electric burner, or in a heated oven.
- When disposing of the Kettle, do not

discard with general household waste; instead, drop off at a designated electronic waste recycling facility.

- StoreBound shall not accept liability for damages caused by improper use of the appliance.
- Improper use of the Kettle can result in property damage or even in personal injury.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not completely fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

MESURES DE SÉCURITÉ IMPORTANTES: VEUILLEZ LIRE ATTENTIVEMENT CE MANUEL AVANT D'UTILISER L'APPAREIL.

Lors de l'utilisation d'appareils électriques, des précautions élémentaires de sécurité doivent être respectées, notamment:

- Lisez toutes les instructions.
- Retirez tous les sachets et emballages de l'appareil avant l'utilisation.
- Lavez et séchez la Bouilloire Rapide avant de l'utiliser pour la première fois.
- Assurez-vous que le dessous de la Bouilloire, le Socle d'Alimentation, et le cordon soient complètement sec avant chaque utilisation.
- Utilisez uniquement de l'eau à l'intérieur de la bouilloire électrique. D'autres boissons pré-préparées peuvent endommager le revêtement intérieur.
- Avant la première utilisation, faites bouillir l'eau dans la Bouilloire Rapide, puis videz-la. Cela éliminera toutes les odeurs.
- Pour tout entretien autre que le nettoyage, contactez directement StoreBound au +1-800-898-6970 de 7h à 19h (HNP) du lundi au vendredi ou par email support@storebound.com.
- Pour éviter tout risque d'incendie, d'électrocution ou de blessure, ne placez pas le cordon, la fiche ou l'unité près d'eau ou d'autres liquides.
- Ne pas utiliser cet appareil si le cordon est endommagé, si la prise est endommagée, après un dysfonctionnement de l'appareil, sa chute, ou si l'appareil est endommagé de quelque manière que ce soit. Retournez cet appareil auprès du centre de service agréé le plus proche pour un examen, une réparation, ou un ajustement.
- Ne touchez pas les surfaces chaudes. Utilisez la poignée.
- N'utilisez pas la Bouilloire avec moins de 0,5 L d'eau à l'intérieur.
- AVERTISSEMENT: pour éviter les chocs électriques, ne remplissez pas trop la Bouilloire. Le niveau d'eau ne doit jamais dépasser le marqueur Max 1,7L.
- Ne plongez jamais le Socle d'Alimentation ou la Bouilloire dans l'eau ou tout autre liquide; au lieu de cela, essuyez la surface avec un chiffon doux et humide et nettoyez correctement l'intérieur de la Bouilloire.
- Ne laissez jamais l'appareil sans surveillance pendant son utilisation.
- Cet appareil n'est pas destiné à être utilisé par des personnes (y compris les enfants) avec des capacités physiques, sensorielles ou mentales réduites, ou sans expérience et connaissances à moins qu'une personne responsable de leur sécurité supervise l'utilisation.
- Les enfants doivent être surveillés pour s'assurer qu'ils ne jouent pas avec l'appareil.
- Soyez extrêmement prudent lorsque vous ouvrez le Couvercle car une fuite de vapeur chaude peut provoquer des blessures.

- Assurez-vous toujours de débrancher l'appareil de la prise de courant avant le montage, le démontage, le nettoyage et le stockage.
- Pour déconnecter, éteignez l'appareil, puis retirez la fiche de la prise murale.
- Laissez la Bouilloire Rapide refroidir complètement avant de la déplacer, de la nettoyer ou de la démonter.
- N'utilisez aucun appareil dont le cordon ou la fiche sont endommagés.
- N'utilisez pas l'appareil si l'une des pièces est endommagée.
- N'utilisez pas l'appareil à des fins autres que celles prévues.
- Des brûlures peuvent se produire si le couvercle est retiré pendant que l'eau chauffe.
- Évitez d'utiliser des pièces non recommandées par le fabricant de l'appareil, car cela peut entraîner un incendie, un choc électrique ou des blessures corporelles.
- N'utilisez pas l'appareil à l'extérieur ou à des fins commerciales.
- Ne jetez pas la Bouilloire Rapide avec les ordures ménagères; au lieu de cela, déposez-la dans un endroit adapté pour le recyclage des déchets électroniques.
- Ne pas laisser le cordon d'alimentation toucher à des surfaces chaudes, ou pendre d'un comptoir ou d'une table.
- Un cordon d'alimentation court est fourni pour réduire le risque de s'emmêler ou de trébucher sur un cordon plus long. Une

rallonge est disponible et peut être utilisée si un soin particulier est apporté au cours de son utilisation. Si une rallonge est utilisée, la puissance électrique marquée de la rallonge doit être au moins aussi élevée que la puissance électrique de l'appareil. La rallonge doit être disposée de manière à ne pas pendre du plan de travail ou du dessus d'une table où elle pourrait être tirée par des enfants ou où l'on pourrait trébucher involontairement.

- Si une rallonge doit être utilisée, assurez-vous que la puissance électrique est compatible avec la Bouilloire Rapide.
- Ne placez pas l'appareil sur ou à proximité d'un brûleur à gaz ou électrique chaud ou dans un four chauffé.
- StoreBound n'acceptera aucune responsabilité pour les dommages causés par une utilisation incorrecte de l'appareil.
- Une mauvaise utilisation de la Bouilloire Rapide peut entraîner des dommages matériels ou même des blessures.
- Cet appareil est muni d'une fiche polarisée (une lame est plus large que l'autre). Afin de réduire le risque de choc électrique, cette fiche ne peut être insérée dans une prise polarisée que d'une seule façon. Si la fiche ne rentre pas complètement dans la prise, retournez-la. Si elle ne rentre toujours pas, contactez un électricien qualifié. N'essayez pas de modifier la fiche de quelque façon que ce soit.

MESURES DE SÉCURITÉ IMPORTANTES: VEUILLEZ LIRE ATTENTIVEMENT CE MANUEL AVANT D'UTILISER L'APPAREIL.

PARTS & FEATURES



SAFETY FEATURES



Cord Storage

Wrap the cord around the Cord Storage under the Base so the Insulated Electric Kettle stores without additional cord clutter.



Boil-Dry Safety Protection

The Kettle will shut off automatically in approximately 20 seconds when there is little to no water inside.



Cool-Touch Housing

Because of the Dual-Wall Insulation, the Insulated Electric Kettle stays cool even when the water inside is heated to boiling.

SETTING UP YOUR INSULATED ELECTRIC KETTLE

Clean your Insulated Electric Kettle thoroughly before using. Always unplug the appliance prior to cleaning or storing.

WARNING: The Insulated Electric Kettle and its Power Base are NOT dishwasher safe.

BEFORE FIRST USE

Remove all packaging and stickers before using your Insulated Electric Kettle.

Using a dish brush, wash the inside of the Kettle with warm, soapy water and then rinse thoroughly.

To sterilize the Kettle, fill with water to the MAX line and place on the Base. Press the Boil/Cancel Button and wait until the water is boiling. Once water is boiling, discard water and allow the Kettle to cool.

ATTENTION: Do NOT use abrasive scrubbers, sponges, or chemical cleaners on the interior or exterior of the Kettle as they will damage the finish.

The bottom of the Insulated Electric Kettle functions as a wrap for cord storage. Unwind the cord for greater flexibility.

SWITCHING BETWEEN °C AND °F

To switch between °C and °F, simply hold down both the Temp (+) and Temp (-) Buttons simultaneously until you see the symbol change on the Digital Display.

USING YOUR INSULATED ELECTRIC KETTLE



PREPARING THE KETTLE

To add water to the Insulated Electric Kettle, pinch the Lid Release Buttons on the Lid and lift (photo A). Fill with water to MAX line (photo B). Do not overfill. Replace the Lid to close.

Place the Kettle on the Power Base and plug the Power Base in.

WARNING: Do not add liquid other than water to the Insulated Electric Kettle as this may damage the interior.

USING YOUR INSULATED ELECTRIC KETTLE



BOILING

To boil water, Press the Boil/Cancel button to turn the Kettle on (**photo C**). This will cause the Kettle to begin to heat to boiling, or 212°F.

HEATING

To heat to a temperature other than boiling, once the Insulated Electric Kettle is plugged in simply press the Temp (+) and Temp (-) Buttons until your desired temperature is shown on the Digital Display (**photo D**), then do not press any further buttons to confirm. The kettle will automatically build to the desired temperature you selected. "Heat" will be shown on the Digital Display.

CHANGING THE TEMPERATURE

You can also use the Temp (+) and Temp (-) Buttons to change the temperature once heating has begun. When not changing the temperature, the Digital Display will show the internal temperature of the water as it is heating.



KEEP WARM

Once heating is complete, you can press the Keep Warm button to help the Insulated Electric Kettle maintain internal temperature (**photo E**). Due to the Dual-Wall stainless steel insulation, the Insulated Electric Kettle will retain heat for up to 8 hours, even when not using the Keep Warm function.

SERVING

To serve, remove the Insulated Electric Kettle from the Power Base and press down on the Pour Lever on top of the handle as you are pouring to open the Pour Spout (**photo F**).

TURNING THE KETTLE OFF

The Insulated Electric Kettle will automatically shut off once desired temperature is reached if Keep Warm is not selected. Alternatively, you can simply unplug the base to make sure the Insulated Electric Kettle is off.



CLEANING & MAINTENANCE

IMPORTANT NOTE:

Do not submerge the Power Base or Insulated Electric Kettle in water or other liquids. To avoid damaging the appliance, never use abrasive or harsh cleaning products to clean the Kettle's surface.

Be careful when cleaning the Insulated Electric Kettle, as even if the outside is cool, the contents within may still be hot, even if the kettle is no longer on.

In order to keep your Insulated Electric Kettle in pristine working order, follow the cleaning recommendations periodically.

1. Fill the Kettle with water up to the 1L mark. Place on the Power Base and press the Power Button to turn on.
2. After the water comes to a boil, remove from the Power Base. Pour in a small amount of dish soap and soak overnight or for 8-12 hours.
3. Pour out the soapy water and rinse until no suds remain.
4. Fill the Kettle with 1L of clean water and bring to a boil. Carefully pour out the hot water.
5. Allow your Kettle to cool and then thoroughly dry with a soft cloth.

NOTE: Make sure that the Kettle, Power Base and cord are completely dry before and after each use.

After using the kettle for a long period of time, you may notice residue from hard water accumulate on the bottom interior of the Kettle. To remove, let soak with water and vinegar, then wipe down.



HOT IDEAS

Get creative with these suggestions for delicious treats to make with your Insulated Electric Kettle. Just heat water and then add to your dish!



French Press Coffee



Miso Soup



Ramen



Bouillon Soup



Hot Tea



Udon



Couscous



Oatmeal




Hot Chocolate

**FEEL GOOD
GUARANTEE™**

Dash values quality and workmanship and stands behind this product with our Feel Good Guarantee™. To learn more about our commitment to quality, visit bydash.com/feelgood.

Our US-based customer support team is at your service
Monday - Friday during the times below.
Reach us at **1 (800) 898-6970** or support@bydash.com

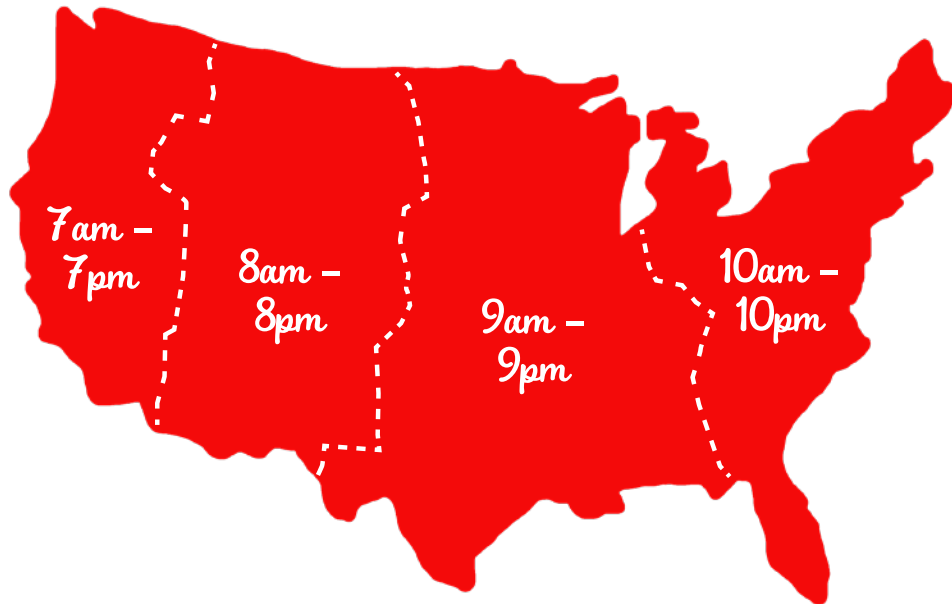

Hey **Hawaii!** You can reach our customer service team from **5AM to 5PM**.
And also, **Alaska**, feel free to reach out from **6AM - 6PM**.

STOREBOUND, LLC - 1 YEAR LIMITED WARRANTY

Your StoreBound product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, StoreBound, LLC will repair or replace the defective part. To process a warranty claim, contact Customer Support at 1-800-898-6970 for further assistance and instruction. A Customer Support agent will assist you by troubleshooting minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating the date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. We are unable to ship returns to a PO box. StoreBound will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

Send all inquiries to support@storebound.com.

There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. STOREBOUND SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

REPAIRS

DANGER! Risk of electric shock! The Insulated Electric Kettle is an electrical appliance.

Do not attempt to repair the appliance yourself under any circumstances.

Contact Customer Support regarding repairs to the appliance.

TECHNICAL SPECIFICATIONS

Model: DETK300

Voltage: 120V ~ 60Hz

Power Rating: 1500 W

Stock#: DETK300_20200214_V4



1-800-898-6970 | @unprocessyourfood | bydash.com