 




DIM813

 
TREAT MAKER SYSTEM

With 6 Removable Nonstick Plates

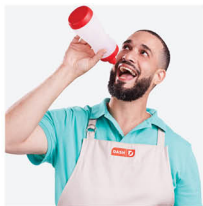

**WELCOME
TO THE FOODIE
FAMILY**

We hope you *love* our products as much as our team does. 

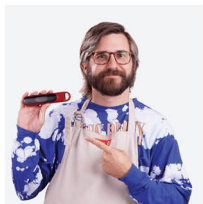

MULTIMAKER™ TREAT MAKER SYSTEM

Important Safeguards.....	4-9
Parts & Features.....	10-11
Before First Use.....	12
Using the Treat Maker System.....	13-21
Cleaning & Maintenance.....	23
Troubleshooting.....	24-25
Recipes.....	27-40
Customer Support.....	42
Warranty.....	43

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

When using electrical appliances, basic safety precautions should always be followed, including:

- Read all instructions before use.
- Remove all bags and packaging from appliance before use.
- Never leave appliance unattended when in use.
- Make sure the appliance is cleaned thoroughly before using.
- Do not use appliance for other than intended use. For household use only. Do not use outdoors.
- Only use the appliance on a stable, dry surface.
- Do not place appliance on or near a hot gas burner, hot electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- This appliance can be used by persons with reduced physical, sensory, or mental capabilities or lack of experience of knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- This appliance is not a toy. Do not let children use this appliance. Close supervision is necessary when any kitchen appliance is used by or near children.
- Do not use metal utensils on the Cooking Surface as this will damage the nonstick surface.
- Warning: Hot surfaces! Never touch the Cooking Surface or Cover while appliance is in use. Always lift and lower the Cover by the Handle.

- DO NOT lift the Cover so that your arm is over the Cooking Surface as it is hot and may cause injury. Lift from the side.
- DO NOT use the Treat Maker near water or other liquids, with wet hands, or while standing on a wet surface.
- To prevent the risk of fire, electric shock, or personal injury, do not put cord, plug, or appliance in or near water or other liquids. The Maker is NOT dishwasher safe.
- Do not let the cord touch hot surfaces or hang over the edge of tables or counters.
- Refrain from using attachments that are not recommended by the appliance manufacturer, as this may result in fire, electric shock, or personal injury.
- Unplug the appliance and allow to cool prior to moving, cleaning, storage, and when not in use. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
- DO NOT remove the Removable Plates until the Treat Maker has completely cooled. Failure to do so may result in injury.
- Warning: The Treat Maker will still heat up if plugged in without any Removable Plates in place. Always have the Removable Plates properly in place in the Maker before plugging it in.
- Never use abrasive cleaning agents to clean the appliance as this may damage the Treat Maker and the nonstick Removable Plates.
- The Removable Plates are dishwasher safe on the top rack, but we recommend hand washing to preserve the life of the product. Let the Removable Plates cool before removing and/or washing.
- Do not operate this appliance with a damaged cord, damaged plug, after the appliance malfunctions, is dropped, or damaged in any manner.

Return appliance to the nearest authorized service facility for examination, repair, or adjustment.

- For maintenance other than cleaning, please contact StoreBound directly at 1-800-898-6970 Monday - Friday or by email at support@bydash.com.
- StoreBound shall not accept liability for damages caused by improper use of the appliance.
- Improper use of the appliance can result in property damage or even in personal injury.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not completely fit in the outlet, reverse the plug. If it still does not fit,

contact a qualified electrician. Do not attempt to modify the plug in any way.

- A short power supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. An extension cord may be used if care is exercised in its use. If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance. If the appliance is of the grounded type, the extension cord should be a grounding 3-wire cord. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

GARANTIES IMPORTANTES: VEUILLEZ LIRE ET CONSERVER CE MODE D'EMPLOI ET D'ENTRETIEN

Lors de l'utilisation d'appareils électriques, il faut toujours respecter les précautions de sécurité de base, notamment:

- Lisez toutes les instructions avant utilisation.
- Retirez tout sac ou emballage de l'appareil avant utilisation.
- Ne laissez jamais l'appareil sans surveillance pendant son utilisation.
- Assurez-vous que l'appareil est minutieusement nettoyé avant utilisation.
- N'utilisez pas l'appareil en dehors de son utilisation prévue. Pour usage ménager uniquement. Ne l'utilisez pas à l'extérieur.
- N'utilisez l'appareil que sur une surface stable et sèche.
- Ne placez pas l'appareil sur ou à proximité d'un brûleur à gaz ou électrique, ou d'un four chaud.
- Une extrême prudence doit être utilisée lors du déplacement d'un appareil contenant de l'huile chaude ou d'autres liquides chauds.
- Cet appareil peut être utilisé par des personnes dont les capacités physiques, sensorielles ou mentales sont réduites ou qui manquent d'expérience et de connaissances, à condition qu'elles aient reçu une supervision ou des instructions concernant l'utilisation de l'appareil en toute sécurité et qu'elles comprennent les risques encourus.
- Cet appareil n'est pas un jouet. Ne laissez pas d'enfants utiliser cet appareil. Une étroite surveillance est nécessaire lorsqu'un appareil est utilisé par ou à proximité d'enfants.

GARANTIES IMPORTANTES

- N'utilisez pas d'ustensiles en métal sur la surface de cuisson car cela endommagerait la surface anti-adhérente.
- Avertissement : Surfaces chaudes! Ne touchez jamais la surface de cuisson ou le couvercle pendant l'utilisation de l'appareil. Soulevez et baissez toujours le couvercle à l'aide de sa poignée.
- NE soulevez PAS le couvercle pour que votre bras se trouve au-dessus de la surface de cuisson brûlante, car cela pourrait entraîner des blessures. Soulevez par le côté.
- N'utilisez PAS la machine à proximité de l'eau ou d'autres liquides, avec des mains mouillées, ou si vous vous tenez sur une surface mouillée.
- Afin d'éviter les risques de feux, d'électrocution, ou de dommages corporels, ne mettez pas le cordon, la prise ou l'appareil dans ou à proximité de l'eau ou d'autres liquides. La machine n'est PAS lavable en machine.
- Ne laissez pas le cordon toucher des surfaces chaudes ou pendre au niveau des bords de tables ou de comptoirs.
- Évitez d'utiliser des accessoires qui ne sont pas recommandés par le fabricant de l'appareil, car ils pourraient entraîner un feu, une électrocution ou un dommage corporel.
- Débrancher l'appareil et laissez refroidir avant déplacement, nettoyage ou entreposage. Pour débrancher, saisissez la fiche et retirez-la de la prise. Ne tirez jamais sur le cordon d'alimentation.
- NE PAS retirer les plaques amovibles avant que la machine n'ait complètement refroidi. Le non-respect de cette consigne peut entraîner des blessures.
- Avertissement : la machine chauffera quand même si elle est branchée sans plaques amovibles en place. Veillez à ce que vos plaques amovibles soient toujours bien en place dans la machine avant de la brancher.

 
GARANTIES IMPORTANTES

- N'utilisez jamais des produits d'entretien abrasifs pour nettoyer l'appareil, car cela pourrait endommager la machine et sa surface de cuisson anti-adhérente.
- N'utilisez pas cet appareil avec un cordon ou une prise endommagé(e), ou si l'appareil est défaillant, s'il est tombé ou endommagé de quelque façon. Pour toute inspection, réparation ou ajustement, ramenez l'appareil au détaillant agréé le plus proche.
- Les plaques amovibles peuvent être lavées au lave-vaisselle dans le panier supérieur, mais nous recommandons de les laver à la main pour préserver la durée de vie de votre produit. Laisser refroidir les plaques amovibles avant de les retirer et/ou de les laver.
- Pour toute question liée à l'entretien autre que le nettoyage, veuillez contacter StoreBound directement au 1-800-898-6970 du lundi au vendredi, ou par courriel à support@bydash.com.
- StoreBound n'est nullement responsable des dommages causés par une mauvaise utilisation de l'appareil.
- Une mauvaise utilisation de l'appareil peut entraîner des dommages matériels ou même des blessures corporelles.
- Cet appareil a une fiche polarisée (un des brins est plus large que l'autre). Afin de réduire le risque d'électrocution, cette fiche ne s'insère dans la prise électrique que d'une façon. Si la fiche ne s'insère pas complètement dans la prise, inversez la fiche. Si elle ne s'insère toujours pas, contactez un électricien qualifié. N'essayez pas de modifier la fiche de quelque façon que ce soit.

GARANTIES IMPORTANTES:
VEUILLEZ LIRE ET CONSERVER CE
MODE D'EMPLOI ET D'ENTRETIEN



COOKING SURFACES

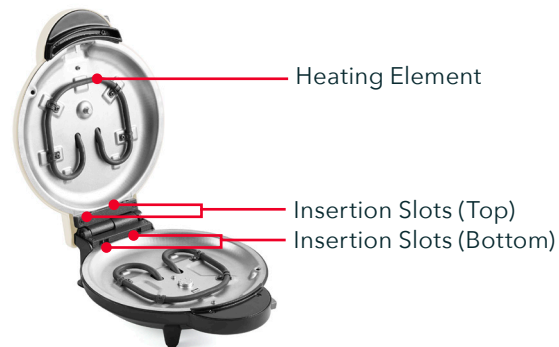

REMOVABLE PLATES



BEFORE FIRST USE

Before first use, remove all packaging materials and thoroughly clean the Treat Maker.



Never touch the Removable Plates or Cover while appliance is in use.



Never touch the Removable Plates or the inside of the Treat Maker while it is plugged in and preheating or when it has not fully cooled.

 


DO NOT lift the Cover with your arm positioned over the Removable Plates. They are hot and may cause injury.



Always lift and lower from the right side using the Cover Handle to avoid hitting the Release Tab.

USING THE TREAT MAKER

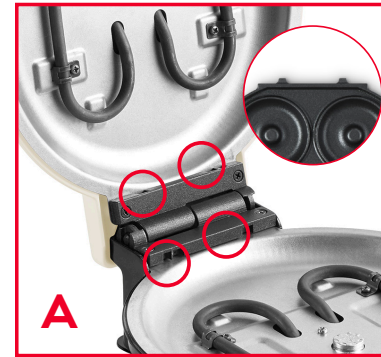

- 1 Choose two Removable Plates for cooking. Install the Removable Plates by sliding them into the Insertion Slots located at the top and bottom of the Treat Maker (**photo A**).
- 2 Each Removable Plate is labeled either "Top" or "Bottom." Slide each plate into its respective slot. Push down at the corner where the plate is labeled "Top" or "Bottom" until there is a slight click indicating that the plate is properly in place (**photo B**).



TOP



BOTTOM

USING THE TREAT MAKER



- 3 To begin cooking, place the appliance on a stable and dry surface. Plug the cord into a power outlet. The Indicator Light will illuminate (photo C) signaling that the Treat Maker is heating up.
- 4 Once the Removable Plates reach the optimal cooking temperature, the Indicator Light will automatically shut off (photo D) indicating that it's ready to begin cooking.



USING THE TREAT MAKER



- 5 Carefully lift the Cover by the Cover Handle and lightly grease both Removable Plates with a small amount of cooking oil (photo E).
- 6 Pour batter onto the bottom Removable Plate (photo F) and close the Cover.



NOTE: Aerosol cooking sprays often contain soy lecithin, an additive that can cause nonstick surfaces to become sticky and hard to clean over time. To ensure the longevity of your product, avoid aerosols and instead grease cooking surfaces using a silicone basting brush or a non-aerosol spray bottle.

USING THE TREAT MAKER

 


- 7 Once treats are cooked to preference, carefully remove from the bottom Removable Plate with a heat-resistant nylon or silicone cooking utensil (photo G).
- 8 When finished cooking, unplug the Treat Maker and allow it to cool before moving, cleaning, or ejecting the Removable Plates (photo H).



CAUTION: Do not use metal utensils to remove or place food on the Removable Plates as this will damage their nonstick coating.

USING THE TREAT MAKER

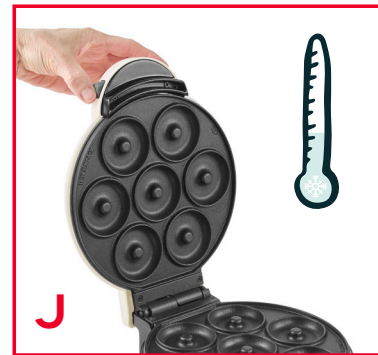

- 9 To remove the Removable Plates, press the corresponding Release Tabs on the side of the Handle [there are Release Tabs at the bottom (photo I) and at the top (photo J)].



CAUTION: Do not attempt to remove the Removable Plates until they have completely cooled.

USING THE TREAT MAKER

PIPING BAG INSTRUCTIONS FOR MINI DONUT PLATE

 
For best results when adding batter to donut molds, use a piping bag for added precision. When a piping bag isn't available, a Ziploc® bag can serve as a substitute.

To use a Ziploc® bag as a piping bag, take a large, clean Ziploc® bag and ensure it is completely dry.

NOTE: Fluted Ziploc® bags cannot be used for this purpose, only bags with straight 90° angled corners are suitable.



USING THE TREAT MAKER

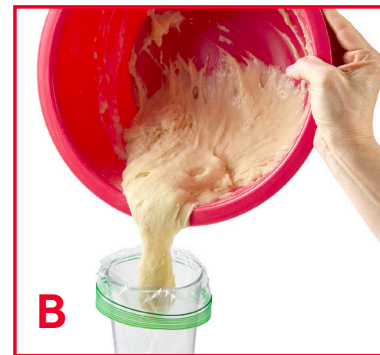

- 1 Find a large cup at least the size of a standard pint glass. Insert one bottom corner of the Ziploc® bag into the glass such that the bag lines the glass (**photo A**).
- 2 Carefully pour or spoon batter into the bag. Only fill the bag about halfway to ensure there is enough space to grip the bag while piping (**photo B**).

USING THE TREAT MAKER



- 3 Grasp the excess plastic of the bag and pull it out of the glass. Make a fist around the excess plastic to grip the bag, squeezing to push all batter down into the corner of the bag and to push out any excess air from the top of the bag (photo C).
- 4 Use scissors to cut a small tip off of the corner of the Ziploc® bag. Start with a small cut and gradually increase the size if needed, depending on the thickness of the batter (photo D).

USING THE TREAT MAKER



- 5 Hold the bag over each donut mold and gently squeeze the bag to pipe batter into each mold. For each mini donut, start from the top and pipe in a circular motion. Fill each mold about three-quarters full. For even cooking and best results, fill the middle donut mold last (photo E).



To ensure even browning, carefully flip the donuts with a toothpick midway through cooking.



CLEANING & MAINTENANCE

Always allow the appliance to cool completely before moving, cleaning, or storing. Do not submerge appliance in water or any other liquids. Never use abrasive cleaning agents to clean the appliance as this may damage the Treat Maker.

In order to keep the Treat Maker in pristine working order, thoroughly clean the appliance after each use. This will prevent the build-up of food or oil.

- Before removing the Removable Plates and after use, unplug the Treat Maker to allow it to cool completely.
- Allow the Removable Plates to cool before touching or running them under water.
- The Removable Plates are dishwasher safe, but hand washing is recommended to preserve the nonstick cooking surface.
- To hand wash the Removable Plates, use a damp, soapy cloth to wipe down. Thoroughly rinse the cloth and wipe again. If any food remains, apply a small amount of cooking oil and let sit for 5-10 minutes. Then scrub the Removable Plates with a sponge or soft-bristled brush to dislodge food. Use a damp, soapy cloth to wipe down Removable Plates. Rinse the cloth thoroughly and wipe again. If food still remains, apply cooking oil once more and let sit for a few hours before scrubbing again.
- Thoroughly dry the Treat Maker before storing.

TROUBLESHOOTING

While Dash products are durable, you may encounter one or more of the problems listed below. If the issue is either not solved by the solutions recommended below or not included on this page, please contact our Customer Support team at 1-800-898-6970 or support@bydash.com.

ISSUE	SOLUTION
The light on the Treat Maker keeps shutting off.	This is normal. During the cooking process, the heating element will automatically turn on and off to regulate the temperature and ensure that the Removable Plates do not get too hot or cold. When this occurs, the Indicator Light turns on and off.
How do I know when the Treat Maker is heated and ready to use?	When the Treat Maker reaches the optimal temperature, the Indicator Light shuts off and that means it's ready to get cooking!
There is no On/Off Button. How do I turn the Treat Maker off and on?	To turn on, simply plug in the power cord. When finished cooking, turn off the Treat Maker by unplugging it.

TROUBLESHOOTING

ISSUE	SOLUTION
When using the Treat Maker, the Cover gets very hot. Is this normal?	Yes, this is completely normal. When using the Treat Maker, always lift and lower the Cover by the Cover Handle. To prevent personal injury, DO NOT lift the Cover with your arm positioned over the Removable Plates. They are hot and may cause injury.
After using the Treat Maker a few times, food is starting to stick to the surface. What is happening?	There is probably a build-up of burnt food residue on the Removable Plates. This is normal, especially when cooking with sugar. Allow the appliance to cool fully. Then, use a damp, soapy cloth to wipe down the Plates. Thoroughly rinse the cloth and wipe again. If any food remains, apply a small amount of cooking oil and let sit for 5-10 minutes. Then scrub with a sponge or soft-bristled brush to dislodge food.
The Indicator Light will not turn on and the Removable Plates are failing to heat.	<ol style="list-style-type: none">1. Ensure that the power cord is plugged into the power outlet.2. Check to make sure the power outlet is operating correctly.3. Determine if a power failure has occurred in your home, apartment or building.



RECIPE GUIDE



Follow us!

[@bydash](#) | recipes, videos & inspiration

[@unprocessyourfood](#) | veg & vegan-friendly meals



CLASSIC WAFFLE BITES

Prep Time: 5-7 minutes • *Cook Time:* 18-20 minutes • *Serves:* 26-28 waffle bites

Ingredients:

1 cup flour	1 egg
1 tablespoon sugar	1 cup milk
2 teaspoons baking powder	2 tablespoons melted butter or vegetable oil
¼ teaspoon salt	

Directions:

1. In a medium bowl, sift the flour, sugar, baking powder, and salt. In a separate bowl, whisk the egg, milk, and melted butter. Add the wet ingredients to the dry and mix until just incorporated.
2. Insert the Waffle Bite Plates into the Treat Maker. Preheat and grease the cooking surfaces with a light coating of cooking oil. Pour ¼ cup of batter into each Waffle Bite mold and cook until golden brown. Repeat with the remaining batter.
3. Serve with maple syrup for dipping and enjoy bite-sized deliciousness!



CHICKEN & WAFFLE BITES

Prep Time: 20-25 minutes • Cook Time: 20-25 minutes • Serves: 26-28 waffle bites

Ingredients:

For the Fried Chicken:

2 large boneless chicken breasts, cut into small pieces
2 cups butter milk
1 cup all-purpose flour
½ cup cornstarch
2 teaspoons garlic powder
2 teaspoons smoked paprika
1 teaspoon salt
½ teaspoon onion powder
½ teaspoon freshly ground black pepper
2 cups vegetable oil

For the Maple Honey Butter:

¼ cup unsalted butter, softened
1½ tablespoons honey
1 tablespoon maple syrup
Pinch salt

For the Waffle Bites

1 cup flour
1 tablespoon sugar
2 teaspoons baking powder
¼ teaspoon salt
1 egg
1 cup milk
2 tablespoon melted butter
or vegetable oil

Directions:

1. In a large bowl, coat chicken pieces with buttermilk. Stir well to make sure the chicken is fully coated. Cover and refrigerate for 6 hours or overnight.
2. For the maple honey butter, add softened butter, honey, maple syrup, and salt to a medium bowl and whisk until well combined. Set aside or refrigerate until needed. Bring to room temperature before serving.
3. To cook chicken, combine flour, cornstarch, garlic powder, paprika, salt, onion powder, and black pepper in a wide bowl.
4. In a deep skillet or saucepan, heat oil over medium-high heat. Remove the pieces of chicken from the buttermilk mixture, allowing the excess to drip off. Coat each piece in the flour mixture.
5. Carefully add each piece to the skillet or saucepan, being careful not to overcrowd. Fry the chicken until golden, about 3-5 minutes per side, and transfer to a towel-lined plate. Repeat with remaining chicken. Set aside.
6. To prepare waffle bites, follow the Classic Waffle Bites Recipe on Page 29.
7. Spread the maple honey butter over each waffle bite and top with a piece of fried chicken. Drizzle with additional honey as desired.
8. Serve and enjoy this sweet and savory classic!



MINI BACON CORN MUFFINS

Prep Time: 15-20 minutes • Cook Time: 12-14 minutes • Serves: 24-26 mini muffins

Ingredients:

For the muffins:

- 4 strips of bacon
- ¾ cup all-purpose flour
- ½ cup corn meal
- ¾ teaspoon salt
- 2 teaspoons baking powder
- 2 tablespoons brown sugar
- ¾ cup milk
- 1 egg
- 3 tablespoons melted butter
- 1 tablespoon reserved bacon fat

For the frosting:

- 8 ounces room temperature cream cheese
- 1 tablespoon honey
- 2 tablespoons hot sauce
- 1 bunch of chives

Directions:

1. Preheat oven to 375°F. Place bacon on a baking sheet and bake in oven for 12 minutes.
2. Remove from the oven and place bacon on a paper towel to drain. Then pour the bacon fat from the baking sheet into a glass container. Once bacon is cool, cut into small pieces for garnish.
3. Combine all dry ingredients in a bowl. In a separate bowl, combine the egg, milk, butter, and bacon fat until mixed through. Mix the wet ingredients into the dry ingredients and stir until combined.
4. Insert Mini Cupcake Plate into the Treat Maker. Preheat and grease the cooking surfaces with a light coating of cooking oil. Add 1 tablespoon of batter into each cupcake mold and bake until light brown, about 2-3 minutes.
5. Carefully remove the muffins using silicone tongs and allow them to cool.
6. Prepare the cream cheese frosting by mixing all ingredients. Transfer to a piping bag and pipe onto cooled corn muffins in a circular motion. Then top each muffin with a small piece of bacon.
7. Serve and dig in whole hog!



MINI BLUEBERRY MUFFINS

Prep Time: 10-12 minutes • **Cook Time:** 20-24 minutes • **Serves:** 35-40 mini muffins

Ingredients:

1¼ cups all-purpose flour

1 teaspoon salt

2 teaspoons baking powder

6 tablespoons unsalted butter,
softened

¾ cup white sugar

1 egg

1 teaspoon vanilla extract

⅓ cup whole milk

1½ cups fresh blueberries

Directions:

1. In a bowl, combine flour and baking powder.
2. Using a stand mixer or hand mixer, cream together butter and sugar.
3. Add egg to butter mixture and mix well. Then add vanilla, salt, and flour mixture and mix on low speed until combined.
4. Add milk and mix until batter is smooth. Then fold in blueberries.
5. Insert Mini Cupcake Plates into Treat Maker. Preheat and grease the cooking surfaces with a light coating of cooking oil. Add 1 tablespoon of batter into each cupcake mold and cook for about 2-3 minutes.
6. Carefully remove the muffins using silicone tongs.
7. Serve warm and enjoy this homemade mini version of a coffee shop classic!



MINI CAKE DONUTS

Prep Time: 5-7 minutes • **Cook Time:** 20-22 minutes • **Serves:** 25-28 mini donuts

Ingredients:

1½ cups all-purpose flour	1 large egg
2 teaspoons baking powder	½ cup whole milk
½ cup sugar	1 teaspoon vanilla extract
¼ teaspoon salt	4 tablespoons unsalted butter, melted

Directions:

1. In a large mixing bowl, mix flour, baking powder, sugar, and salt together.
2. In a separate bowl, whisk together egg, milk, vanilla extract, and butter. Mix dry ingredients into the wet ingredients until well combined.
3. Insert Mini Donut Plates into Treat Maker. Preheat and grease the cooking surfaces with a light coating of cooking oil. Follow Piping Bag Instructions on page 18. Pipe batter into donut molds until each mold is about ¾ full.
4. Bake for 1½ minutes. To achieve even brownness on both sides, open and use a toothpick to flip donuts and bake for another 2-3 minutes or until desired brownness.
5. Use tongs to remove donuts and transfer to a cooling rack.
6. Serve plain or top with glaze of choice and enjoy 360° of deliciousness!



POTATO & CHEDDAR BITES

Prep Time: 10-12 minutes • **Cook Time:** 20-25 minutes • **Serves:** 20-25 bites

Ingredients:

2 pounds baking potatoes—peeled, coarsely shredded and squeezed dry (about 4 medium potatoes)	cheddar cheese, plus more for topping
2 large eggs, lightly beaten	3 tablespoons melted unsalted butter, plus more for brushing
3 tablespoons all-purpose flour	½ cup crumbled cooked bacon, plus more for topping {optional}
1½ teaspoons kosher salt	⅓ cup chopped chives, plus more for topping
1 teaspoon baking powder	Sour cream, for topping
¾ cup shredded extra-sharp yellow	

Directions:

1. Preheat the oven to 200°F. Insert the Waffle Bite Plates into the Treat Maker. Preheat and grease the cooking surfaces with a light coating of cooking oil.
2. In a large bowl, mix the potatoes with the eggs, flour, salt, baking powder, ¾ cup of cheese, and butter. Fold in the ½ cup of bacon and chives.
3. Spread 1-2 tablespoons of potato mixture onto each Waffle Bite Mold. Close and cook until golden and crisp, about 5-7 minutes. Season with salt.
4. Transfer to a rack in the oven to keep warm. Repeat with the remaining potato mixture.
5. When ready to serve, top with sour cream, crumbled bacon, cheddar, and chopped chives. Enjoy as a breakfast side or as a stand-alone snack!



CHOCOLATE FROSTED CAKE DONUTS

Prep Time: 5-7 minutes • **Cook Time:** 20-22 minutes • **Serves:** 25-28 mini donuts

Ingredients:

1½ cups all-purpose flour
⅓ cup cocoa powder
2 teaspoons baking powder
¼ teaspoon salt
1 large egg
½ cup sugar
¼ cup sour cream or Greek yogurt
1 teaspoon vanilla extract
3 tablespoons butter, melted
⅔ cup whole milk

For Chocolate Glaze:

¾ cup confectioners' sugar
3 tablespoons cocoa powder
½ teaspoon vanilla extract
2½ tablespoons half and half



Chef Tip!

If extra toppings are desired, be sure to add while coating is wet.

Directions:

1. Mix flour, cocoa powder, baking powder, and salt in a medium bowl.
2. In a separate bowl, whisk together the egg, sugar, vanilla extract, milk, and melted butter. Mix in half the flour mixture then half the Greek yogurt. Repeat until batter has a smooth texture.
3. Insert Mini Donut Plates into Treat Maker. Preheat and grease the cooking surfaces with a light coating of cooking oil.
4. Follow Piping Bag Instructions on Page 18. Pipe batter to donut molds until about ¾ full.
5. Bake for 2-3 minutes, or until desired doneness.
6. Allow to cool completely on a cooling rack.
7. To prepare chocolate glaze, whisk together all ingredients in a small bowl until creamy and smooth.
8. Dip top of donuts into the glaze and place on a cooling rack until coating is firm.
9. Serve and get ready to go loco for cocoa!

MORE RECIPE IDEAS

RECIPE IDEA	INGREDIENTS	COOKING TIME
Protein Waffle	Classic Waffle Recipe (pg. 29) 1 scoop protein powder	4-6 min
Cornbread Waffle	¼ cup cornbread batter	6-8 min
Mashed Potato Bite	3 tablespoons mashed potatoes	5 min
S'more Biscuit	1 refrigerated biscuit dough, sliced lengthwise 2 squares milk chocolate 5 mini marshmallows	5-7 min
Grilled Cheese	2 slices white or wheat bread, buttered 2 slices American Cheese	5 min
Chocolate Chip Cookie	2 tablespoons cookie dough	5-7 min
Waffle Omelette	1 egg beaten 2 tablespoons chopped veggies 1 tablespoon grated Swiss cheese	5 min

OVER 80
Brilliant
WAFFLE RECIPES

for your Dash Mini Waffle Maker...



available now

 
in our
**SWEET
NEW
COOKBOOK**

find more creative recipes at [bydash.com!](https://bydash.com)



We want you to Feel Good about your Dash products! Sign up for our Feel Good Rewards program at bydash.com/feelgood to **DOUBLE** your warranty, part of our commitment to quality and customer satisfaction.

We're here to help! Our customer support teams in the US and Canada are at your service Monday - Friday. Contact us at 1 (800) 898-6970 or support@bydash.com.

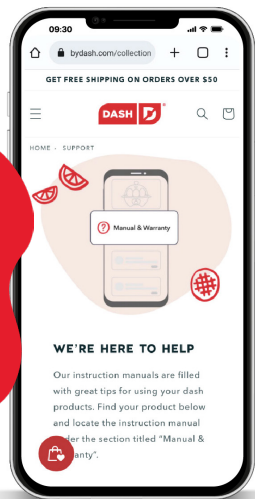

STOREBOUND, LLC - 1 YEAR LIMITED WARRANTY

Your StoreBound product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, StoreBound, LLC will repair or replace the defective part. To process a warranty claim, contact Customer Support at support@bydash.com for further assistance and instruction. A Customer Support agent will assist you by troubleshooting minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating the date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. StoreBound will not ship to a PO Box. StoreBound will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

All replacement inquiries are to be submitted to support@bydash.com or contact Customer Support at 1-800-898-6970. There are no express warranties except as listed above.

Warranty is voided if used outside of the 50 states of the United States, the District of Columbia or the 10 provinces of Canada. Warranty is voided if used with an electric adapter/converter or used with any voltage plug other than 120V.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. STOREBOUND SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Refurbished items or items not purchased through an authorized retailer are not eligible for warranty claims.

All trademarks not owned by StoreBound that appear in the manual are property of their respective owners, who are not affiliated with StoreBound.

Ziploc is a registered trademark of S. C. Johnson & Son, Inc.

REPAIRS

DANGER! Risk of electric shock! The Dash MultiMaker™ is an electrical appliance. Do not attempt to repair the appliance yourself under any circumstances. Contact Customer Support regarding repairs to the appliance.

TECHNICAL SPECIFICATIONS

Voltage 120V ~ 60Hz
Power Rating 800W
Stock#: DIM813_20240429_V1



This product has passed food safety testing in accordance with FDA guidelines.



1-800-898-6970 | @bydash | bydash.com