



MINI CUPCAKES

MAKE IT ALL!



FULL-SIZED WAFFLE



MINI DONUTS



WAFFLE BITES

SCAN HERE FOR RECIPES!



INSTALLING THE REMOVABLE PLATES



A

- 1 Choose two Removable Plates for cooking. Each Plate has two metal tabs that jut out from one side. Each half of the MultiMaker™ has two Plate Insertion Grooves located near the hinge. Install the Removable Plates by sliding them into the Insertion Slots located at the top and bottom of the Treat Maker (**photo A**). Guide the tabs into the two Plate Insertion Grooves (**photo B**). Once inserted, simply push until there's a slight click. This indicates that the Plate is properly in place.



B

WARNING: Always insert Plates PRIOR to powering on the Treat Maker. Never attempt to insert Plates into a hot Treat Maker, or while it is plugged in and in use.

USING THE TREAT MAKER SYSTEM



1 To begin cooking, place the appliance on a stable and dry surface. Plug the cord into a power outlet. The Indicator Light will illuminate signaling the Treat Maker is heating up. Once the Removable Plates reach the optimal cooking temperature, the Indicator Light will automatically shut off indicating it's ready to begin cooking.



2 Carefully lift the Cover by the Cover Handle and lightly grease both Removable Plates with a small amount of cooking oil (**photo A**). Pour batter onto the bottom Removable Plate and close the Cover (**photo B**).



3 Once food is cooked to preference, carefully remove from the bottom Removable Plate with a heat-resistant nylon or silicone cooking utensil (**photo C**).

REMOVING THE PLATES



- 1** When finished cooking, unplug the Treat Maker and allow it to cool before moving, cleaning, or ejecting the Removable Plates.
- 2** To remove Removable Plates once cooled, press the Plate Release Tabs. The Plates will pop up and can be fully removed by angling the plate and pulling it such that the metal tabs become free from the Plate Insertion Grooves (**photo A**).



CAUTION: Do not attempt to remove the Removable Plates before they have fully cooled off. Allow Plates and Treat Maker to completely cool before handling, moving, cleaning, or storing.