



#DSDR400

SMARTSTORE™ **DISH RACK**

Instruction Manual
































SMARTSTORE™ **DISH RACK**


Parts & Features	4
Setting Up Your SmartStore™ Dish Rack	5-8
Using Your SmartStore™ Dish Rack	10-11
Cleaning & Maintenance	12
Notes	13
Customer Support	14
Warranty	15








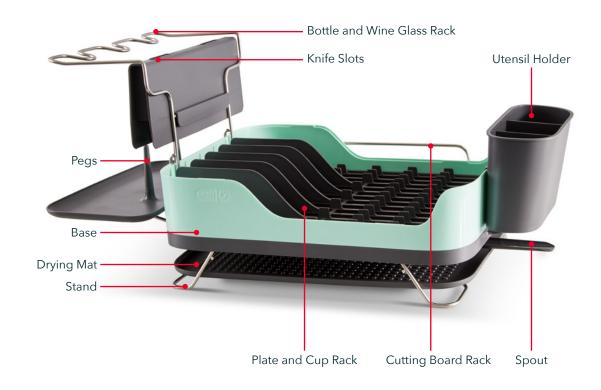

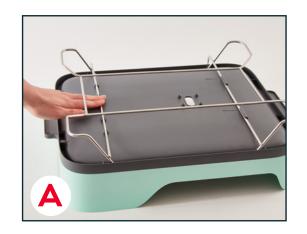


1 Turn the Base upside down and attach the metal Stand so that it snaps into place, pressing down at the sides of the stand and then middle (photo A).

NOTE: You may attach the Stand with the Cutting Board Rack on either the front or back of the Base.

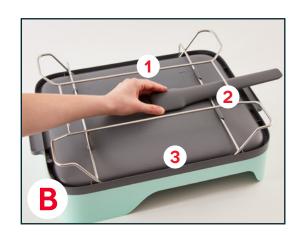

2 Attach the Spout to the bottom of the Base in one of three positions. The Spout should be positioned so that it drains into your sink (photo B).


 \cdot 4 \cdot

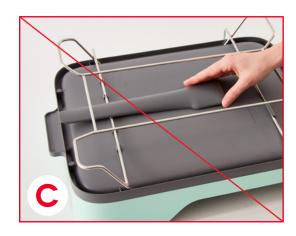


3 DO NOT attach the Spout so that it does not extend beyond the edge of the Base (photo C).



4 Flip the Base over. Slide the Plate and Cup Rack on top and attach the Utensil Holder to the right side of the Base (photo D).

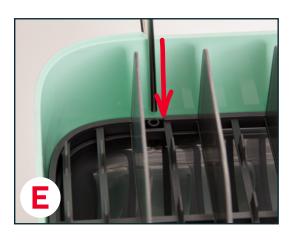

5 Add the Wine Glass Rack, aligning it into the holes on the left side of the Base (photo E).

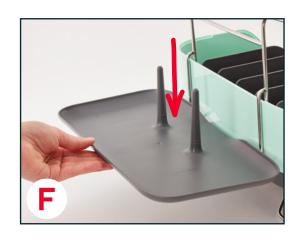

6 Push the Pegs into the holes on the Bottle Rack. Clip the Bottle Rack onto the bottom of the Wine Glass Rack (photo F).

 \cdot 6 \cdot

SETTING UP YOUR SMARTSTORE™ DISH RACK



7 Attach the Knife Slots to the Wine Glass Rack (photo G).



8 Store the Drying Mat below the Base (photo H).





Slide knives blade-down into the Knife Slots (photo A).



Hang stemmed wine glasses upside down on the Wine Glass Rack (photo B).



Dry bottles upside down using the Pegs on the Bottle Rack (photo C).



For storage, detach the Utensil Holder and the Bottle and Wine Glass Rack and place them on top of the Base (photo D).

 \cdot 10 \cdot

CLEANING & MAINTENANCE NOTES

 Clean the Dish Rack with a non-abrasive sponge and warm, soapy water as needed.

- The Drying Mat and Utensil Holder are dishwasher safe.
- Allow all pieces to dry completely before disassembling and storing.
- NOTE: The maximum weight capacity of the Plate and Cup Rack is 40lbs, and the maximum weight capacity of the Bottle and Wine Glass Rack is 4lbs.



· 12 ·

CUSTOMER SUPPORT WARRANTY



Dash values quality and workmanship and stands behind this product with our Feel Good Guarantee $^{\text{TM}}$. To learn more about our commitment to quality, visit bydash.com/feelgood.

Our customer support teams in the US and Canada are at your service Monday-Friday during the times below. Reach us at 1 (800) 898-6970 or support@bydash.com



Hey **Hawaii!** You can reach our customer service team from **5AM** to **5PM**. And also, **Alaska**, feel free to reach out from **6AM** to **6PM**.

STOREBOUND, LLC - 1 YEAR LIMITED WARRANTY

Your StoreBound product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, StoreBound, LLC will repair or replace the defective part. To process a warranty claim, contact Customer Support at 1-800-898-6970 for further assistance and instruction. A Customer Support agent will assist you by troubleshooting minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating the date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. We are unable to ship returns to a PO box. StoreBound will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

Send all inquiries to support@bydash.com.

There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. STOREBOUND SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

REPAIRS

Do not attempt to repair the product yourself under any circumstances. Contact Customer Support regarding repairs to the product.

TECHNICAL SPECIFICATIONS

Stock#: DSDR400_IM_20210223_V2

Made in China



· 14 ·

