Care & Use

Wash before first use.

Make sure lid is properly threaded to the body and screwed.

DO NOT microwave or freeze.

DO NOT use cleaners containing bleach, chlorine, or harsh chemicals.

CLEANING INSTRUCTIONS:

Dishwasher safe top rack only, handwash recommended.

Wash before first use.

Rinse after each use with warm water and put lid in the open position.

Remove lid and let soak in hot soapy water for 10 minutes. Hand wash with warm water and mild detergent.

Always store bottle with lid removed to allow all parts to dry completely.