



DSUH600

SMARTSTORE™ ESSENTIAL UTENSIL SET

Instruction Manual





SMARTSTORE™

ESSENTIAL UTENSIL SET

- Parts & Features.....4-5
- Using Your Dash Utensils.....6
- Using Your Utensil Holder.....7
- Cleaning & Maintenance.....8
- Customer Support.....10
- Warranty.....11



the dash team!

PARTS & FEATURES



Pasta Server



Slotted Turner



Solid Spoon




Pizza Cutter



Tongs

PARTS & FEATURES

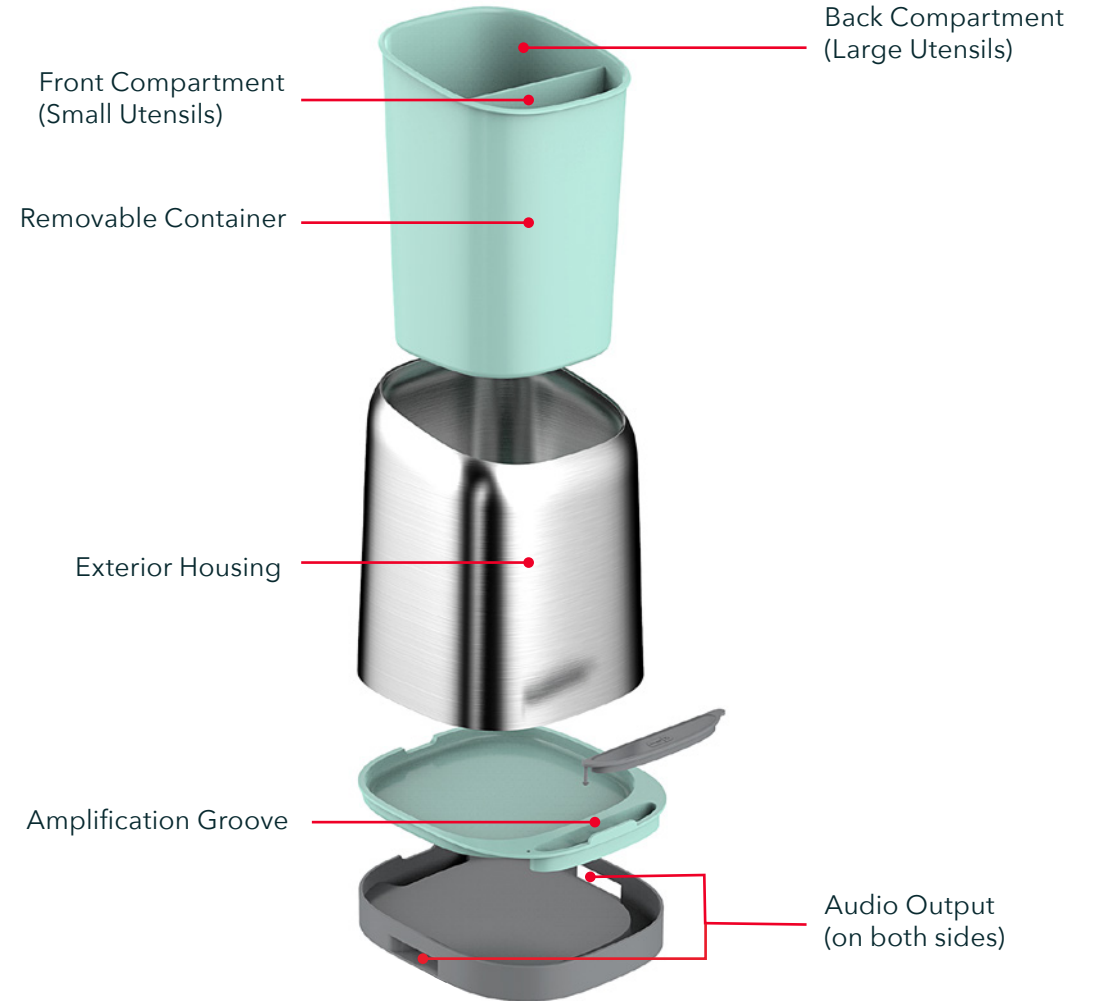

USING YOUR DASH UTENSILS



The Slotted Turner has a ginger/garlic grating surface on the head near where it meets the handle.



The Solid Spoon has measuring marks, so you can use it in place of other measuring cups.



Use the hole in the center of the Pasta Server to measure out one serving of long pasta like spaghetti.



Keep the Tongs locked for storage by pulling out the tab in the back!

USING YOUR UTENSIL HOLDER

The SmartStore™ Kitchen Utensil Holder is perfect for keeping large and small kitchen utensils tidy while still within reach. It's also great for: desk organization, bathroom organization, crafting areas, garages, work benches, and more!

The front compartment of the Utensil Holder is ideal for shorter utensils like can openers, a garlic press, etc. The back compartment is better suited for larger items like spatulas and serving spoons.

USING AUDIO AMPLIFICATION ON YOUR SMARTSTORE™ UTENSIL HOLDER

To use the SmartStore™ Utensil Holder to amplify the speakers on your mobile device:

1. First lift the cover from the groove in the front of the Utensil Holder.
2. Place your mobile device in the holder so the speakers are facing down into the groove. You may need to remove any headphones or attachments to the mobile device. The amplification process should work even if your phone has a case!
3. Make sure your phone's volume and speakers are on.
4. Turn on your music and enjoy!

NOTE: For best amplification quality, make sure the audio output on both sides of the Utensil Holder is unobstructed.



CLEANING & MAINTENANCE

The surface of your Dash utensils are made of nylon.

Nylon utensils are heat-safe up to 400°F.

Do not leave the utensils on extremely hot surfaces, burners, or over an open flame, as this will cause damage to the utensils.

The edge of the Pizza Cutter is sharp! Use caution when cutting, and do not allow children to play with or use the Pizza Cutter without adult supervision.

Utensils are top rack dishwasher safe. You can also wash them by hand using a soft sponge and warm, soapy water.

The Utensil Holder is not for use on hot surfaces, do not store it on areas like a stovetop where it may be exposed to excess heat.

The Utensil Holder's inner plastic container is removable and is top rack dishwasher safe!

It is **NOT** recommended to use the exterior piece of the Utensil Holder in the dishwasher, as this may deteriorate the metallic finish.


The exterior of the Utensil Holder can be washed with warm, soapy water and dried. Remember to dry the Utensil Holder **FULLY** before attempting to use it with any electronic devices.



**FEEL GOOD
GUARANTEE™**

Dash values quality and workmanship and stands behind this product with our Feel Good Guarantee™. To learn more about our commitment to quality, visit bydash.com/feelgood.

Our customer support teams in the US and Canada are at your service Monday - Friday during the times below. Contact us at **1 (800) 898-6970** or support@bydash.com

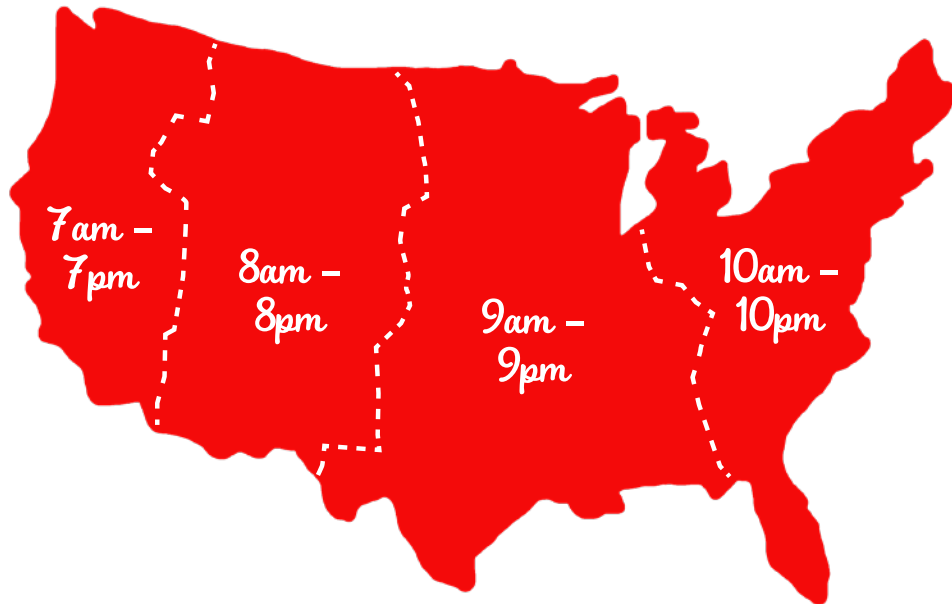

Hey **Hawaii!** You can reach our customer service team from **5AM to 5PM**. And also, **Alaska**, feel free to reach out from **6AM to 6PM**.

STOREBOUND, LLC - 1 YEAR LIMITED WARRANTY

Your StoreBound product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, StoreBound, LLC will repair or replace the defective part. To process a warranty claim, contact Customer Support at 1-800-898-6970 for further assistance and instruction. A Customer Support agent will assist you by troubleshooting minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating the date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. We are unable to ship returns to a PO box. StoreBound will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

Send all inquiries to support@bydash.com.

There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. STOREBOUND SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Refurbished items or items not purchased through an authorized retailer are not eligible for warranty claims.

REPAIRS

Do not attempt to repair the appliance yourself under any circumstances. Contact Customer Support regarding repairs to the appliance.

TECHNICAL SPECIFICATIONS

Stock#: DSUH600_20210416_v4

Made in China





1-800-898-6970 | @bydash | bydash.com