



#JB065

# DUAL CITRUS JUICER

Instruction Manual | Recipe Guide

 
 


# DUAL CITRUS JUICER



**WELCOME TO THE FOODIE FAMILY**

We hope you *love* our products as much as our team does. 

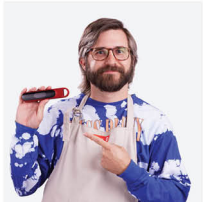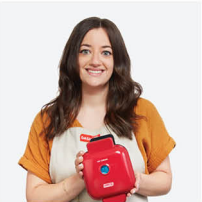

- Important Safeguards ..... 4-7
- Parts & Features ..... 8-9
- Setting Up the Citrus Juicer ..... 10-13
- Using the Citrus Juicer ..... 14-15
- Cleaning & Maintenance ..... 16
- Troubleshooting ..... 17
- Recipe Ideas ..... 18-23
- Customer Support ..... 24
- Warranty ..... 25

# IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

When using electrical appliances, basic safety precautions should always be followed, including:

- Read all instructions carefully.
- Remove all bags and packaging from appliance before use.
- To protect against risk of electrical shock do not put cord, plugs, or appliance in or near water or other liquid.
- This appliance is intended for household use only; please use only as instructed.
- The Citrus Juicer is exclusively designed to extract juice from citrus fruits.
- Keep appliance away from children when in use.
- The Citrus Juicer must not be used for commercial purposes.
- To guard against risk of electric shock, always remove the plug from the outlet rather than pulling on the cord.
- Do not use appliance in or near water or other liquid.
- Do not use the appliance if any parts are damaged.
- Turn the appliance OFF, then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
- Do not operate this appliance with a damaged cord, damaged plug, after the appliance malfunctions, is dropped, or damaged in any manner.
- For any maintenance other than cleaning, please contact StoreBound by phone at 1-800-898-6970 Monday - Friday or by email at support@storebound.com.
- This appliance can be used by persons with reduced physical, sensory, or mental capabilities or lack of experience of knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the

- hazards involved.
- Use only Citrus Juicer attachments recommended or sold by StoreBound. Others may result in fire, electric shock, or injury.
- Do not place on or near a hot gas burner, hot electric burner, or in a heated oven.
- Never leave appliance unattended when in use.
- Do not use outdoors.
- Do not let the cord hang over edge of table, hang over the sink, or touch hot surfaces.
- Avoid contact with moving parts.
- Only use the Citrus Juicer on a stable surface.
- Be certain Lid and Cones are securely in place before using the appliance.
- When cleaning the Base do not submerge in any liquid. Instead use a soft damp cloth to wipe down.
- Do not put the appliance in the refrigerator.
- The appliance is not a toy. Do not let children use this appliance. Close supervision is necessary when any kitchen appliance is used by or near children.
- Always be sure to turn off the appliance prior to assembly, disassembly, cleaning and storage.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not completely fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- Improper use of the appliance can result in property damage or even in personal injury.

# IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

# CONSIGNES DE SÉCURITÉ IMPORTANTES: VEUILLEZ LIRE ET CONSERVER CE MANUEL D'INSTRUCTIONS ET D'ENTRETIEN.

Lors de l'utilisation d'appareils électriques, il faut toujours respecter les précautions de sécurité de base, notamment:

 
- Lisez attentivement toutes les instructions.
- Retirez tous les emballages et les étiquettes de l'appareil avant de l'utiliser.
- Afin de prévenir tout risque d'incendie, de choc électrique, ou de blessures corporelles, ne placez pas le cordon, la prise, ou l'appareil près d'eau ou d'autres liquides.
- Cet appareil est destiné à un usage domestique uniquement; veuillez utiliser uniquement selon les instructions.
- Le Presse-Agrumes est conçu exclusivement pour extraire le jus d'agrumes.
- Gardez l'appareil à l'écart des enfants pendant l'utilisation.
- Le Presse-Agrumes ne doit pas être utilisé à des fins commerciales.
- Pour éviter tout risque de choc électrique, retirez toujours la fiche de la prise plutôt que de tirer sur le cordon.
- N'utilisez pas l'appareil dans de l'eau ou près d'eau ou d'autres liquides.
- Ne pas utiliser l'appareil si des pièces sont endommagées.
- Éteignez l'appareil, puis débranchez-le de la prise lorsqu'il n'est pas utilisé, avant d'assembler ou de désassembler des pièces et avant de le nettoyer. Pour débrancher, saisissez la fiche et retirez-la de la prise. Ne tirez jamais sur le cordon d'alimentation.
- Ne faites pas fonctionner cet appareil avec une fiche endommagée, après un dysfonctionnement de l'appareil, une chute ou un endommagement quelconque.
- Pour tout entretien autre que le nettoyage, veuillez contacter StoreBound par téléphone au 1-800-898-6970 du lundi au vendredi ou par courrier électronique à [support@storebound.com](mailto:support@storebound.com).
- Cet appareil peut être utilisé par des personnes dont les capacités physiques, sensorielles ou mentales sont réduites ou qui manquent d'expérience et de connaissances, à condition qu'elles aient reçu une supervision ou des instructions

- concernant l'utilisation de l'appareil en toute sécurité et qu'elles comprennent les risques encourus.
- Utilisez uniquement les accessoires pour le Presse-Agrume recommandés ou vendus par StoreBound. D'autres peuvent provoquer un incendie, un choc électrique ou des blessures.
- Ne placez pas l'appareil sur ou près d'une source de chaleur telle que: brûleur au gaz ou électrique chaud, ou dans un four chauffé.
- Ne laissez jamais l'appareil sans surveillance pendant son l'utilisation.
- Ne pas utiliser à l'extérieur.
- Ne laissez pas le cordon pendre au bord d'une table, dans un évier, ou toucher une surface chaude.
- Évitez tout contact avec les pièces en mouvement.
- N'utilisez les Presse-Agrumes que sur une surface stable
- Soyez certain que le Couvercle et les Cônes sont bien en place avant d'utiliser l'appareil.
- Lors du nettoyage de la Base, ne pas immerger dans un liquide. Essuyez-le plutôt avec un chiffon doux et humide.
- Ne mettez pas l'appareil au réfrigérateur.
- Cet appareil peut être utilisé par des personnes dont les capacités physiques, sensorielles ou mentales sont réduites ou qui manquent d'expérience et de connaissances, à condition qu'elles aient reçu une supervision ou des instructions concernant l'utilisation de l'appareil en toute sécurité et qu'elles comprennent les risques encourus.
- Veillez toujours à éteindre l'appareil avant l'assemblage, le démontage, le nettoyage et le stockage.
- Cet appareil est muni d'une fiche polarisée (une lame est plus large que l'autre). Afin de réduire le risque de choc électrique, cette fiche ne peut être insérée dans une prise polarisée que d'une seule façon. Si la fiche ne rentre pas complètement dans la prise, retournez-la. Si elle ne rentre toujours pas, contactez un électricien qualifié. N'essayez pas de modifier la fiche de quelque façon que ce soit.
- Une mauvaise utilisation de l'appareil peut entraîner des dommages matériels ou même des blessures corporelles.

# CONSIGNES DE SÉCURITÉ IMPORTANTES: VEUILLEZ LIRE ET CONSERVER CE MANUEL D'INSTRUCTIONS ET D'ENTRETIEN.



## PARTS & FEATURES

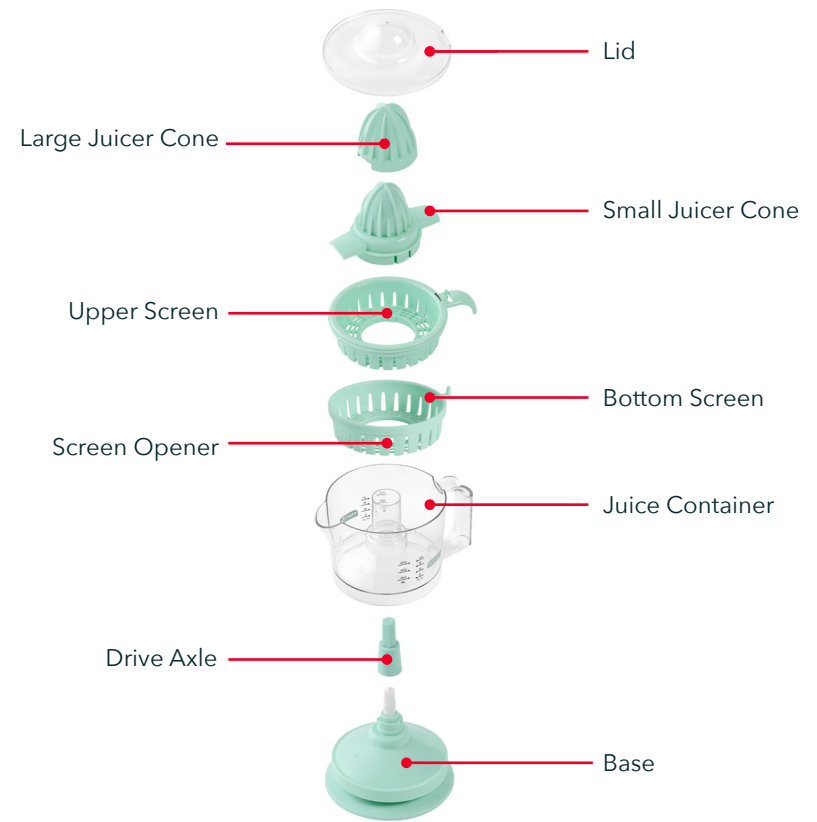


## SETTING UP THE CITRUS JUICER



- 1** Uncoil the Power Cable from the Cable Wrap to the desired length. Place the Base on a dry and solid surface (**Photo A**).
- 2** Place the Juice Container onto the Base with the handle above the arrow. Turn the Juice Container clockwise until it locks into place (**photo B**).
 
## SETTING UP THE CITRUS JUICER

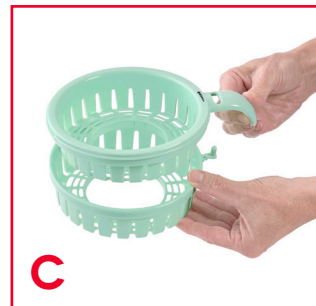

- 3** Place the Upper Screen on the Bottom Screen so that the Screen Opener sticks through the opening and the screens lock into place (**photo C**).
- 4** Place the assembled Screen on the Juice Container so that the handles fit exactly one on top of the other (**photo D**).





## SETTING UP THE CITRUS JUICER



- 5 Place the Small Juicer Cone on the Drive Axle (**Photo E**). In the process, the Small Juicer Cone must lock into the Screen. For large citrus fruits (e.g. oranges, grapefruit), place the Large Juicer Cone on the Small Juicer Cone so that the wings of the Small Juicer Cone fit into the recesses of the Large Juicer Cone (**Photo F**).
- 6 Plug the main cord into a matching wall outlet.

**NOTE:** The power cable can be easily wound up in the Cable Wrap.

## USING THE CITRUS JUICER

Remember to always use fresh, washed fruit and ensure that nothing is on the Screens or in the Citrus Juicer before operating.

- Prior to juicing, cut citrus fruits in half.
- To begin juicing, apply gentle pressure on the half of the citrus fruit when pressing it onto the Juicer Cone, but avoid using too much force. The Juicer Cone will start to rotate and the juice will flow into the Juice Container. Do not let the Juice Container get filled past the 600 milliliter mark. Once it reaches that point, empty the Juice Container into serving glasses.
- To stop juicing, release the Juicer Cone. As soon as it is released, the Citrus Juicer will stop juicing.
- When juicing is complete, unplug the Citrus Juicer first before removing the Juice Container from the Base.
- To remove the Juice Container, turn it counterclockwise and lift it from the Base. Pour out the juice from the container. It is important to clean the appliance immediately after each use to prevent the pulp from drying and sticking to the surface.

## USING THE CITRUS JUICER

### TIPS AND TRICKS

The pulp content in juice can be adjusted by utilizing the Screen Opener. To produce juice with high pulp, adjust the Screen Opener to the large dot mark to allow for a wider opening in the Screen.

- In order to maximize juice yield, the Juicer Cone will reverse rotation after multiple starts and stops.
- If the Juicer Cone is not turning, check for fruit pieces or seeds that might be stuck between the Juicer Cone and the Screen and remove them.





**NOTE:** Make sure to clean the Citrus Juicer immediately after each use to prevent the pulp from drying and sticking to the surface.



**WARNING:** Do not submerge the Base, Power Cable, and Main Plug in water or any liquid. The Base is not dishwasher safe.

## DISASSEMBLY

1. Unplug the Citrus Juicer before disassembling or cleaning.
2. Once unplugged, remove the Lid, Juicer Cones, and Screens.
3. Apply slight pressure on the Screen Opener to disassemble.
4. Turn the Juice Container counterclockwise and lift from the Base.
5. Wipe the Base down with a damp cloth.
6. Wash all detachable accessories by hand. Clean the small cavity in the handle with an adequate amount of hot (not boiling) water.
7. Make sure to thoroughly dry all parts before reassembling the appliance and storing it.

## CLEANING

- The Base, Power Cable with Main Plug must NEVER be immersed in water or any other liquid.
- Never use boiling water to clean the Citrus Juicer.

While Dash products are durable, you may encounter one or more of the problems listed below. If the issue is either not solved by the solutions recommended below or not included on this page, please contact our Customer Support Team at **1-800-898-6970** or **support@bydash.com**.

ISSUE	SOLUTION
<p><b>The Citrus Juicer does not function.</b></p>	<p>Check to see if the appliance is connected to a working power outlet.</p>
<p><b>The Juicer Cone stopped turning.</b></p>	<ol style="list-style-type: none"> <li>1. Make sure to apply additional pressure when pressing down on the Juicer Cone.</li> <li>2. Check to see if there is anything on top of the Screen.</li> <li>3. Check if fruit seeds or pieces have been caught between the Juicer Cones and the Screen.</li> </ol>





# RECIPE GUIDE



Follow us!

@bydash | recipes, videos, & inspiration

@unprocessyourfood | veg & vegan-friendly meals



## BLOOD ORANGE JUICE

2 blood oranges  
4 oranges

## ORANGE GRAPEFRUIT JUICE

3 grapefruits  
5 oranges

## RASPBERRY ARNOLD PALMER

1 cup raspberry tea  
3 lemons







## **SWEET N' SOUR**

2 limes  
4 ripe oranges

## **MINT LIME COOLER**

3 sprigs mint  
2 limes  
Sparkling water

## **ORANGEADE**

 
 
2 lemons  
5 oranges  
Agave





We want you to Feel Good about your Dash products! Sign up for our Feel Good Rewards program at [bydash.com/feelgood](https://bydash.com/feelgood) to **DOUBLE** your warranty, part of our commitment to quality and customer satisfaction.

We're here to help! Our customer support teams in the US and Canada are at your service Monday - Friday. Contact us at 1 (800) 898-6970 or [support@bydash.com](mailto:support@bydash.com).

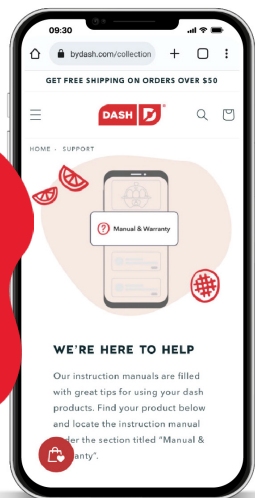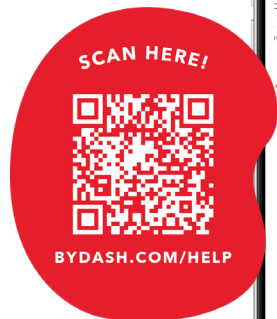

**STOREBOUND, LLC - 1 YEAR LIMITED WARRANTY**

Your StoreBound product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, StoreBound, LLC will repair or replace the defective part. To process a warranty claim, contact Customer Support at 1-800-898-6970 for further assistance and instruction. A Customer Support agent will assist you by troubleshooting minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating the date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. We are unable to ship returns to a PO box. StoreBound will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

Send all inquiries to [support@bydash.com](mailto:support@bydash.com). There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. STOREBOUND SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

**REPAIRS**

**DANGER!** Risk of electric shock! The Dash Dual Citrus Juicer is an electrical appliance. Do not attempt to repair the appliance yourself under any circumstances. Contact Customer Support regarding repairs to the appliance.

**TECHNICAL SPECIFICATIONS**

Voltage 120V ~ 60Hz  
Power Rating 25W  
Stock#: JB065\_20180323\_V14



**This product has passed food safety testing in accordance with FDA guidelines.**





1-800-898-6970 | @bydash | bydash.com