

⚠ BEFORE FIRST USE



Never touch the Cover while appliance is in use.



Never touch the Removable Plates or the inside of the MultiMaker™ while it is preheating or before it has fully cooled off.



DO NOT lift the Cover with your arm positioned over the Removable Plates. They are hot and may cause injury.

INSTALLING THE REMOVABLE PLATES

Choose two Removable Plates for cooking. Install the Removable Plates by sliding them into the two open slots located at the top and bottom of the MultiMaker™ (photo A). Each Removable Plate is labeled either "Top" or "Bottom." Slide each Plate into its respective slot. Push down at the corner where the plate is labeled "Top" or "Bottom" until there is a slight click indicating that the Plate is properly in place (photo B).



TOP



BOTTOM




A



B

COOKING WITH THE MULTIMAKER™ MINI MAKER

To make a mini imprint waffle, use 1.5 tablespoons of batter. For a 4" circular waffle with the imprint, use 3-4 tablespoons of batter.

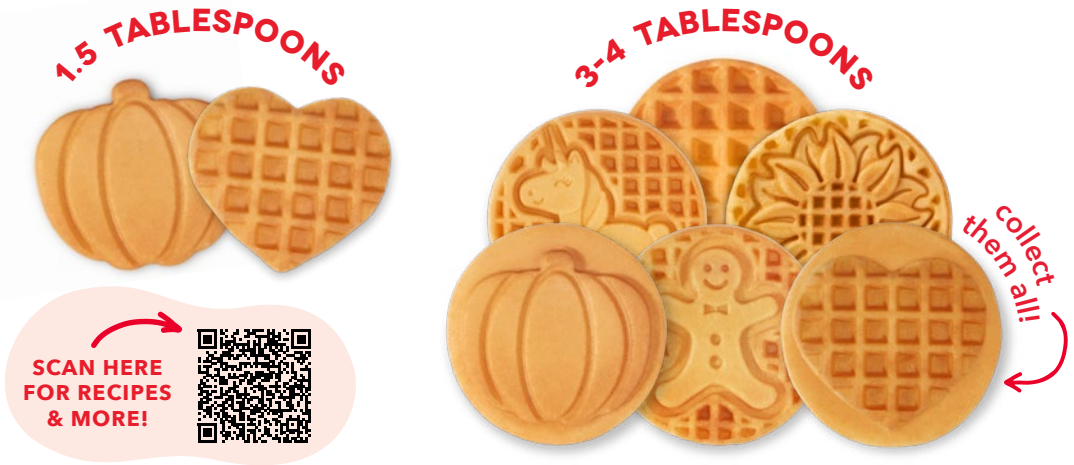

REMOVING THE PLATES

To remove the Plates, press the corresponding Release Tabs inside the Handle [there's one at the bottom (**photo A**) and one at the top (**photo B**).] After pressing the Release Tab, lift and slide the Plate out.



CAUTION: Always lift and lower the Cover Handle from the right side to avoid hitting the Release Tab.