

MULTI-PLATE MINI MAKER

REMOVABLE PLATE QUICKSTART GUIDE



! BEFORE FIRST USE



Never touch the Removable Plates or Cover while appliance is in use.



Never touch the Removable Plates or the inside of the Mini Maker while it is plugged in and preheating, or when it has not fully cooled.



DO NOT lift the Cover so that your arm is over the Removable Plates as they are hot and may cause injury.

INSTALLING YOUR PLATES

Install your Removable Plates by sliding them into the slots located at the top and bottom of the Mini Maker (**photo A**). Each Removable Plate is labeled either "Top" or "Bottom." The Top Plate fits into the top of the Maker (**photo B**). You should feel a slight click when each plate is properly in place.



TOP



BOTTOM



A




B

COOKING WITH YOUR MULTI-PLATE MINI MAKER

To cook a waffle in the shape of a heart or pumpkin using the Heart Waffle Plate or Pumpkin Waffle Plate, use 1.5 tbsp of batter. For a 4" circular waffle, use 3-4 tbsp of batter.

1.5 TBSP

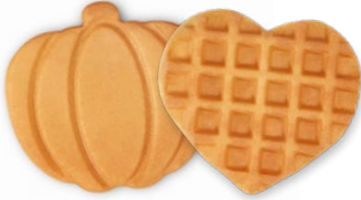

3-4 TBSP



REMOVING YOUR PLATES

To remove them, press the corresponding Release Tabs inside the Handle [there's one at the bottom (**photo A**) and one at the top (**photo B**).]



CAUTION: Always lift and lower from the right side using the Cover Handle to avoid hitting the Release Tab.