



*recipes
inside!*



#DWSM200

WAFFLE STICK MAKER

Instruction Manual | Recipe Guide





WAFFLE STICK MAKER

- Important Safeguards..... 4-9
- Parts & Features..... 10
- Using Your Waffle Stick Maker..... 11-14
- Cleaning & Maintenance 15
- Troubleshooting..... 16-17
- Recipes..... 19-29
- Customer Support..... 30
- Warranty..... 31

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

When using electrical appliances, basic safety precautions should be followed, including:

- Read all instructions.
- Remove all bags and packaging from appliance before use.
- Never leave appliance unattended when in use.
- Make sure the appliance is cleaned thoroughly before using.
- Do not use appliance for other than intended use. For household use only. Do not use outdoors.
- Warning: Hot surfaces! Never touch the Cooking Surface or Cover while appliance is in use. Always lift and lower the Cover by the Cover Handle.
- DO NOT lift the Cover so that your arm is over the Cooking Surface as it is hot and may cause injury. Lift from the side.
- To prevent the risk of fire, electric shock, or personal injury, do not put cord, plug, or appliance in or near water or other liquids.
- The Waffle Stick Maker is NOT dishwasher safe.
- Never use abrasive cleaning agents to clean your appliance as this may damage the Waffle Stick Maker and its nonstick Cooking Surface.
- Do not operate this appliance with a damaged cord, damaged plug, after the appliance malfunctions, is dropped, or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- DO NOT use the Waffle Stick Maker near water or other liquids, with wet hands, or while standing on a wet surface.
- For maintenance other than cleaning, please contact StoreBound directly at 1-800-898-6970 from 9AM - 9PM EST Monday - Friday or by email at support@bydash.com.

- Do not use metal utensils on the Cooking Surface as this will damage the nonstick surface.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience of knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- This appliance is not a toy. Do not let children use this appliance. Close supervision is necessary when any kitchen appliance is used by or near children.
- Do not place appliance on or near a hot gas burner, hot electric burner, or in a heated oven.
- Be cautious when moving an appliance containing hot oils or other hot liquids.
- Refrain from using attachments that are not recommended by the appliance manufacturer, as this may result in fire, electric shock, or personal injury.
- Allow Waffle Stick Maker to cool completely before moving, cleaning, or storing.
- Do not let the cord touch hot surfaces or hang over the edge of tables or counters.
- Always be sure to unplug the appliance from outlet prior to moving, cleaning, storage, and when not in use.
- StoreBound shall not accept liability for damages caused by improper use of the appliance.
- Improper use of the Waffle Stick Maker can result in property damage or even in personal injury.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not completely fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- A short power supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. An extension cord may be used if care is exercised in its use. If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the

appliance. If the appliance is of the grounded type, the extension cord should be a grounding 3-wire cord. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

GARANTIES IMPORTANTES: VEUILLEZ LIRE ET CONSERVER CE MODE D'EMPLOI ET D'ENTRETIEN

L'utilisation d'appareils électriques nécessite de prendre des mesures de sécurité de base, y compris:

- Lisez toutes les instructions.
- Retirez tous les sacs et emballages de l'appareil avant utilisation.
- Ne laissez jamais l'appareil sans surveillance lorsqu'il est en cours d'utilisation.
- Assurez-vous que l'appareil est soigneusement nettoyé avant de l'utiliser.
- N'utilisez pas l'appareil à d'autres fins que celles pour lesquelles il a été conçu. Pour usage domestique uniquement. Ne l'utilisez pas à l'extérieur.
- Attention: surfaces chaudes! Ne touchez jamais la surface de cuisson ou le couvercle lorsque l'appareil est en cours d'utilisation. Soulevez et abaissez toujours le couvercle par la poignée du couvercle.
- NE soulevez PAS le couvercle de sorte que votre bras soit au-dessus de la surface de cuisson car il est chaud et peut causer des blessures. Soulevez par le côté.
- Pour éviter tout risque d'incendie, d'électrocution ou de blessure, ne placez pas le cordon, la fiche ou l'appareil dans ou à proximité de l'eau ou d'autres liquides. Le gaufrier ne va PAS au lave-vaisselle.
- N'utilisez jamais d'agents de nettoyage abrasifs pour nettoyer votre appareil car cela pourrait endommager le gaufrier et sa surface de cuisson antiadhésive.
- N'utilisez pas cet appareil avec un cordon endommagé, une fiche endommagée, après un dysfonctionnement de l'appareil, est tombé ou est endommagé de quelque manière que ce soit. Renvoyez l'appareil au centre de service autorisé le plus proche pour examen, réparation ou réglage.

GARANTIES IMPORTANTES

- NE PAS utiliser le gaufrier à proximité de l'eau ou d'autres liquides, avec les mains mouillées ou en se tenant debout sur une surface mouillée.
- Pour toute question liée à l'entretien autre que le nettoyage, veuillez contacter StoreBound directement au 1-800-898-6970 de 9h à 21h HNE du lundi au vendredi, ou par courriel à support@bydash.com.
- N'utilisez pas d'ustensiles en métal sur la surface de cuisson car cela endommagerait la surface antiadhésive.
- Cet appareil peut être utilisé par des personnes dont les capacités physiques, sensorielles ou mentales sont réduites ou qui manquent d'expérience et de connaissances, à condition qu'elles aient reçu une supervision ou des instructions concernant l'utilisation de l'appareil en toute sécurité et qu'elles comprennent les risques encourus.
- L'appareil n'est pas un jouet. Ne laissez pas d'enfants utiliser cet appareil. Une étroite surveillance est nécessaire lorsqu'un appareil est utilisé par ou à proximité d'enfants.
- Ne placez pas l'appareil sur ou à proximité d'un brûleur à gaz chaud, d'un brûleur électrique chaud ou dans un four chauffé.
- Soyez prudent lorsque vous déplacez un appareil contenant des huiles chaudes ou d'autres liquides chauds.
- Évitez d'utiliser des accessoires non recommandés par le fabricant de l'appareil, car cela pourrait entraîner un incendie, un choc électrique ou des blessures.
- Laissez le gaufrier refroidir complètement avant de le déplacer, de le nettoyer ou de le ranger.
- Une surveillance étroite est nécessaire lorsqu'un appareil est utilisé par ou à proximité d'enfants.
- Ne laissez pas le cordon toucher des surfaces chaudes ou pendre sur le bord de tables ou de compteurs.
- Assurez-vous toujours de débrancher l'appareil de la prise de courant avant de le déplacer, le nettoyer, le ranger et lorsqu'il n'est pas utilisé.
- StoreBound décline toute responsabilité pour les dommages causés par une

GARANTIES IMPORTANTES

- mauvaise utilisation de l'appareil.
- Une mauvaise utilisation du gaufrier peut entraîner des dommages matériels ou même des blessures corporelles.
- Cet appareil est doté d'une fiche polarisée (une broche est plus large que l'autre). Pour réduire le risque de choc électrique, cette fiche ne s'insère dans une prise polarisée que dans un seul sens. Si la fiche ne rentre pas complètement dans la prise, inversez la fiche. S'il ne rentre toujours pas, contactez un électricien qualifié. N'essayez pas de modifier le plug-in en tous cas.
- Un cordon d'alimentation court doit être fourni pour réduire le risque de s'emmêler ou de trébucher sur un cordon plus long. Une rallonge peut être utilisée si vous faites attention à son utilisation. Si une rallonge est utilisée, la puissance électrique indiquée de la rallonge doit être au moins aussi élevée que la puissance électrique de l'appareil. Si l'appareil est de type mis à la terre, la rallonge doit être un cordon de mise à la terre à 3 fils. La rallonge doit être disposée de manière à ne pas tomber sur le comptoir ou la table où elle pourrait être tirée par des enfants ou trébucher involontairement.

GARANTIES IMPORTANTES:
VEUILLEZ LIRE ET CONSERVER CE
MODE D'EMPLOI ET D'ENTRETIEN



Before first use, remove all packaging material and thoroughly clean your Waffle Stick Maker.



Never touch the Cooking Surface or Cover while appliance is in use.



DO NOT lift the Cover so that your arm is over the Cooking Surface as it is hot and may cause injury.



Always lift and lower the Cover by the Cover Handle. Lift from the side.

USING YOUR WAFFLE STICK MAKER



- 1** Place the appliance on a stable and dry surface. Plug the cord into a power outlet. The Indicator Light (**photo A**) will illuminate, signaling that the Waffle Stick Maker is heating up.
- 2** Once the Cooking Surface reaches the optimal cooking temperature, the Indicator Light will automatically shut off. Now, you're ready to get cooking (**photo B**)!



- 3** Carefully lift the Cover by the Cover Handle and spray both Cooking Surfaces with a small amount of cooking spray (**photo C**).
- 4** Place or pour about ¼ cup or 4 tablespoons of batter onto the Cooking Surface (**photo D**) and close the Cover.






- 5** Once waffle is cooked to your preference, carefully remove it from the Cooking Surface with a heat-resistant nylon, wood, or silicone cooking utensil (photo E).

NOTE: Do not use metal utensils to remove or place food on the Cooking Surface as this will damage the nonstick surface.

- 6** When you have finished cooking, unplug your Waffle Stick Maker and allow it to cool before moving or cleaning.
- 7** To separate waffle sticks, break apart with hands. It may help to use protective gloves as waffles will be hot (photo F).

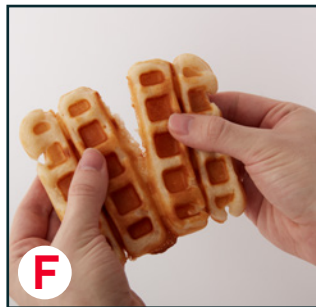

Always allow the appliance to cool completely before moving, cleaning, or storing. Do not submerge appliance in water or any other liquids. Never use abrasive cleaning agents to clean your appliance as this may damage the Waffle Stick Maker.

In order to keep your Waffle Stick Maker in pristine working order, thoroughly clean the appliance after each use. This will prevent the build-up of food or oil.

- Unplug Waffle Stick Maker and allow it to cool completely.
- Using a damp, soapy cloth, wipe down the Cooking Surface and Cover. Thoroughly rinse the cloth and wipe again.
- Thoroughly dry Waffle Stick Maker before storing.
- If there is food burned onto the Cooking Surface, pour on a little cooking oil and let sit for 5 to 10 minutes. Scrub the Cooking Surface with a sponge or soft bristled brush to dislodge food. Use a damp, soapy cloth to wipe down the Cooking Surface. Thoroughly rinse the cloth and wipe again. If any food remains, pour on cooking oil and let sit for a few hours, then scrub and wipe clean.
- Never use abrasive cleaning agents to clean your appliance as this may damage the Waffle Stick Maker and its nonstick Cooking Surface.

TROUBLESHOOTING

While Dash products are durable, you may encounter one or more of the problems listed below. If the issue is either not solved by the solutions recommended below or not included on this page, please contact our Customer Support Team at 1-800-898-6970 or support@bydash.com.

ISSUE	SOLUTION
The light on the Waffle Stick Maker keeps shutting off.	This is normal. During the cooking process, the heating element will automatically turn on and off to regulate the temperature and ensure that the Cooking Surface does not get too hot or cold. When this occurs, the Indicator Light turns on and off.
How do I know when the Waffle Stick Maker is heated and ready to use?	When the Waffle Stick Maker reaches the optimal temperature, the Indicator Light shuts off and that means you're ready to get cooking!
There is no On/Off Button. How do I turn the Waffle Stick Maker off and on?	To turn on, simply plug in the power cord. When you're done cooking, turn off the Waffle Stick Maker by unplugging it.

TROUBLESHOOTING

ISSUE	SOLUTION
When using my Waffle Stick Maker, the Cover gets very hot. Is this normal?	Yes, this is completely normal. When using your Waffle Stick Maker, always lift and lower the Cover by the Cover Handle. To prevent personal injury, DO NOT lift the Cover so that your arm is over the Cooking Surface as it is hot and may cause injury. Lift from the side.
After using my Waffle Stick Maker a few times, food is starting to stick to the surface. What is happening?	There is probably a build-up of burnt food residue on the Cooking Surface. This is normal, especially when cooking with sugar. Allow the appliance to cool fully, pour on a little cooking oil and let sit for 5-10 minutes. Scrub Surface with a sponge or soft bristled brush to dislodge food. Use a damp, soapy cloth to wipe down the Cooking Surface. Rinse the cloth and wipe again. If food remains, pour on cooking oil and let sit for a few hours, then scrub and wipe clean.
The Indicator Light will not turn on and the Cooking Surface is failing to heat.	<ol style="list-style-type: none">1. Ensure that the power cord is plugged into the power outlet.2. Check to make sure the power outlet is operating correctly.3. Determine if a power failure has occurred in your home, apartment or building.



RECIPE GUIDE



Follow us!

@bydash | recipes, videos, & inspiration

@unprocessyourfood | veg & vegan-friendly meals



CLASSIC WAFFLE STICKS

Ingredients:

- 1 cup flour
- 1 tbsp sugar
- 2 tsp baking powder
- ¼ tsp salt
- 1 egg
- 1 cup milk
- 2 tbsp melted butter or vegetable oil

Directions:

1. In a medium bowl, sift the flour, sugar, baking powder, and salt. Whisk the egg, milk, and melted butter in a separate bowl. Add the wet ingredients to the dry and mix until just incorporated.
2. Grease the Waffle Stick Maker with butter or coat with a light coat of cooking spray. Pour ¼ cup of the batter into the Waffle Stick Maker and cook until golden brown. Repeat with the remaining batter.
3. Serve with a drizzle of maple syrup and fresh berries.





OMELETTE CHAFFLE STICKS

Ingredients:

3 large eggs, beaten
½ onion, diced
½ pepper, diced
6 oz ham
3 tbsp Swiss cheese, grated

Directions:

1. Whisk together beaten eggs, diced onion, diced pepper and grated Swiss cheese.
2. Pour ¼ of the egg mixture into your Waffle Stick Maker.
3. Add 2 oz of diced ham and cook for approximately 5 mins. Repeat with remaining mixture.



PALEO WAFFLE STICKS

Ingredients:

2 large eggs
½ banana, mashed
¾ tsp maple syrup
½ tsp vanilla extract
½ tsp baking powder
¼ cup almond flour
1 ½ tbsp coconut flour
Pinch of salt

Directions:

1. Mix together eggs, banana, vanilla extract and maple syrup in a small bowl.
2. Whisk together dry ingredients in a separate bowl. Add the wet ingredients to the dry and mix until just incorporated.
3. Add ¼ cup of batter to your Waffle Stick Maker and cook until golden brown on both sides.



BANANA BREAD WAFFLE STICKS

Ingredients:

1 ½ cups all-purpose flour	¾ cup buttermilk
1 tsp baking powder	¼ cup light brown sugar
¼ tsp baking soda	2 large eggs
¼ tsp kosher salt	3 tbsp canola oil
1 cup mashed bananas (roughly 2 bananas)	

Directions:

1. Whisk together flour, baking powder, baking soda and salt in a medium bowl.
2. Mash bananas with a fork or place in stand mixer with paddle attachment until no large chunks remain. Add buttermilk, brown sugar, eggs and oil. Whisk until well-combined. Add dry ingredients and mix until no clumps remain.
3. Add ¼ cup of batter to your Waffle Stick Maker and cook until golden brown on both sides. Serve with additional bananas, honey and powdered sugar, if desired.





BROWNIE WAFFLE STICKS

Ingredients:

6 tbsp bittersweet chocolate
2 tbsp unsweetened chocolate
¾ stick unsalted butter
¾ cup sugar
1 tsp vanilla extract
2 large eggs
½ tsp salt
½ cup all-purpose flour
½ cup mini chocolate chips

Directions:

1. Melt chocolate and butter and mix together until smooth. In a medium bowl, whisk together eggs, sugar and vanilla extract.
2. Add egg mixture to chocolate and mix until no clumps remain. Stir in salt and flour until just combined. Fold in chocolate chips.
3. Add ¼ cup of batter to your Mini Waffle Maker and cook.

Toppings

Chopped walnuts
Shredded coconut



MORE RECIPE IDEAS

RECIPE IDEA	INGREDIENTS	COOKING TIME
Protein Waffle	Classic Waffle Recipe (pg 20) 1 scoop protein powder	4-6 min
Cornbread Waffle	¼ cup cornbread batter	6-8 min
Mashed Potato Bite	3 tbsp mashed potatoes	5 min
S'more Biscuit	1 refrigerated biscuit dough, sliced lengthwise 2 squares milk chocolate 5 mini marshmallows	5-7 min
Grilled Cheese	2 slices white or wheat bread, buttered 2 slices American Cheese	5 min
Chocolate Chip Cookie	2 tbsp cookie dough	5-7 min

OVER 80
Brilliant
**WAFFLE
RECIPES**

for your Dash Mini Waffle Maker...




available now
in our
**SWEET
NEW
COOKBOOK**

find more creative recipes at bydash.com!

FEEL GOOD GUARANTEE™

Dash values quality and workmanship and stands behind this product with our Feel Good Guarantee™. To learn more about our commitment to quality, visit bydash.com/feelgood.

Our customer support teams in the US and Canada are at your service Monday - Friday during the times below. Contact us at **1 (800) 898-6970** or support@bydash.com

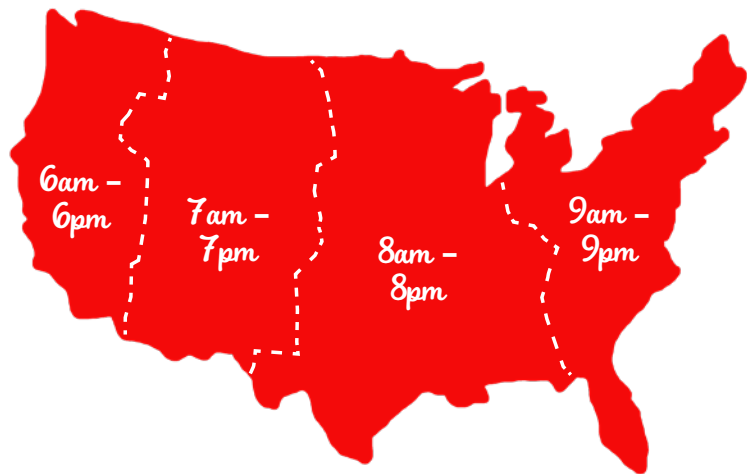

Hey **Hawaii!** You can reach our customer service team from **3AM to 3PM**. And also, **Alaska**, feel free to reach out from **5AM to 5PM**.

STOREBOUND, LLC - 1 YEAR LIMITED WARRANTY

Your StoreBound product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, StoreBound, LLC will repair or replace the defective part. To process a warranty claim, contact Customer Support at 1-800-898-6970 for further assistance and instruction. A Customer Support agent will assist you by troubleshooting minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating the date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. We are unable to ship returns to a PO box. StoreBound will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

Send all inquiries to support@bydash.com. There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. STOREBOUND SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

REPAIRS

DANGER! Risk of electric shock! The Dash Waffle Stick Maker is an electrical appliance. Do not attempt to repair the appliance yourself under any circumstances. Contact Customer Support regarding repairs to the appliance.

TECHNICAL SPECIFICATIONS

Voltage 120V ~ 60Hz
 Power Rating 420W
 Stock#: DWSM200_20220823_V5



1-800-898-6970 | @bydash | bydash.com